IEI Technology Corp.

PICOe-9452

Socket 479 Intel® Core™2 Duo Half-size CPU Card

DDR2, SATA II, Dual PCIe GbE, PCIe Expansion

User Manual

Rev.1.12, April, 2008

RoHS Lead Free

Rvision

Date	Version	Changes
2007-10-16	1.12	Removed all RAID functionality from the manual Added “Appendix A: Terminology”
2007-10-16	1.11	Correct CF Card Setup jumper specifications from v1.10 (J_CF1)
2007-04-02	1.10	Added JP1, PCIe Interface Setup jumper (modified v1.0)
2007-10-16	1. 01	Correct CF Card Setup jumper specifications from v1.0 (J_CF1)
2007-04-02	1.0	Initially released as PICOe-9452_UMN_v1.0

Copyright

COPYRIGHT NOTICE

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

TRADEMARKS

All registered trademarks are the property of the registered trademark holder. All product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Manual Conventions

WARNING!

Warnings appear where overlooked details may cause damage to the equipment or result in personal injury. Warnings should be taken seriously. Warnings are easy to recognize. The word “warning” is written as “**WARNING**,” both capitalized and bold and is followed by text. The text is the warning message. A warning message is shown below:

WARNING:

This is an example of a warning message. Failure to adhere to warning messages may result in permanent damage to the PICOe-9452 or personal injury to the user. Please take warning messages seriously.

CAUTION!

Cautionary messages should also be heeded to help reduce the chance of losing data or damaging the PICOe-9452. Cautions are easy to recognize. The word “caution” is written as “**CAUTION**,” both capitalized and bold and is followed. The italicized text is the cautionary message. A caution message is shown below:

CAUTION:

This is an example of a caution message. Failure to adhere to cautions messages may result in permanent damage to the PICOe-9452. Please take caution messages seriously.

NOTE:

These messages inform the reader of essential but non-critical information. These messages should be read carefully as any directions or instructions contained therein can help avoid making mistakes. Notes are easy to recognize. The word “note” is written as “**NOTE**,” both capitalized and bold and is followed by text. The text is the cautionary message. A note message is shown below:

NOTE:

This is an example of a note message. Notes should always be read. Notes contain critical information about the PICOe-9452. Please take note messages seriously.

Packing List

NOTE:

If any of the components listed in the checklist below are missing, please do not proceed with the installation. Contact the IEI reseller or vendor you purchased the PICOe-9452 from or contact an IEI sales representative directly. To contact an IEI sales representative, please send an email to sales@iei.com.tw.

The items listed below should all be included in the PICOe-9452 package.

- 1 x PICOe-9452 single board computer
- 1 x IDE cable
- 1 KB/MS PS/2 Y-cable
- 1 x SATA power cable
- 2 x SATA cables
- 1 x Dual RS-232 cable
- 1 x Dual USB cable
- 1 x Mini jumper pack
- 1 x Utility CD
- 1 x QIG (quick installation guide)

Images of the above items are shown in **Chapter 3**.

Table of Contents

1 INTRODUCTION 1

1.1 INTRODUCTION 2

1.1.1 PICOe-9452 Benefits 2

1.1.2 PICOe-9452 Features 2

1.2 PICOE-9452 OVERVIEW 3

1.2.1 PICOe-9452 Overview Photo 3

1.2.2 PICOe-9452 Peripheral Connectors and Jumpers 4

1.2.3 Technical Specifications 5

2 DETAILED SPECIFICATIONS 9

2.1 OVERVIEW 10

2.2 DIMENSIONS 10

2.2.1 Board Dimensions 10

2.2.2 External Interface Panel Dimensions 11

2.3 DATA FLOW 11

2.4 COMPATIBLE PROCESSORS 13

2.4.1 Compatible Processor Overview 13

2.4.2 Supported Processors 13

2.5 INTEL® 945GM NORTHBRIDGE CHIPSET 14

2.5.1 Intel® 945GM Overview 14

2.5.2 Intel® 945GM Memory Support 15

2.5.3 Intel® 945GM PCIe x1 Bus: PCIe GbE Ethernet Controller 16

2.5.4 Intel® 945GM Integrated Graphics 16

2.5.4.1 Intel® 945GM Analog CRT Support 16

2.5.4.2 Intel® 945GM LVDS Support 17

2.5.4.3 Intel® 945GM TV Out Support 17

2.5.5 Intel® 945GM Direct Media Interface (DMI) 17

2.6 INTEL® ICH7-M SOUTHBRIDGE CHIPSET 18

2.6.1 Intel® ICH7-M Overview 18

2.6.2 Intel® ICH7-M Audio Codec '97 Controller 18

2.6.3 Intel® ICH7-M Ethernet Connection 19

2.6.4 Intel® ICH7-M IDE Interface *19*
2.6.5 Intel® ICH7-M Low Pin Count (LPC) Interface *20*
2.6.6 Intel® ICH7-M PCI Interface *20*
2.6.7 Intel® ICH7-M PCIe x4 Bus *21*
2.6.8 Intel® ICH7-M Real Time Clock *22*
2.6.9 Intel® ICH7-M SATA Controller *22*
2.6.10 Intel® ICH7-M USB Controller *22*
2.7 LPC BUS COMPONENTS 23
2.7.1 LPC Bus Overview *23*
2.7.2 BIOS Chipset *24*
2.7.3 Super I/O chipset *24*
2.7.3.1 Super I/O LPC Interface 25
2.7.3.2 Super I/O 16C550 UARTs 25
2.7.3.3 Super I/O Enhanced Hardware Monitor 25
2.7.3.4 Super I/O Fan Speed Controller 26
2.7.3.5 Super I/O Parallel Port 26
2.7.3.6 Super I/O Keyboard/Mouse Controller 26
2.8 ETHERNET LAN CONTROLLERS 26
2.8.1 Ethernet LAN Controllers Overview *26*
2.8.2 Intel® PC82573V PCIe GbE Ethernet Controller *27*
2.8.2.1 Intel® PC82573V Overview 27
2.8.3 Intel® EP82562ET PCIe GbE Ethernet Controller *28*
2.8.3.1 Intel® EP82562ET Overview 28
2.8.3.2 Intel® EP82562ET Ethernet Controller 28
2.9 ENVIRONMENTAL AND POWER SPECIFICATIONS 28
2.9.1 System Monitoring *28*
2.9.2 Operating Temperature and Temperature Control *30*
2.9.3 Power Consumption *30*
2.10 EXPANSION OPTIONS 30
2.10.1 Expansion Options Overview *30*
2.10.2 IEI Expansion PICOe Backplanes *30*
2.10.3 IEI Chassis *31*

3 UNPACKING 33

3.1 ANTI-STATIC PRECAUTIONS 34

3.2 UNPACKING 34
3.2.1 Unpacking Precautions *34*
3.3 UNPACKING CHECKLIST 35
3.3.1 Package Contents *35*
3.3.2 Optional Items *37*

4 CONNECTOR PINOUTS 39

4.1 PERIPHERAL INTERFACE CONNECTORS 40
4.1.1 PICOe-9452 Layout *40*
4.1.2 Peripheral Interface Connectors *41*
4.1.3 External Interface Panel Connectors *42*
4.2 INTERNAL PERIPHERAL CONNECTORS 43
4.2.1 +12V ATX Power Supply Connector *43*
4.2.2 Audio Connector (9-pin) *44*
4.2.3 Backlight Inverter Connector *45*
4.2.4 Backplane to Mainboard Connector *46*
4.2.5 Compact Flash Socket *47*
4.2.6 Digital Input/Output (DIO) Connector *50*
4.2.7 Fan Connector (+12V) *51*
4.2.8 Front Panel Connector (8-pin) *52*
4.2.9 IDE Connector (44-pin) *54*
4.2.10 Infrared Interface Connector (5-pin) *56*
4.2.11 Keyboard/Mouse Connector *57*
4.2.12 LVDS LCD Connector *58*
4.2.13 Parallel Port Connector *60*
4.2.14 SATA Drive Connectors *61*
4.2.15 Serial Port Connector (COM1 and COM2) *63*
4.2.16 USB Connectors (Internal) *64*
4.3 EXTERNAL PERIPHERAL INTERFACE CONNECTOR PANEL 66
4.3.1 LAN Connectors *66*
4.3.2 TV Connector *67*
4.3.3 USB Connector *68*
4.3.4 VGA Connector *68*

5 INSTALLATION 71

5.1 ANTI-STATIC PRECAUTIONS 72
5.2 INSTALLATION CONSIDERATIONS 73
5.2.1 Installation Notices *73*
5.2.2 Installation Checklist *74*
5.3 CPU, CPU COOLING KIT AND DIMM INSTALLATION 75
5.3.1 Socket M CPU Installation *75*
5.3.2 Cooling Kit CF-479B-RS Installation *78*
5.3.3 DIMM Installation *80*
5.3.4 CF Card Installation *81*
5.4 JUMPER SETTINGS 82
5.4.1 CF Card Setup *83*
5.4.2 Clear CMOS Jumper *84*
5.4.3 LVDS Voltage Selection *86*
5.4.4 PCIe Interface Setup *87*
5.5 CHASSIS INSTALLATION 88
5.5.1 Airflow *88*
5.6 INTERNAL PERIPHERAL DEVICE CONNECTIONS 89
5.6.1 Peripheral Device Cables *89*
5.6.2 IDE Cable Connection *90*
5.6.3 5.1 Channel Audio Kit Installation *91*
5.6.4 7.1 Channel Audio Kit Installation *92*
5.6.5 Keyboard and Mouse PS/2 Cable with Bracket *94*
5.6.6 Parallel Port Cable without Bracket *96*
5.6.7 Dual RS-232 Cable with Slot Bracket *98*
5.6.8 SATA Drive Connection *99*
5.6.9 USB Cable (Dual Port) with Slot Bracket *100*
5.7 EXTERNAL PERIPHERAL INTERFACE CONNECTION 102
5.7.1 LAN Connection (Single Connector) *102*
5.7.2 S-video Cable Connection *103*
5.7.3 USB Device Connection (Single Connector) *104*
5.7.4 VGA Monitor Connection *105*

6 AMI BIOS 107

6.1 INTRODUCTION 108
6.1.1 Starting Setup *108*

6.1.2 Using Setup *108*
6.1.3 Getting Help *109*
6.1.4 Unable to Reboot After Configuration Changes *109*
6.1.5 BIOS Menu Bar *109*
6.2 MAIN 110
6.3 ADVANCED 111
6.3.1 CPU Configuration *112*
6.3.2 IDE Configuration *114*
6.3.2.1 IDE Master, IDE Slave 115
6.3.3 Super IO Configuration *121*
6.3.4 Hardware Health Configuration *124*
6.3.5 ACPI Configuration *130*
6.3.5.1 General ACPI Configuration 131
6.3.6 APM Configuration *132*
6.3.7 MPS Configuration *135*
6.3.8 Remote Access Configuration *136*
6.3.9 USB Configuration *140*
6.4 PCI/PNP 143
6.5 BOOT 150
6.5.1 Boot Settings Configuration *150*
6.5.2 Boot Device Priority *153*
6.5.3 Hard Disk Drives *155*
6.6 SECURITY 157
6.7 CHIPSET 158
6.7.1 NorthBridge Configuration *159*
6.7.1.1 Video Function Configuration 165
6.7.2 SouthBridge Chipset Configuration *167*
6.8 EXIT 169

7 DRIVER INSTALLATION 171

7.1 AVAILABLE SOFTWARE DRIVERS 172
7.2 DRIVER CD AUTO-RUN 172
7.3 CHIPSET DRIVER INSTALLATION 174
7.4 INTEL GRAPHICS MEDIA ACCELERATOR DRIVER 179
7.5 BROADCOM LAN DRIVER (FOR GBE LAN) INSTALLATION 185

7.6 REALTEK HD AUDIO DRIVER (ALC883) INSTALLATION 191
7.6.1 BIOS Setup *191*
7.6.2 Driver Installation *191*
7.7 REALTEK AC`97 AUDIO DRIVER (ALC665) INSTALLATION 195
7.7.1 BIOS Setup *195*
7.7.2 Driver Installation *195*

A TERMINOLOGY 203

B BIOS OPTIONS 209

C DIO INTERFACE 213

C.1 DIO INTERFACE INTRODUCTION 214
C.2 DIO CONNECTOR PINOUTS 214
C.3 ASSEMBLY LANGUAGE SAMPLES 215
C.3.1 Enable the DIO Input Function *215*
C.3.2 Enable the DIO Output Function *215*

D WATCHDOG TIMER 217

E ADDRESS MAPPING 221

E.1 ADDRESS MAP 222
E.2 1ST MB MEMORY ADDRESS MAP 222
E.3 IRQ MAPPING TABLE 223
E.4 DMA CHANNEL ASSIGNMENTS 223

F HAZARDOUS MATERIALS DISCLOSURE 225

F.1 HAZARDOUS MATERIAL DISCLOSURE TABLE FOR IPB PRODUCTS CERTIFIED AS ROHS COMPLIANT UNDER 2002/95/EC WITHOUT MERCURY 226

G INDEX 229

List of Figures

Figure 1-1: PICOe-9452 Overview [Front View] 3
Figure 1-2: PICOe-9452 Overview [Rear View] 4
Figure 2-1: PICOe-9452 Dimensions (mm) 10
Figure 2-2: External Interface Panel Dimensions (mm) 11
Figure 2-3: Data Flow Block Diagram 12
Figure 2-4: 240-pin DDR2 DIMM Sockets 15
Figure 2-5: PCIe GbE LAN Chipset and Connector 16
Figure 2-6: 10Mbps or 100Mbps LAN Controller Chipset and Connector 19
Figure 2-7: PCI Golden finger 21
Figure 2-8: PCIe x4 Golden finger 21
Figure 2-9: Onboard USB Implementation 23
Figure 2-10: LPC Bus Components 24
Figure 4-1: Connector and Jumper Locations 40
Figure 4-2: Connector and Jumper Locations (Solder Side) 41
Figure 4-3: +12V ATX Power Connector Location 43
Figure 4-4: Audio Connector Pinouts (10-pin) 44
Figure 4-5: Panel Backlight Connector Pinout Locations 45
Figure 4-6: Backplane to Mainboard Connector Location 47
Figure 4-7: CF Card Socket Location 48
Figure 4-8: DIO Connector Connector Locations 50
Figure 4-9: +12V Fan Connector Location 52
Figure 4-10: Front Panel Connector Pinout Locations 53
Figure 4-11: IDE Device Connector Locations 55
Figure 4-12: Infrared Connector Pinout Locations 56
Figure 4-13: Keyboard/Mouse Connector Location 57
Figure 4-14: LVDS LCD Connector Pinout Locations 59
Figure 4-15: Parallel Port Connector Location 60
Figure 4-16: SATA Drive Connector Locations 62
Figure 4-17: COM1 and COM2 Connector Pinout Locations 63
Figure 4-18: USB Connector Pinout Locations 65
Figure 4-19: PICOe-9452 External Peripheral Interface Connector 66

Figure 4-20: RJ-45 Ethernet Connector 67
Figure 4-21: VGA Connector 69
Figure 5-1: Make sure the CPU socket retention screw is unlocked 76
Figure 5-2: Lock the CPU Socket Retention Screw 77
Figure 5-3: IEI CF-479B-RS Cooling Kit 78
Figure 5-4: Cooling Kit Support Bracket 79
Figure 5-5: Connect the cooling fan cable 79
Figure 5-6: Installing a DIMM 80
Figure 5-7: CF Card Installation 82
Figure 5-8: Jumper Locations 82
Figure 5-9: CF Card Setup Jumper Location 84
Figure 5-10: Clear CMOS Jumper 85
Figure 5-11: LVDS Voltage Selection Jumper Pinout Locations 87
Figure 5-12: PCIe Interface Select Jumper Pinout Locations 88
Figure 5-13: IDE Cable Connection 90
Figure 5-14: 5.1 Channel Audio Kit 92
Figure 5-15: 5.1 Channel Audio Kit 93
Figure 5-16: Keyboard and Mouse PS/2 Cable with Bracket 95
Figure 5-17: PS/2 Connector 96
Figure 5-18: LPT Cable Connection 97
Figure 5-19: Connect the LPT Device 98
Figure 5-20: Dual RS-232 Cable Installation 98
Figure 5-21: SATA Drive Cable Connection 99
Figure 5-22: SATA Power Drive Connection 100
Figure 5-23: Dual USB Cable Connection 101
Figure 5-24: LAN Connection 103
Figure 5-25: S-video Cable Connector 104
Figure 5-26: USB Device Connection 105
Figure 5-27: VGA Connector 106
Figure 6-1: Video Function Configuration 165
Figure 7-1: Introduction Screen 173
Figure 7-2: Available Drivers 174
Figure 7-3: Chipset Driver Installation Program 175
Figure 7-4: Chipset Driver Installation Welcome Screen 176
Figure 7-5: Chipset Driver Installation License Agreement 177

Figure 7-6: Chipset Driver Readme File Information 178
Figure 7-7: Chipset Driver Installation Complete 179
Figure 7-8: Select the Operating System 180
Figure 7-9: VGA Driver 181
Figure 7-10: GMA Driver Readme File 182
Figure 7-11: GMA Driver File Extraction 182
Figure 7-12: GMA Driver Installation Welcome Screen 183
Figure 7-13: GMA Driver License Agreement 184
Figure 7-14: GMA Driver Installing Notice 184
Figure 7-15: GMA Driver Installation Complete 185
Figure 7-16: Access Windows Control Panel 186
Figure 7-17: Double Click the System Icon 187
Figure 7-18: Double Click the Device Manager Tab 187
Figure 7-19: Device Manager List 188
Figure 7-20: Search for Suitable Driver 189
Figure 7-21: Locate Driver Files 190
Figure 7-22: Location Browsing Window 190
Figure 7-23: 4-AUDIO\AC-KIT883HD\Windows Folder 191
Figure 7-24: HD Audio Driver Setup Extracting Files 192
Figure 7-25: HD Audio Driver Setup Welcome Screen 193
Figure 7-26: HD Audio Driver Installation Complete 194
Figure 7-27: CD 4-AUDIO\AC-KIT08R\Windows Folder 196
Figure 7-28: AC`97 Audio Driver Install Shield Wizard Starting 196
Figure 7-29: AC`97 Audio Driver Setup Preparation 197
Figure 7-30: AC`97 Audio Driver Welcome Screen 198
Figure 7-31: AC`97 Audio Driver Software Configuration 199
Figure 7-32: AC`97 Audio Driver Digital Signal 200
Figure 7-33: AC`97 Audio Driver Installation Begins 201
Figure 7-34: AC`97 Audio Driver Installation Complete 202

List of Tables

Table 1-1: Technical Specifications 7
Table 2-1: Processor Features 13
Table 2-2: Supported Processors 14
Table 2-3: Supported HDD Specifications 20
Table 2-4: Power Consumption 30
Table 2-5: Compatible IEI PICOe Backplanes 31
Table 2-6: Compatible IEI Chassis 32
Table 3-1: Package List Contents 36
Table 3-2: Optional Items 37
Table 4-1: Peripheral Interface Connectors 42
Table 4-2: Rear Panel Connectors 42
Table 4-3: +12V ATX Power Connector Pinouts 44
Table 4-4: Audio Connector Pinouts (10-pin) 45
Table 4-5: Panel Backlight Connector Pinouts 46
Table 4-6: Backplane to Mainboard Connector Pinouts 47
Table 4-7: CF Card Socket Pinouts 49
Table 4-8: DIO Connector Connector Pinouts 51
Table 4-9: +12V Fan Connector Pinouts 52
Table 4-10: Front Panel Connector Pinouts 53
Table 4-11: IDE Connector Pinouts 56
Table 4-12: Infrared Connector Pinouts 57
Table 4-13: Keyboard/Mouse Connector Pinouts 58
Table 4-14: LVDS LCD Port Connector Pinouts 60
Table 4-15: Parallel Port Connector Pinouts 61
Table 4-16: SATA Drive Connector Pinouts 62
Table 4-17: COM3 and COM4 64
Table 4-18: USB Port Connector Pinouts 65
Table 4-19: LAN Pinouts 66
Table 4-20: RJ-45 Ethernet Connector LEDs 67
Table 4-21: TV1 Pinouts 68

Table 4-22: USB Port Pinouts 68
Table 4-23: VGA Connector Pinouts 69
Table 5-1: Jumpers 83
Table 5-2: CF Card Setup Jumper Settings 83
Table 5-3: Clear CMOS Jumper Settings 85
Table 5-4: LVDS Voltage Selection Jumper Settings 86
Table 5-5: PCIe Interface Select Jumper Settings 87
Table 5-6: IEI Provided Cables 89
Table 6-1: BIOS Navigation Keys 109

BIOS Menus

Menu 1: Main 110
Menu 2: Advanced 112
Menu 3: CPU Configuration 113
Menu 4: IDE Configuration 114
Menu 5: IDE Master and IDE Slave Configuration 116
Menu 6: Super IO Configuration 121
Menu 7: Hardware Health Configuration 125
Menu 8: ACPI Configuration 130
Menu 9: General ACPI Configuration [Advanced\ ACPI Configuration] 131
Menu 10:Advanced Power Management Configuration 133
Menu 11: MPS Configuration 136
Menu 12: Remote Access Configuration [Advanced] 137
Menu 13: USB Configuration 141
Menu 14: PCI/PnP Configuration 145
Menu 15: Boot 150
Menu 16: Boot Settings Configuration 151
Menu 17: Boot Device Priority Settings 154
Menu 18: Hard Disk Drives 156
Menu 19: Security 157
Menu 20: Chipset 159
Menu 21:NorthBridge Chipset Configuration 160
Menu 22:SouthBridge Chipset Configuration 168
Menu 23:Exit 169

Chapter

1

Introduction

1.1 Introduction

The half-size PICOe-9452 CPU card is a Socket M Intel® Core™2 Duo, Intel® Core™ Duo, Intel® Core™ Solo or Intel® Celeron M (Yohan core) CPU platform. The PICOe-9452 has a maximum front side bus (FSB) frequency of 667MHz and supports 667MHz 2GB dual channel memory modules. The PICOe-9452 also comes with multiple display options, dual PCI Express (PCIe) Gigabit Ethernet (GbE) and has flexible storage options including support for two second-generation serial ATA (SATA) hard disk drives (HDD), one IDE HDD and a CompactFlash® Type II (CF Type II) disk.

1.1.1 PICOe-9452 Benefits

Some of the PICOe-9452 benefits are listed below:

- Multiple display output options
- Storage flexibility with support for SATA drives, IDE drives and CompactFlash (CF) disks
- DDR2 support enables faster data transfers
- Multiple I/O interfaces provide connectivity to a broad range of external peripheral devices

1.1.2 PICOe-9452 Features

Some of the PICOe-9452 features are listed below.

- Support for the following Socket M processors:
  - Intel® Core™2 Duo
  - Intel® Core™ Duo
  - Intel® Core™ Solo
  - Intel® Celeron® M
- Maximum FSB of 667MHz
- Maximum of 4GB of memory supported with two 240-pin dual channel 400MHz, 533MHz or 667MHz 2GB DDR2 DIMMs
- Two SATA drives with transfer rates of 1.5 Gbps supported
- One Ultra ATA 100, Ultra ATA 66 or Ultra ATA 33 IDE HDDs supported
- Five USB 2.0 devices supported

- One PCIe GbE Ethernet and one 10/100BASE-T Ethernet
- Multiple display options including CRT,HDTV and dual-channel LVDS
- Half-size form factor
- RoHS compliant
- Supports AT and ATX power supplies

1.2 PICOe-9452 Overview

1.2.1 PICOe-9452 Overview Photo

The PICOe-9452 has a wide variety of internal and external peripheral connectors. A labeled photo of the peripheral connectors on the front of the PICOe-9452 is shown in **Figure 1-1**.

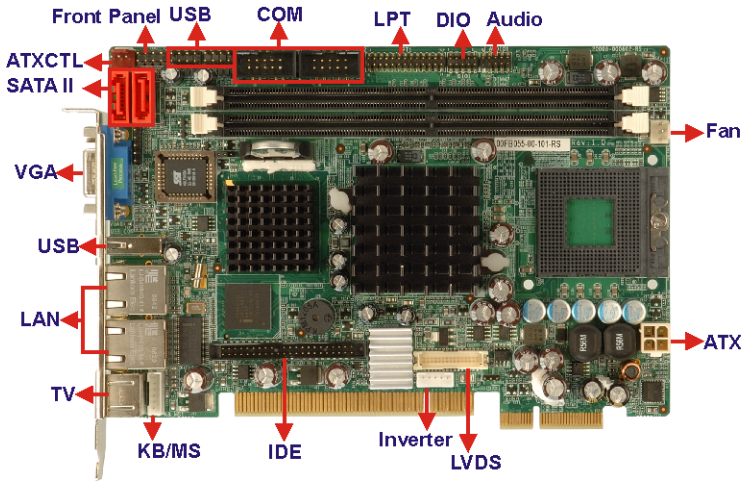

Figure 1-1: PICOe-9452 Overview [Front View]

A labeled photo of the peripheral connectors on the back of the PICOe-9452 is shown in **Figure 1-1**.

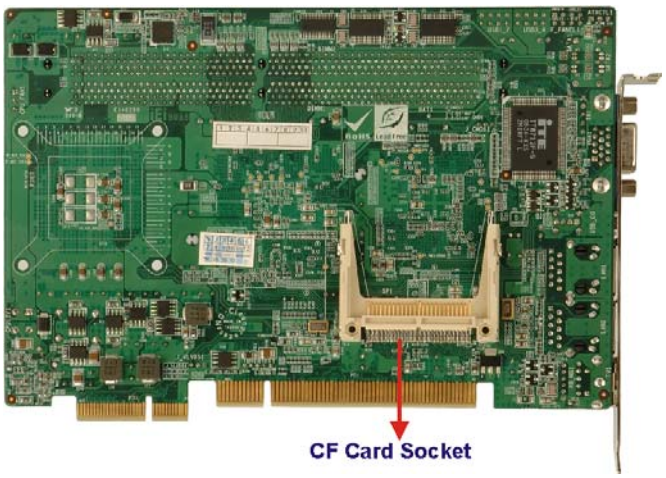

Figure 1-2: PICOe-9452 Overview [Rear View]

1.2.2 PICOe-9452 Peripheral Connectors and Jumpers

The PICOe-9452 has the following connectors on-board:

- 1 x Audio connector
- 1 x Backplane power connector
- 1 x Compact flash connector
- 1 x Digital input/output connector
- 1 x Fan connector
- 1 x Front panel connector
- 1 x IDE disk drive connector
- 1 x Infrared interface connector
- 1 x Inverter connector
- 1 x Keyboard and mouse connector
- 1 x LVDS connector
- 2 x Serial port connectors (internal COM 1 and COM 2 RS-232)
- 1 x Parallel port connector
- 2 x Serial ATA (SATA) drive connectors
- 4 x USB connectors

The PICOe-9452 has the following external peripheral interface connectors on the board rear panel

- 2 x Ethernet connectors
- 1 x USB port connectors
- 1 x TV Out Mini DIN connector
- 1 x VGA connector

The PICOe-9452 has the following on-board jumpers:

- Clear CMOS
- CF Card setup
- LVDS voltage selection
- PCIe interface setup

1.2.3 Technical Specifications

PICOe-9452 technical specifications are listed in **Table 1-1**. See **Chapter 2** for details.

Specification	PICOe-9452
Form Factor	Half-size
System CPU	Socket M Intel® Core™2 Duo Socket M Intel® Core™ Duo Socket M Intel® Core™ Solo Socket M Intel® Celeron M (Yonah core)
Front Side Bus	400MHz, 533Mhz, or 667MHz
System Chipset	**Northbridge**: Intel® 945GM **Southbridge**: Intel® ICH7-M
Memory	Two 240-pin DIMM sockets support two dual-channel 400MHz, 533MHz or 667MHz DDR2 DIMMs with a maximum capacity of 2GB each

Display	**CRT**: Integrated in the Intel® 945GM to support CRT **LVDS**: Dual channel 18-bit LVDS LCD panel **HDTV**: Supported by component interface
BIOS	AMI Flash BIOS
Audio	7.1 channel or 5.1 channel audio with an optional AC-KIT
LAN	Intel® 82573 PCIe GbE chipset Intel® 82562 Ethernet chipset
COM	Two RS-232 serial ports
USB2.0	Five USB 2.0 devices supported by two onboard USB 2.0 connectors and one external USB 2.0 port
IDE	One 44-pin IDE connects to two Ultra ATA33/66/100 devices
SATA	Two 1.5 Gbps SATA drives supported
Keyboard/Mouse	One 6-pin connector connects to a keyboard
Super I/O	ITE IT8712FHX
Digital I/O	One 8-bit digital I/O connector (4-bit input / 4-bit output)
Infrared	One Infrared connector
SSD	CF Type II
Watchdog Timer	Software programmable 1-255 sec. by super I/O
Power Supply	AT and ATX supported

Temperature	0ºC – 60ºC (32ºF - 140ºF)
Humidity (operating)	5%~95% non-condensing
Dimensions (LxW)	185mm x 122mm
Weight (GW/NW)	1000g/ 171g

Table 1-1: Technical Specifications

THIS PAGE IS INTENTIONALLY LEFT BLANK

Chapter

2

Detailed Specifications

2.1 Overview

This chapter describes the specifications and on-board features of the PICOe-9452 in detail.

2.2 Dimensions

2.2.1 Board Dimensions

The dimensions of the board are listed below:

- **Length**: 185mm
- **Width**: 122mm

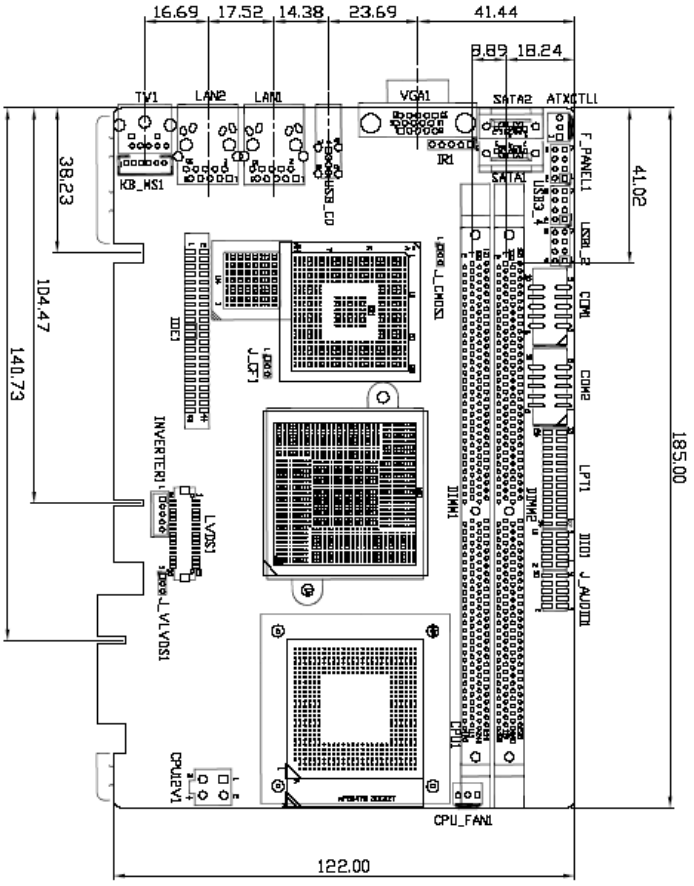

Figure 2-1: PICOe-9452 Dimensions (mm)

2.2.2 External Interface Panel Dimensions

External peripheral interface connector panel dimensions are shown in **Figure 2-2**.

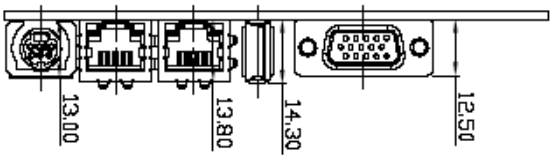

Figure 2-2: External Interface Panel Dimensions (mm)

2.3 Data Flow

Figure 2-3 shows the data flow between the two on-board chipsets and other components installed on the motherboard and described in the following sections of this chapter.

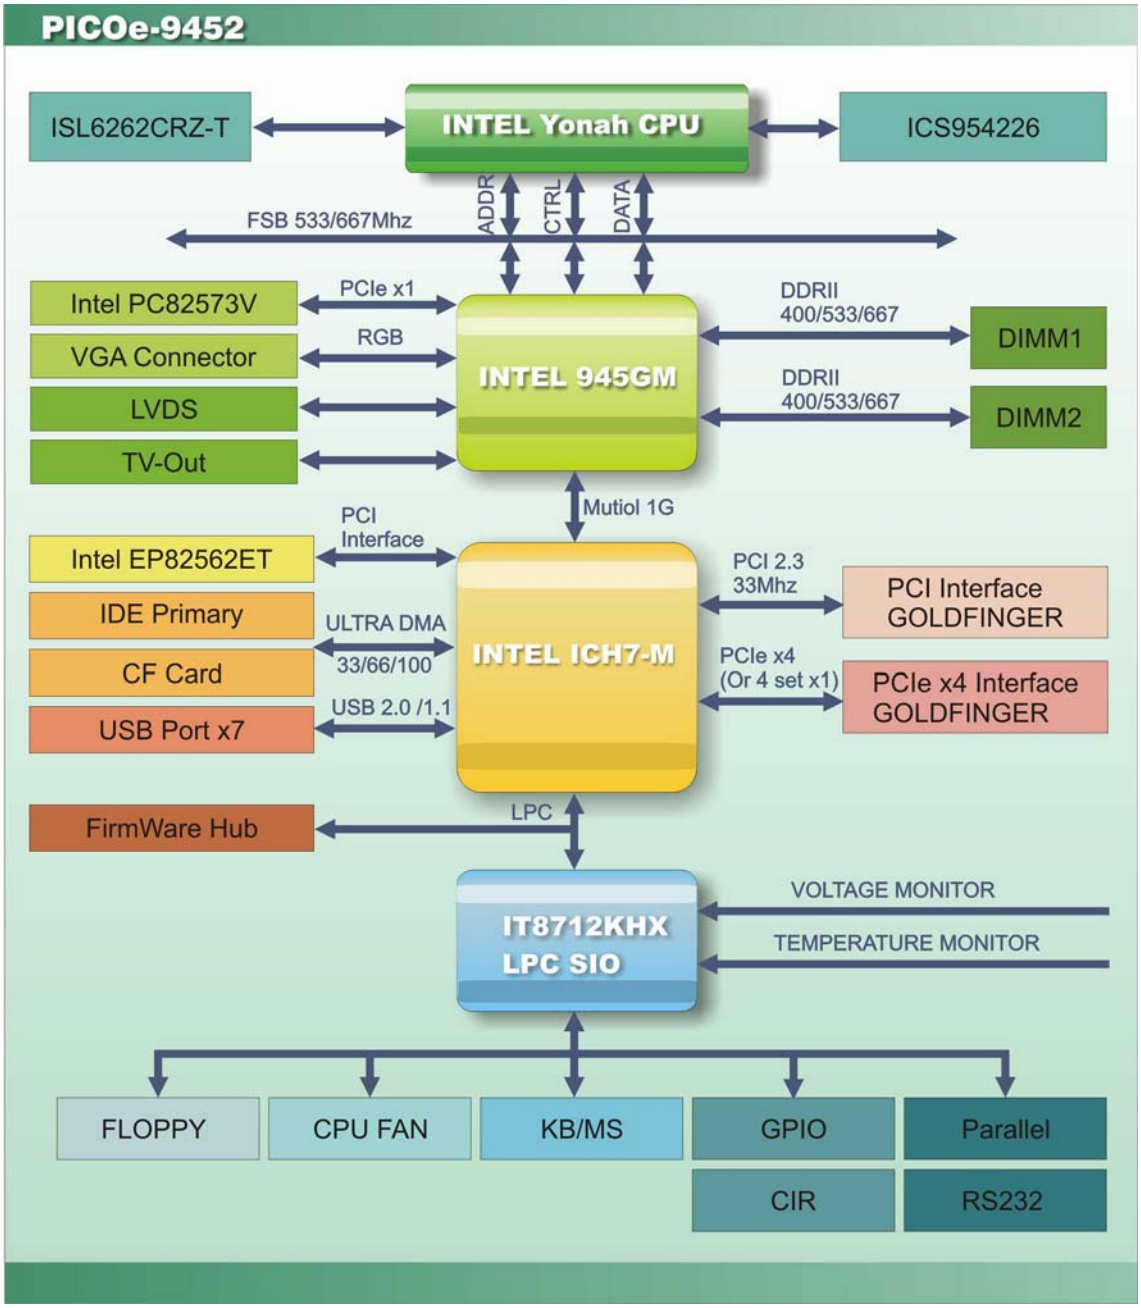

Figure 2-3: Data Flow Block Diagram

2.4 Compatible Processors

2.4.1 Compatible Processor Overview

The PICOe-9452 supports the following Socket M processors:

- Intel® Core™2 Duo Mobile processors
- Intel® Core™ Duo processors
- Intel® Core™ Solo processors
- Intel® Celeron® M processors

All three of the above processors communicate with the Intel® 945GM northbridge chipset through a 667MHz front side bus (FSB). Features of the supported processors are listed in **Table 2-1**.

CPU Features	Core™2 Duo Mobile	Core™ Duo	Core™ Solo	Celeron® M
Dual core	Yes	Yes	No	No
Enhanced Halt State (C1E)	No	Yes	No	No
Enhanced Intel® Speedstep® Technolgy	Yes	Yes	Yes	No
Execute Disable Bit	Yes	Yes	Yes	Yes
Intel® EM64T	Yes	No	No	No
Intel® Virtualization Technology	Yes	Yes	No	No

Table 2-1: Processor Features

2.4.2 Supported Processors

Specifications for the compatible processors are listed in **Table 2-2** below:

Family	CPU Speed	Processor #	Bus Speed	Mfg Tech	Stepping	Cache Size
Core™2 Duo Mobile	2.33 GHz	T7600	667 MHz	65 nm	B2	4 MB
	2.16 GHz	T7400	667 MHz	65 nm	B2	4 MB

Family	CPU Speed	Processor #	Bus Speed	Mfg Tech	Stepping	Cache Size
	2 GHz	T7200	667 MHz	65 nm	B2	4 MB
	1.83 GHz	T5600	667 MHz	65 nm	B2	2 MB
	1.66 GHz	T5500	667 MHz	65 nm	B2	2 MB
Core™ Duo	2 GHz	T2500	667 MHz	65 nm	C0	2 MB
	1.66 GHz	T2300E	667 MHz	65 nm	C0	2 MB
Core™ Solo	1.83 GHz	T1400	667 MHz	65 nm	C0	2 MB
Celeron® M	2 GHz	450	533 MHz	65 nm	D0	1 MB
	1.86 GHz	440	533 MHz	65 nm	D0	1 MB
	1.73 GHz	430	533 MHz	65 nm	C0	1 MB
	1.73 GHz	430	533 MHz	65 nm	D0	1 MB
	1.73GHz	530	533 MHz	65 nm	-	1 MB
	1.60 GHz	520	533 MHz	65 nm	B2	1 MB
	1.46 GHz	410	533 MHz	65 nm	C0	1 MB

Table 2-2: Supported Processors

2.5 Intel® 945GM Northbridge Chipset

2.5.1 Intel® 945GM Overview

The Intel® 945GM northbridge chipset has the Generation 3.1 Intel Integrated Graphics Engine and the Intel® Graphics Media Accelerator 950 (Intel® GMA 950). The integrated graphics and memory controller hub (GMCH) facilitates the flow of information primarily between the following four interfaces:

- Front Side Bus (FSB)
- System Memory Interface
- Graphics Interface
- Direct Media Interface (DMI)

2.5.2 Intel® 945GM Memory Support

WARNING:

Only DDR2 memory module can be installed on the PICOe-9452. Do not install DDR memory modules. If a DDR memory module is installed on the PICOe-9452, the PICOe-9452 may be irreparably damaged.

The Intel® 945GM northbridge chipset on the PICOe-9452 supports two DDR2 240-pin DIMMs with the following features:

- Two 240-pin DIMMs
- DDR2 only (**DO NOT** install a DDR DIMM)
- Single-channel or dual-channel
- Capacities of 256MB, 512MB, 1GB or 2GB
- Transfer speeds of 400MHz, 533MHz or 667MHz
- 64-bit wide channel

The memory socket is shown in **Figure 2-4**.

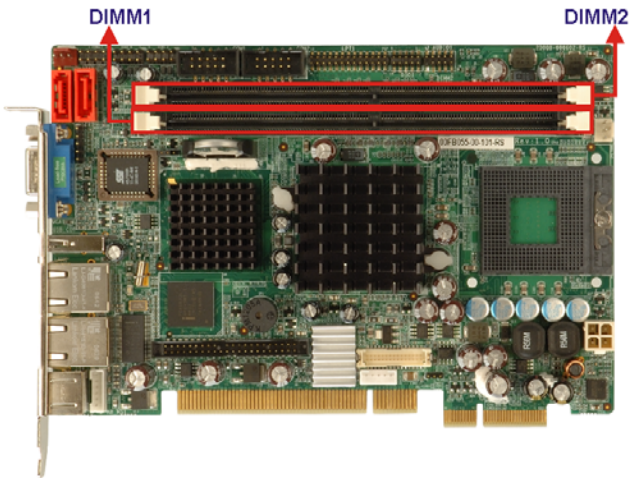

Figure 2-4: 240-pin DDR2 DIMM Sockets

2.5.3 Intel® 945GM PCIe x1 Bus: PCIe GbE Ethernet Controller

One lane of the PCIe (PCIe x1) bus on the Intel® 945GM northbridge chipset is interfaced to an external RJ-45 LAN connector (LAN1) through an Intel® PC82573V PCIe GbE controller. The PCIe GbE controller and the LAN1 RJ-45 connector are shown in **Figure 2-5**. For more detailed information about the Intel® PC82573V PCIe GbE controller, please refer to Section below.

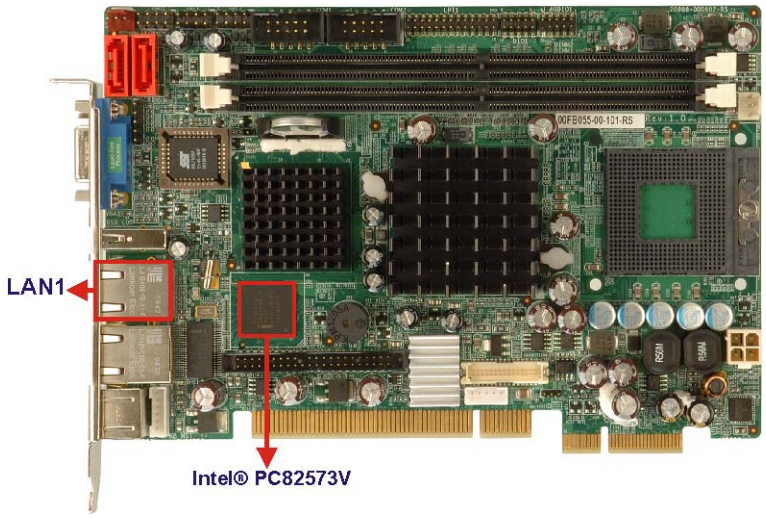

Figure 2-5: PCIe GbE LAN Chipset and Connector

2.5.4 Intel® 945GM Integrated Graphics

The Intel® 945GM northbridge chipset has an Intel® Gen. 3.5 integrated graphics engine that supports the following display devices:

- Analog CRT
- LVDS
- TV-Out

2.5.4.1 Intel® 945GM Analog CRT Support

A DB-15 VGA connector on the external peripheral interface connector panel is interfaced to the Intel® 945GM graphics engine. The Intel® 945GM internal graphics engine, with an

integrated 400MHz RAMDAC and hot plug CRT support, supports analog CRT monitors up to QXGA.

2.5.4.2 Intel® 945GM LVDS Support

A 30-pin LVDS crimp connector is interfaced to the Intel® 945GM graphics engine. The Intel® 945GM internal graphics engine supports LVDS displays with the following features:

- Up to UXGA monitors with a maximum resolution of 1600 x 1200
- 18-bit 25MHz to 112MHz single-channel or dual-channel LVDS screens
- CPIS 1.5 compliant LVDS screens

2.5.4.3 Intel® 945GM TV Out Support

An external 7-pin DIN TV output connector is interfaced to the Intel® 945GM graphics engine. The Intel® 945GM internal graphics engine has the following TV output features:

- Three integrated 10-bit DACs
- Macrovision support
- Overscaling
- NTSC and PAL formats supported
- Supports RCA or S-VIDEO connectivity
- Supports HDTV with the following resolutions:
  - 480p
  - 720p
  - 1080i
  - 1080p

2.5.5 Intel® 945GM Direct Media Interface (DMI)

Intel® 945GM northbridge GMCH is connected to the Intel® ICH7-M Southbridge Chipset through the chip-to-chip Direct Media Interface (DMI). Features of the Intel® 945GM DMI are listed below:

- 2GB/s (1GB/s in each direction) bus speed
- 32-bit downstream address

2.6 Intel® ICH7-M Southbridge Chipset

2.6.1 Intel® ICH7-M Overview

The Intel® ICH7-M southbridge chipset is connected to the Intel® 945GM northbridge GMCH through the chip-to-chip Direct Media Interface (DMI). Some of the features of the Intel® ICH7-M are listed below.

- Complies with PCI Express Base Specification, Revision 1.0a
- Complies with PCI Local Bus Specification, Revision 2.3 and supports 33MHz PCI operations
- Supports ACPI Power Management Logic
- Contains:
  - Enhanced DMA controller
  - Interrupt controller
  - Timer functions
- Integrated SATA host controller with DMA operations interfaced to four SATA connectors on the PICOe-9452
- Integrated IDE controller supports Ultra ATA 100/66/33
- Supports the four USB 2.0 devices on the PICOe-9452 with four UHCI controllers and one EHCI controller
- Complies with System Management Bus (SMBus) Specification, Version 2.0
- Supports Audio Codec ’97 (AC’97) Revision 2.3
- Supports Intel® High Definition Audio
- Contains Low Pin Count (LPC) interface
- Supports Firmware Hub (FWH) interface
- Serial peripheral interface support

2.6.2 Intel® ICH7-M Audio Codec ’97 Controller

The Audio Codec ’97 (AC’97) controller integrated into the ICH7-M complies with AC’97 Component Specification, Version 2.3. The AC’97 controller is connected to the onboard audio connector. The audio connector is connected to an optional 5.1 channel or 7.1 channel audio kit with an embedded AC’97 audio codec. The AC’97 controller supports up to six PCM audio output channels. Complete surround sound requires six-channel audio consisting of:

- Front left
- Front right
- Back left
- Back right
- Center
- Subwoofer

2.6.3 Intel® ICH7-M Ethernet Connection

An integrated PHY on the Intel® ICH7-M southbridge is interfaced to an Intel® EP82562ET 10Mbps or 100Mbps Ethernet controller. The Intel® EP82562ET controller is then connected to the LAN2 RJ-45 connector. See **Figure 2-6** below. For more details on the Intel® EP82562ET controller, please see below.

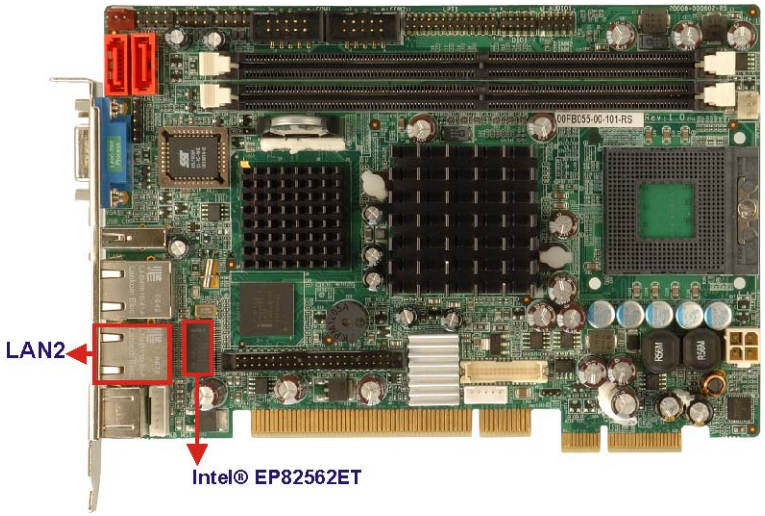

Figure 2-6: 10Mbps or 100Mbps LAN Controller Chipset and Connector

2.6.4 Intel® ICH7-M IDE Interface

The integrated IDE interface on the ICH7-M southbridge supports two IDE hard disks and ATAPI devices. PIO IDE transfers up to 16MB/s and Ultra ATA transfers of 100MB/s. The integrated IDE interface is able to support the following IDE HDDs:

- **Ultra ATA/100**, with data transfer rates up to 100MB/s
- **Ultra ATA/66**, with data transfer rates up to 66MB/s

- **Ultra ATA/33**, with data transfer rates up to 33MB/s

Specification	Ultra ATA/100	Ultra ATA/66	Ultra ATA/33
IDE devices	2	2	2
PIO Mode	0 – 4	0 – 4	0 – 4
PIO Max Transfer Rate	16.6 MB/s	16.6 MB/s	16.6 MB/s
DMA/UDMA designation	UDMA 3 - 4	UDMA 3 – 4	UDMA 2
DMA/UDMA Max Transfer	100MB/s	66MB/s	33MB/s
Controller Interface	5V	5V	5V

Table 2-3: Supported HDD Specifications

2.6.5 Intel® ICH7-M Low Pin Count (LPC) Interface

The ICH7-M LPC interface complies with the LPC 1.1 specifications. The LPC bus from the ICH6 is connected to the following components:

- BIOS chipset
- Super I/O chipset

2.6.6 Intel® ICH7-M PCI Interface

The PCI interface on the ICH7-M is compliant with the PCI Revision 2.3 implementation. Some of the features of the PCI interface are listed below.

- PCI Revision 2.3 compliant
- 33MHz
- 5V tolerant PCI signals (except PME#)
- Integrated PCI arbiter supports up to seven PCI bus masters

The PCI bus is connected to an interface gold finger on the bottom of the CPU cards and supports four expansion PCI cards on the backplane.

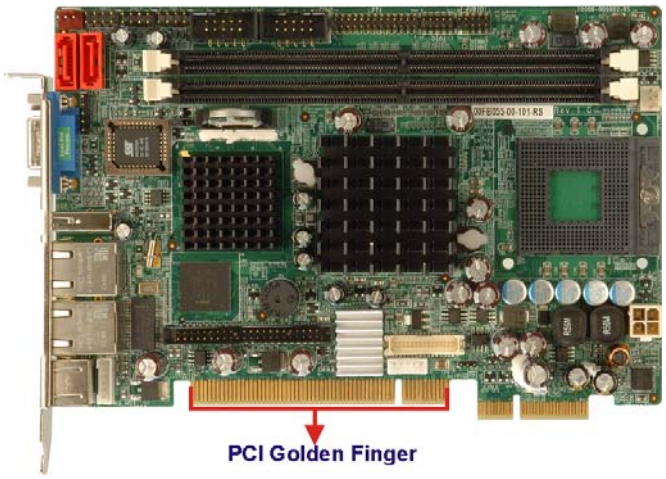

Figure 2-7: PCI Golden finger

2.6.7 Intel® ICH7-M PCIe x4 Bus

The Intel® ICH7-M southbridge chipset has four PCIe lanes. The four PCIe lanes are interfaced through a golden finger on the bottom of the CPU card through a compatible half-size backplane to either four PCIe x1 expansion cards or one PCIe x4 expansion card on. The PCIe x4 golden finger is shown in **Figure 2-8** below.

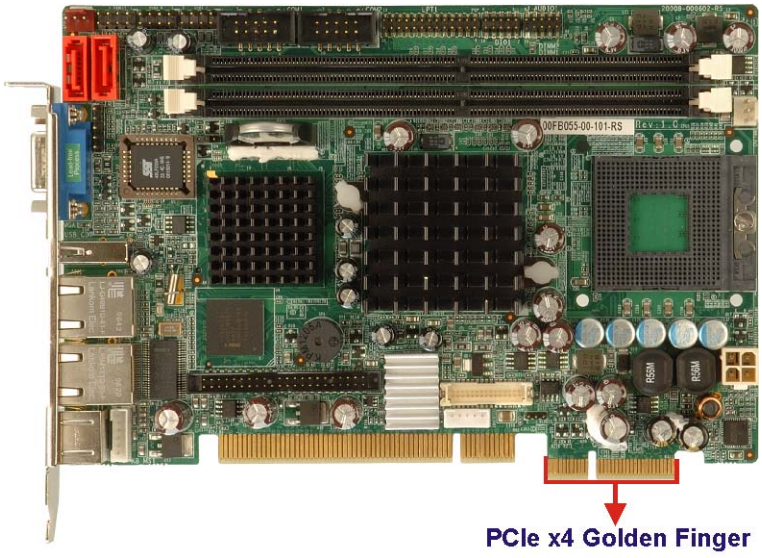

Figure 2-8: PCIe x4 Golden finger

2.6.8 Intel® ICH7-M Real Time Clock

256 bytes of battery backed RAM is provided by the Motorola MC146818A real time clock (RTC) integrated into the ICH6. The RTC operates on a 3V battery and 32.768KHz crystal. The RTC keeps track of the time and stores system data even when the system is turned off.

2.6.9 Intel® ICH7-M SATA Controller

The integrated SATA controller on the ICH7-M southbridge supports four SATA drives on the PICOe-9452 with independent DMA operations. SATA controller specifications are listed below.

- Supports four SATA drives
- Supports 3Gb/s data transfer speeds
- Supports Serial ATA Specification, Revision 1.0a

2.6.10 Intel® ICH7-M USB Controller

Up to five high-speed, full-speed or low-speed USB devices are supported by the ICH7-M on the PICOe-9452. High-speed USB 2.0, with data transfers of up to 480MB/s, is enabled with the ICH7-M integrated Enhanced Host Controller Interface (EHCI) compliant host controller. USB full-speed and low-speed signaling is supported by the ICH7-M integrated Universal Host Controller Interface (UHCI) controllers.

The five USB ports implemented on the PICOe-9452 are connected to two internal connectors and one external connector. See **Figure 2-9**.

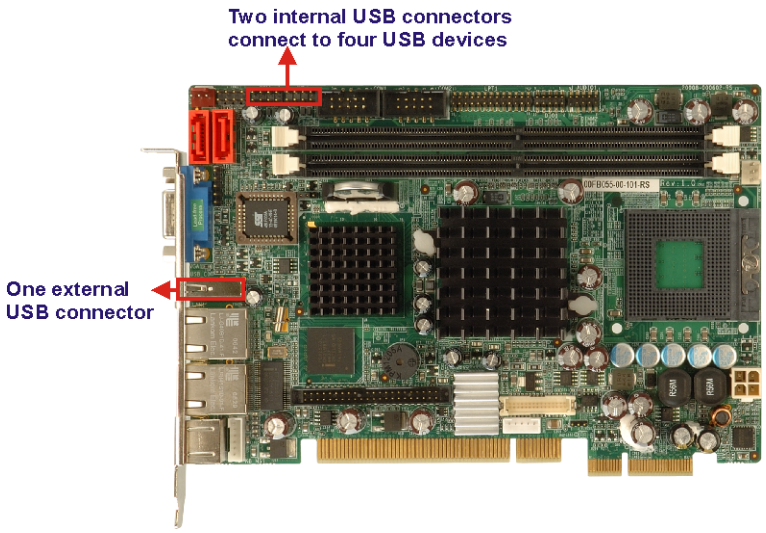

Figure 2-9: Onboard USB Implementation

2.7 LPC Bus Components

2.7.1 LPC Bus Overview

The LPC bus is connected to components listed below:

- BIOS chipset
- Super I/O chipset

The BIOS chipset and Super I/O chipset are shown in **Figure 2-10** below.

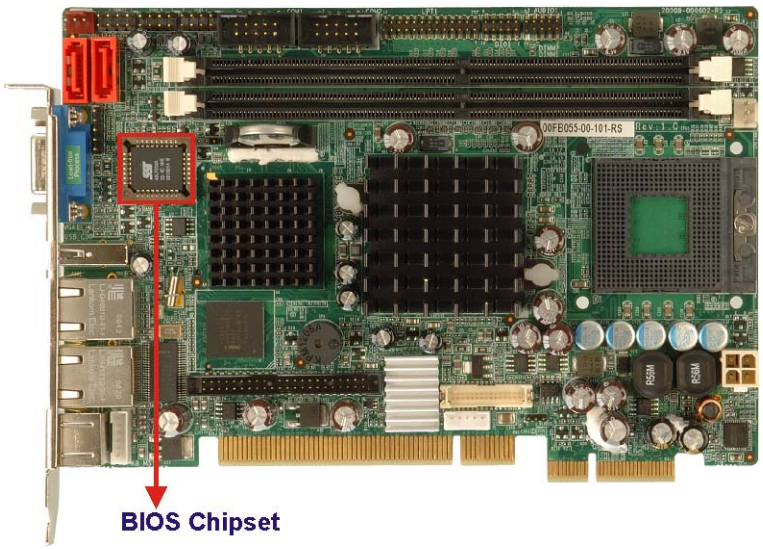

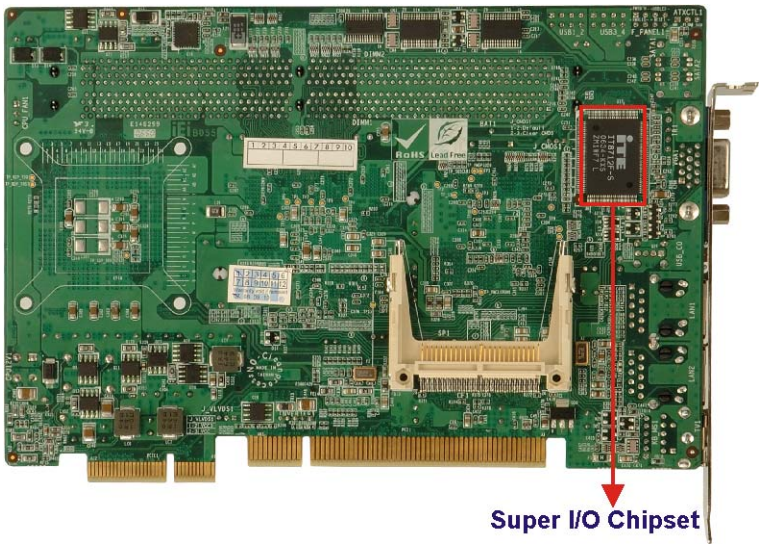

Figure 2-10: LPC Bus Components

2.7.2 BIOS Chipset

The BIOS chipset has a licensed copy of AMI BIOS installed on the chipset. Some of the BIOS features are listed below:

- AMI Flash BIOS
- SMIBIOS (DMI) compliant
- Console redirection function support
- PXE (Pre-boot Execution Environment) support
- USB booting support

2.7.3 Super I/O chipset

The iTE IT8712F Super I/O chipset is connected to the Intel® ICH7-M southbridge through the LPC bus. The iTE IT8712F is an LPC interface-based Super I/O device that comes with Environment Controller integration. Some of the features of the iTE IT8712F chipset are listed below:

- LPC Interface
- PC98/99/2001, ACPI and LANDesk Compliant
- Enhanced Hardware Monitor

- Fan Speed Controller
- SmartGuardian Controller
- Single +5V Power Supply
- Two 16C550 UARTs for serial port control
- One IEEE 1284 Parallel Port
- Floppy Disk Controller
- Keyboard Controller
- Watchdog Timer
- Serial IRQ Support
- Vbat & Vcch Support
- Single +5V Power Supply

Some of the Super I/O features are described in more detail below:

2.7.3.1 Super I/O LPC Interface

The LPC interface on the Super I/O complies with the Intel® Low Pin Count Specification Rev. 1.0. The LPC interface supports both LDRQ# and SERIRQ protocols as well as PCI PME# interfaces.

2.7.3.2 Super I/O 16C550 UARTs

The onboard Super I/O has two integrated 16C550 UARTs that can support the following:

- Two standard serial ports (COM1 and COM2)
- IrDa 1.0 and ASKIR protocols

2.7.3.3 Super I/O Enhanced Hardware Monitor

The Super I/O Enhanced Hardware Monitor monitors three thermal inputs, VBAT internally, and eight voltage monitor inputs. These hardware parameters are reported in the BIOS and can be read from the BIOS Hardware Health Configuration menu.

2.7.3.4 Super I/O Fan Speed Controller

The Super I/O fan speed controller enables the system to monitor the speed of the fan. One of the pins on the fan connector is reserved for fan speed detection and interfaced to the fan speed controller on the Super I/O. The fan speed is then reported in the BIOS.

2.7.3.5 Super I/O Parallel Port

The Super I/O parallel port (LPT) supports standard mode, enhanced mode and high-speed mode parallel port devices. The LPT is compliant with the following LPT modes.

- Standard mode
  - Bi-directional SPP compliant
- Enhanced mode
  - EPP v1.7 compliant
  - EPP v1.9 compliant
- High-speed mode
  - ECP, IEEE 1284 compliant

2.7.3.6 Super I/O Keyboard/Mouse Controller

The Super I/O keyboard/mouse controller can execute the 8042 instruction set. Some of the keyboard controller features are listed below:

- The 8042 instruction is compatible with a PS/2 keyboard and PS/2 mouse
- Gate A20 and Keyboard reset output
- Supports multiple keyboard power on events
- Supports mouse double-click and/or mouse move power on events

2.8 Ethernet LAN Controllers

2.8.1 Ethernet LAN Controllers Overview

As described above (see **Section 0** and **Section 2.6.3**), the PICOe has two Ethernet controllers, the Intel® PC82573V and the Intel® EP82562ET. These two LAN controllers are described below.

2.8.2 Intel® PC82573V PCIe GbE Ethernet Controller

2.8.2.1 Intel® PC82573V Overview

The Intel® PC82573V is a PCIe GbE Ethernet controller that interfaces the Intel® 945GM northbridge chipset to the LAN1 RJ-45 connector. The Intel® 82573 Gigabit Ethernet Controller provides a standard IEEE 802.3 Ethernet interface for 1000BASE-T, 100BASE-TX, and 10BASE-T applications (802.3, 802.3u, and 802.3ab, respectively).

- 2 Gbps peak bandwidth per direction
- PCI Express Rev 1.0a specification
- High bandwidth density per pin
- Wide, pipelined internal data path architecture
- Optimized transmit (Tx) and receive (Rx) queues
- 32 KB configurable Rx and Tx first-in/first-out (FIFO)
- IEEE 802.3x*-compliant flow-control support with software controllable pause times and threshold values
- Programmable host memory Rx buffers (256 B-16 KB)
- Descriptor ring management hardware for Tx and Rx
- Mechanism for reducing interrupts from Tx/Rx operations
- Integrated PHY for 10/100/1000 Mbps (full- and half-duplex)
- IEEE 802.3ab* auto-negotiation support
- IEEE 802.3ab PHY compliance and compatibility
- Tx/Rx IP, TCP, and UDP checksum offloading
- Tx TCP segmentation
- Advanced packet filtering
- Intel® SingleDriver™ technology
- Alerting Standards Format 2.0 (82573V only)
- Advanced Pass Through (82573V only)
- Boot ROM Preboot eXecution Environment (PXE) Flash interface support
- SDG 3.0, WfM 3.0 and PC2001 compliant
- Wake on LAN support

2.8.3 Intel® EP82562ET PCIe GbE Ethernet Controller

2.8.3.1 Intel® EP82562ET Overview

The Intel® 82562ET is an IEEE 10BASE-T and 100BASE-TX Ethernet controller that connects the Intel® ICH7-M southbridge chipset to the LAN2 RJ-45 connector. The Intel® 82562ET is designed for 10Mbps or 100Mbps Ethernet systems.

2.8.3.2 Intel® EP82562ET Ethernet Controller

Some features of the Intel® EP82562ET Ethernet controller are written below:

- IEEE 802.3 10BASE-T/100BASE-TX compliant physical layer interface
- IEEE 802.3u Auto-Negotiation support
- Digital Adaptive Equalization control
- Link status interrupt capability
- XOR Tree mode support for board testing
- 3-port LED support (speed, link and activity)
- 10BASE-T auto-polarity correction
- Diagnostic loopback mode
- 1:1 transmit transformer ratio support
- Low power (less than 300 mW in active transmit mode)
- Reduced power in “unplugged mode” (less than 50 mW)
- Automatic detection of “unplugged mode”
- 3.3 V device
- 48-pin Shrink Small Outline Package
- Platform LAN connect interface support

2.9 Environmental and Power Specifications

2.9.1 System Monitoring

Three thermal inputs on the PICOe-9452 Super I/O Enhanced Hardware Monitor monitor the following temperatures:

- System temperature
- Power temperature

- CPU temperature

Eight voltage inputs on the PICOe-9452 Super I/O Enhanced Hardware Monitor monitor the following voltages:

- Vcore
- +2.5V
- +3.3V
- +5.0V
- +12.0V
- DDR Vtt
- +1.5V
- 5VSB

The PICOe-9452 Super I/O Enhanced Hardware Monitor also monitors the following voltages internally:

- VBAT

The PICOe-9452 Super I/O Enhanced Hardware Monitor also monitors the following fan speeds:

- CPU Fan speed

The values for the above environmental parameters are all recorded in the BIOS Hardware Health Configuration menu.

2.9.2 Operating Temperature and Temperature Control

The maximum and minimum operating temperatures for the PICOe-9452 are listed below.

- Minimum Operating Temperature: 0ºC (32°F)
- Maximum Operating Temperature: 60°C (140°F)

A cooling fan and heat sink must be installed on the CPU. Thermal paste must be smeared on the lower side of the heat sink before it is mounted on the CPU. Heat sinks are also mounted on the northbridge and southbridge chipsets to ensure the operating temperature of these chips remain low.

2.9.3 Power Consumption

Table 2-4 shows the power consumption parameters for the PICOe-9452 running with a 2.0GHz Intel® Core™2 Duo T2500 processor with a 667MHz FSB and 512MB of 667MHz DDR2 memory.

Voltage	Current
3.3V	0.77A
5.0V	3.0A
12.0V	0.17A

Table 2-4: Power Consumption

2.10 Expansion Options

2.10.1 Expansion Options Overview

A number of compatible IEI Technology Corp. PICOe backplanes and chassis can be used to develop and expanded system. These backplanes and chassis are listed below.

2.10.2 IEI Expansion PICOe Backplanes

The backplanes listed in **Table 2-5** are compatible with the PICOe-9452 and can be used to develop highly integrated industrial applications. All of the backplanes listed below have

24-pin ATX connector and a 4-pin ATX connector. For more information about these backplanes please consult the IEI catalog or contact your vendor, reseller or the IEI sales team at sales@iei.com.tw.

Model	Total Slots	Expansion Slots		
		PCIe		PCI
		x4	x1	
HPE-3S1	3	-	-	2
HPE-3S2	3	1	-	1
HPE-4S1	4	-	-	3
HPE-4S2	4	1	-	2
HPE-5S1	5	-	-	4
HPE-5S2	5	1	-	3
HPE-5S3	5	-	2	2
HPE-6S1	6	1	-	4
HPE-6S2	6	-	2	3
HPE-7S1	7	-	2	4
HPE-8S	7	-	2	4

Table 2-5: Compatible IEI PICOe Backplanes

2.10.3 IEI Chassis

IEI chassis available for PICOe-9452 system development are listed in **Table 2-6**.

For more information about these chassis please consult the IEI catalog or contact your vendor, reseller or the IEI sales team at sales@iei.com.tw.

Model	Slot SBC	Mounting	Max Slots	Backplanes
PR-1300G	Half-size	Wall	3	HPE-3S1 HPE-3S2
PAC-54G	Half-size	Wall	3	HPE-3S1 HPE-3S2
PAC-42GH	Half-size	Wall	4	HPE-S1 HPE-4S2

Model	Slot SBC	Mounting	Max Slots	Backplanes
PACO-504H	Half-size	Wall	4	HPE-S1 HPE-4S2
PR-1500G	Half-size	Wall	5	HPE-5S1 HPE-5S2 HPE-5S3
PAC-400G	Half-size	Wall	5	HPE-5S1 HPE-5S2 HPE-5S3
PACK-500G				HPE-5S1 HPE-5S2 HPE-5S3
PACO-506H	Half-size	Wall	6	HPE-6S1 HPE-6S2
PACO-700G	Half-size	Wall	7	HPE-7S1
RACK-3400G	Half-size (4U)	Rack	10	HPE-8S

Table 2-6: Compatible IEI Chassis

Chapter

3

Unpacking

3.1 Anti-static Precautions

WARNING:

Failure to take ESD precautions during the installation of the PICOe-9452 may result in permanent damage to the PICOe-9452 and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the PICOe-9452. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the PICOe-9452, or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- ***Wear an anti-static wristband***: - Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- ***Self-grounding***:- Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- ***Use an anti-static pad***: When configuring the PICOe-9452, place it on an antic-static pad. This reduces the possibility of ESD damaging the PICOe-9452.
- ***Only handle the edges of the PCB***:- When handling the PCB, hold the PCB by the edges.

3.2 Unpacking

3.2.1 Unpacking Precautions

When the PICOe-9452 is unpacked, please do the following:

- Follow the anti-static precautions outlined in **Section 3.1**.
- Make sure the packing box is facing upwards so the PICOe-9452 does not fall out of the box.
- Make sure all the components shown in **Section 3.3** are present.

3.3 Unpacking Checklist

NOTE:

If some of the components listed in the checklist below are missing, please do not proceed with the installation. Contact the IEI reseller or vendor you purchased the PICOe-9452 from or contact an IEI sales representative directly. To contact an IEI sales representative, please send an email to sales@iei.com.tw.

3.3.1 Package Contents

The PICOe-9452 is shipped with the following components:

Quantity	Item and Part Number	Image
1	PICOe-9452	
1	IDE-cable (**P/N**: 32200-008800)	
1	KB/MS PS/2 Y-cable with bracket (**P/N**: 19800-000075-RS)	
2	SATA cables (**P/N**: 32000-062800-RS)	
1	SATA power cable (**P/N**: 32100-088600-RS)	

1	Dual RS-232 cable (**P/N**: 19800-000051-RS)	
1	Dual USB cable (w bracket) (**P/N**:CB-USB02-RS)	
1	Mini jumper pack	
1	Quick installation guide	
1	Utility CD	

Table 3-1: Package List Contents

3.3.2 Optional Items

NOTE:

The items listed in this section are optional items that must be ordered separately. Please contact your PICOe-9452 vendor, distributor or reseller for more information or, contact iEi directly by sending an email to sales@iei.com.tw.

The following optional items are available for the PICOe-9452.

Quantity	Item and Part Number	Image
1	Audio kit_ 5.1 Channel (**P/N**: AC-KIT08R-R10)	
1	Audio kit_ 7.1 Channel (**P/N**: AC-KIT-883HD-R10)	
1	Cooling Kit (**P/N**: CF-479B-RS)	
1	LPT cable (w/o bracket) (**P/N**: 32200-015100-RS)	
1	S-Video cable (**P/N**:320000-083100-RS)	

Table 3-2: Optional Items

THIS PAGE IS INTENTIONALLY LEFT BLANK

Chapter

4

Connector Pinouts

4.1 Peripheral Interface Connectors

Section 4.1.2 shows peripheral interface connector locations. Section 4.1.2 lists all the peripheral interface connectors seen in Section 4.1.2.

4.1.1 PICOe-9452 Layout

Figure 4-1 shows the on-board peripheral connectors, rear panel peripheral connectors and on-board jumpers.

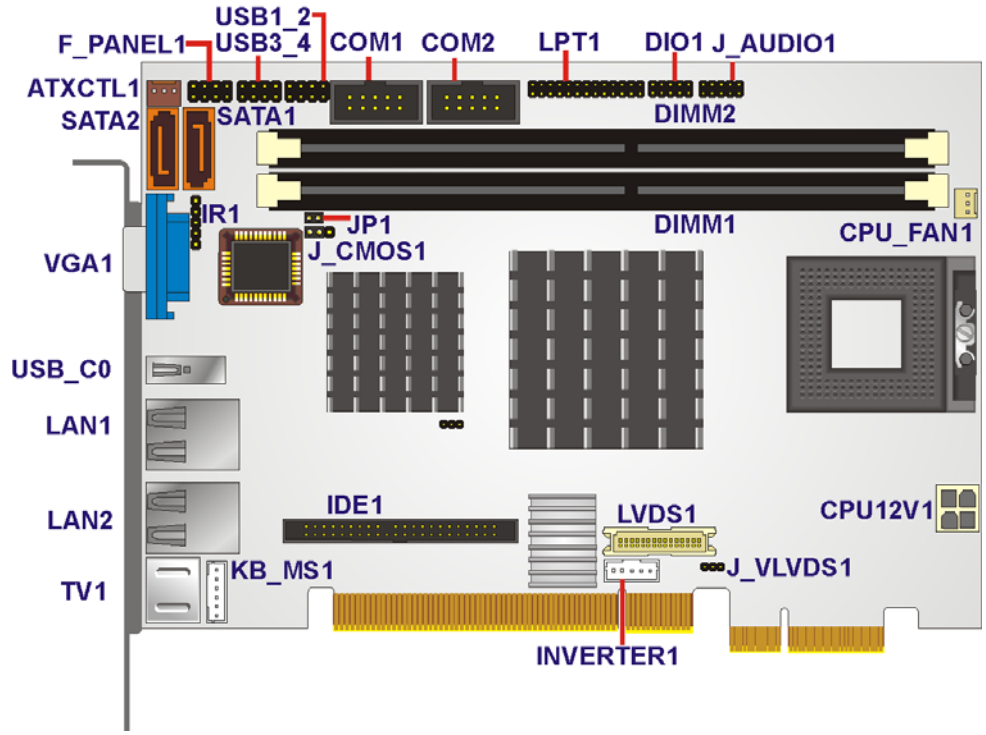

Figure 4-1: Connector and Jumper Locations

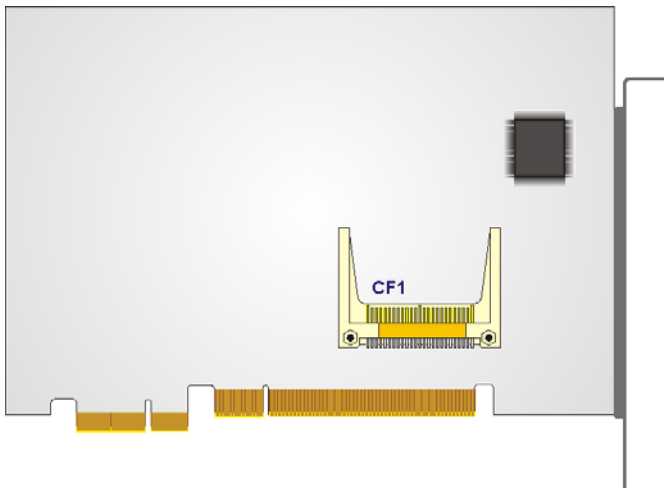

Figure 4-2: Connector and Jumper Locations (Solder Side)

4.1.2 Peripheral Interface Connectors

Table 4-1 shows a list of the peripheral interface connectors on the PICOe-9452. Detailed descriptions of these connectors can be found below.

Connector	Type	Label
+12V ATX power supply connector	4-pin ATX connector	CPU12V1
Audio connector	9-pin header	J_AUDIO1
Backplane power connector	3-pin wafer	ATXCTL1
Compact Flash (CF) connector	50-pin header	CF1
Digital I/O connector	10-pin header	DIO1
Fan connector	3-pin wafer	CPU_FAN1
Front panel connector	8-pin header	F_PANEL1
IDE Interface connector	44-pin header	PIDE1
Infrared connector	5-pin header	IR1

Connector	Type	Label
Inverter power connector	5-pin header	INVERTER1
Keyboard and mouse connector	6-pin wafer	KB1
LVDS connector	30-pin crimp	LVDS1
Parallel port connector	26-pin header	LPT1
Serial ATA (SATA) connector	7-pin SATA connector	SATA1
Serial ATA (SATA) connector	7-pin SATA connector	SATA2
Serial port connector (COM 1)	10-pin header	COM1
Serial port connector (COM2)	10-pin header	COM2
USB connector	8-pin header	USB1_2
USB connector	8-pin header	USB3_4

Table 4-1: Peripheral Interface Connectors

4.1.3 External Interface Panel Connectors

Table 4-2 lists the rear panel connectors on the PICOe-9452. Detailed descriptions of these connectors can be found in **Section** 0 on **page 66**

Connector	Type	Label
Ethernet connector	RJ-45	LAN1
Ethernet connector	RJ-45	LAN2
TV connector	Mini DIN	TV1
USB port	USB port	USB_C0
VGA port connector	Female DB-15	VGA1

Table 4-2: Rear Panel Connectors

4.2 Internal Peripheral Connectors

Internal peripheral connectors are found on the motherboard and are only accessible when the motherboard is outside of the chassis. This section has complete descriptions of all the internal, peripheral connectors on the PICOe-9452.

4.2.1 +12V ATX Power Supply Connector

CN Label:	CPU12V1
CN Type:	4-pin ATX power connector (1x4)
CN Location:	See Figure 4-3
CN Pinouts:	See Table 4-3

The 4-pin +12V ATX power supply connector is connected to a +12V ATX power supply.

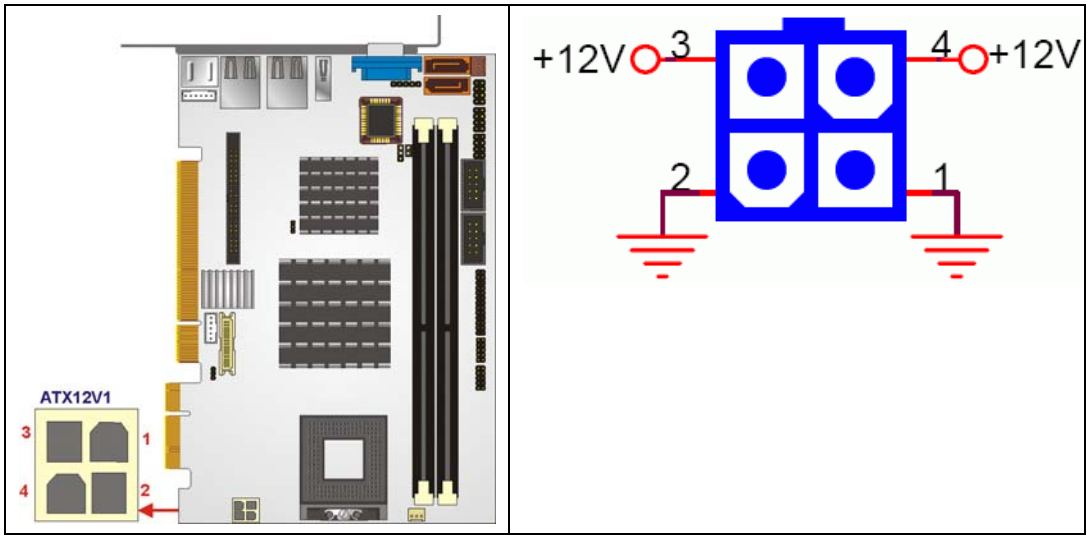

Figure 4-3: +12V ATX Power Connector Location

PIN NO.	DESCRIPTION
1	GND
2	GND
3	+12V
4	+12V

Table 4-3: +12V ATX Power Connector Pinouts

4.2.2 Audio Connector (9-pin)

CN Label: J_AUDIO1

CN Type: 9-pin header

CN Location: See Figure 4-4

CN Pinouts: See Table 4-4

An optional module can be connected to the 10-pin audio connector to provide the system with a high quality AC'97 or Azalia compatible codec that provides a complete integrated audio solution.

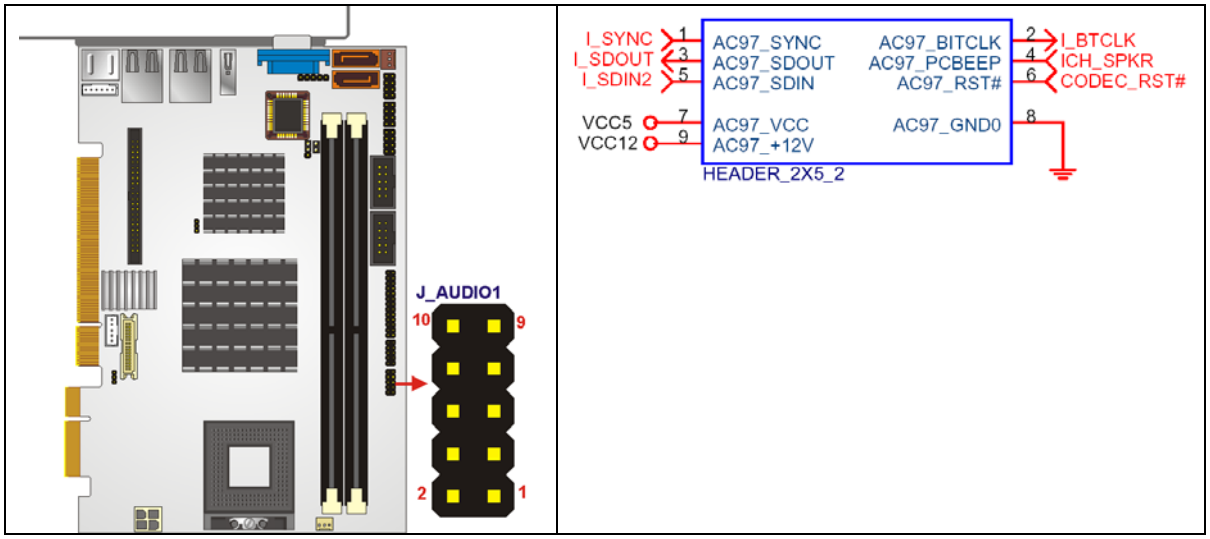

Figure 4-4: Audio Connector Pinouts (10-pin)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	AC97_SYNC	2	AC97_BITCLK
3	AC97_SDOUT	4	AC97_PCBEEP
5	AC97_SDIN	6	AC97_RST#
7	AC97_VCC	8	AC97_GND
9	AC97_12V		

Table 4-4: Audio Connector Pinouts (10-pin)

4.2.3 Backlight Inverter Connector

CN Label: **Inverter1**

CN Type: 5-pin wafer (1x5)

CN Location: See **Figure 4-5**

CN Pinouts: See **Table 4-5**

The backlight inverter connector provides the backlight on the LCD display connected to the PICOe-9452 with +12V of power.

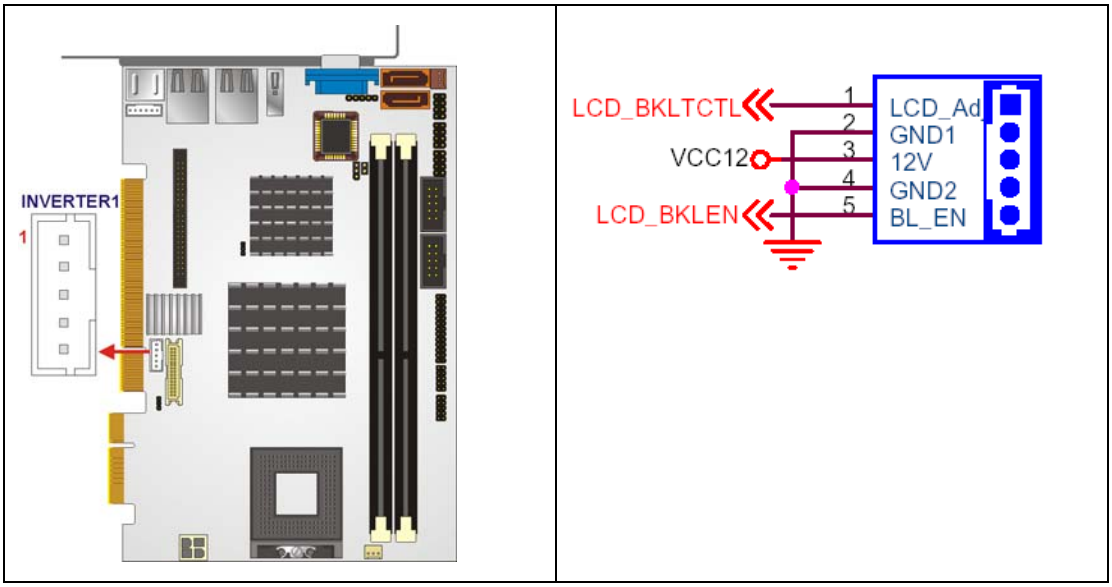

Figure 4-5: Panel Backlight Connector Pinout Locations

PIN NO.	DESCRIPTION
1	BRIGHTNESS
2	GROUND
3	+12V
4	GROUND
5	BACKLIGHT ENABLE

Table 4-5: Panel Backlight Connector Pinouts

4.2.4 Backplane to Mainboard Connector

CN Label: **ATXCTL1**

CN Type: 3-pin wafer (1x3)

CN Location: See **Figure 4-6**

CN Pinouts: See **Table 4-6**

The backplane to mainboard connector closes the circuit between the mainboard and the backplane in which it is installed. The backplane should have an ATX connector and be powered by an ATX power supply.

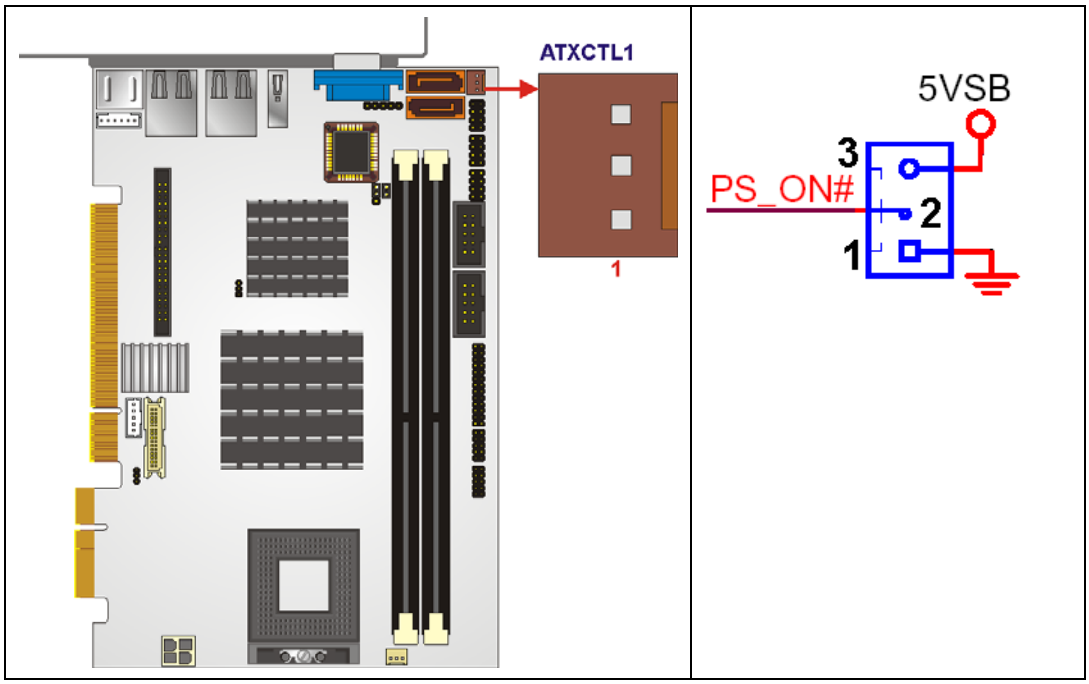

Figure 4-6: Backplane to Mainboard Connector Location

PIN NO.	DESCRIPTION
1	GND
2	PS_ON#
3	5VSB

Table 4-6: Backplane to Mainboard Connector Pinouts

4.2.5 Compact Flash Socket

CN Label: CF1 (solder side)

CN Type: 50-pin header (2x25)

CN Location: See Figure 4-7

CN Pinouts: See Table 4-7

A CF Type I or Type II memory card is inserted to the CF socket on the solder side of the PICOe-9452.

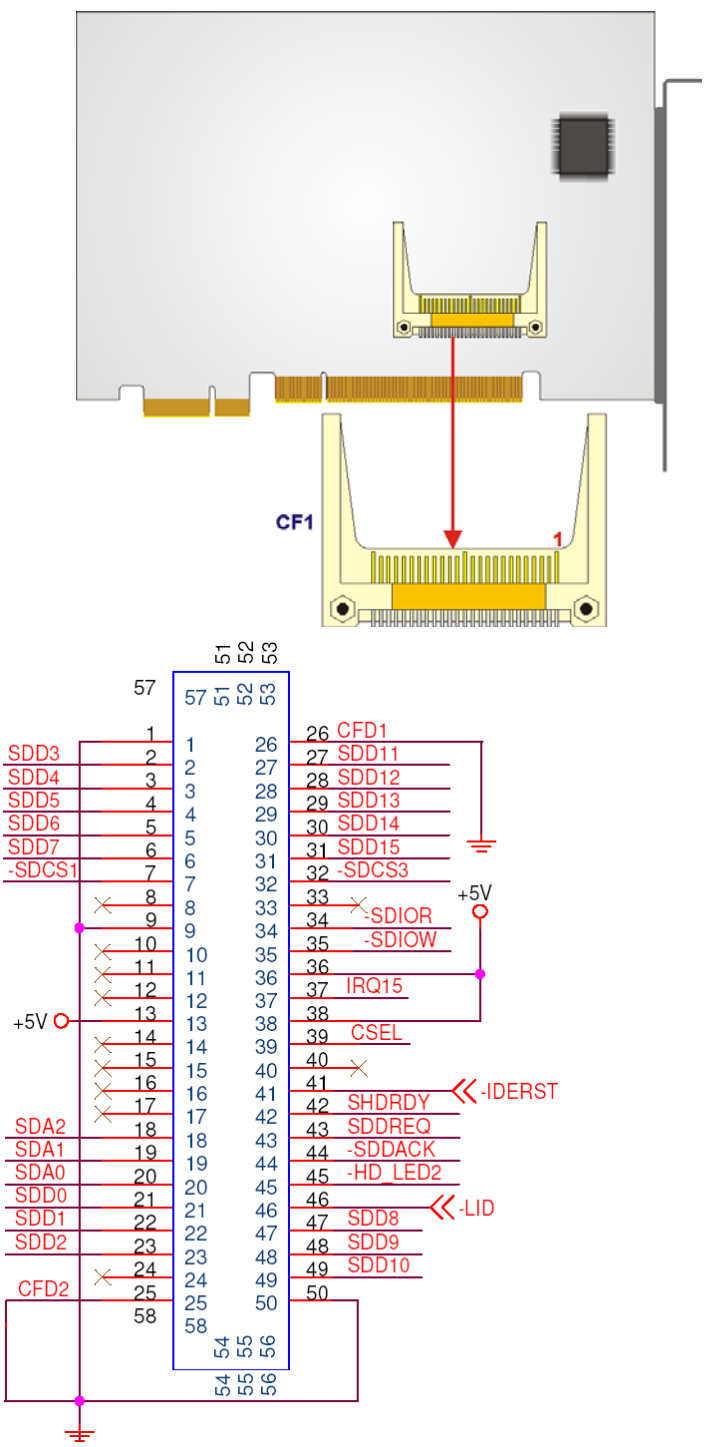

Figure 4-7: CF Card Socket Location

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GROUND	26	VCC-IN CHECK1
2	DATA 3	27	DATA 11
3	DATA 4	28	DATA 12
4	DATA 5	29	DATA 13
5	DATA 6	30	DATA 14
6	DATA 7	31	DATA 15
7	HDC_CS0#	32	HDC_CS1
8	N/C	33	N/C
9	GROUND	34	IOR#
10	N/C	35	IOW#
11	N/C	36	VCC_COM
12	N/C	37	IRQ15
13	VCC_COM	38	VCC_COM
14	N/C	39	CSEL
15	N/C	40	N/C
16	N/C	41	HDD_RESET
17	N/C	42	IORDY
18	SA2	43	SDREQ
19	SA1	44	SDACK#
20	SA0	45	HDD_ACTIVE#
21	DATA 0	46	66DET
22	DATA 1	47	DATA 8
23	DATA 2	48	DATA 9
24	N/C	49	DATA 10
25	VCC-IN CHECK2	50	GROUND

Table 4-7: CF Card Socket Pinouts

4.2.6 Digital Input/Output (DIO) Connector

CN Label: DIO1

CN Type: 10-pin header (2x5)

CN Location: See Figure 4-8

CN Pinouts: See Table 4-8

The digital input/output connector is managed through a Super I/O chip. The DIO connector pins are user programmable.

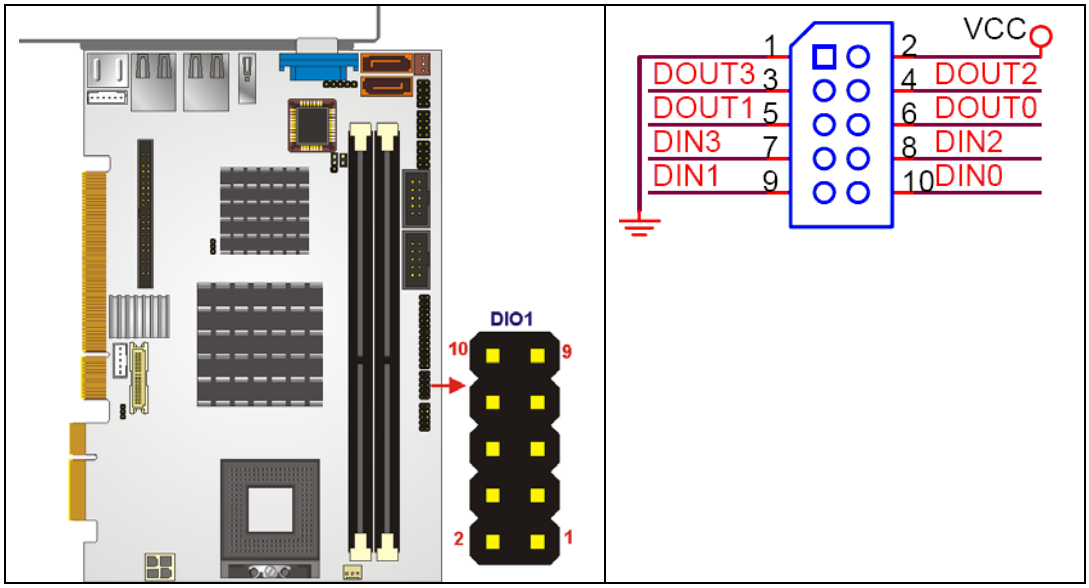

Figure 4-8: DIO Connector Connector Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	2	VCC
3	Output 3	4	Output 2
5	Output 1	6	Output 0
7	Input 3	8	Input 2
9	Input 1	10	Input 0

Table 4-8: DIO Connector Connector Pinouts

4.2.7 Fan Connector (+12V)

CN Label: **CPU_FAN1**

CN Type: 3-pin header

CN Location: See **Figure 4-9**

CN Pinouts: See **Table 4-9**

The cooling fan connector provides a 12V, 500mA current to a system cooling fan. The connector has a "rotation" pin to get rotation signals from fans and notify the system so the system BIOS can recognize the fan speed. Please note that only specified fans can issue the rotation signals.

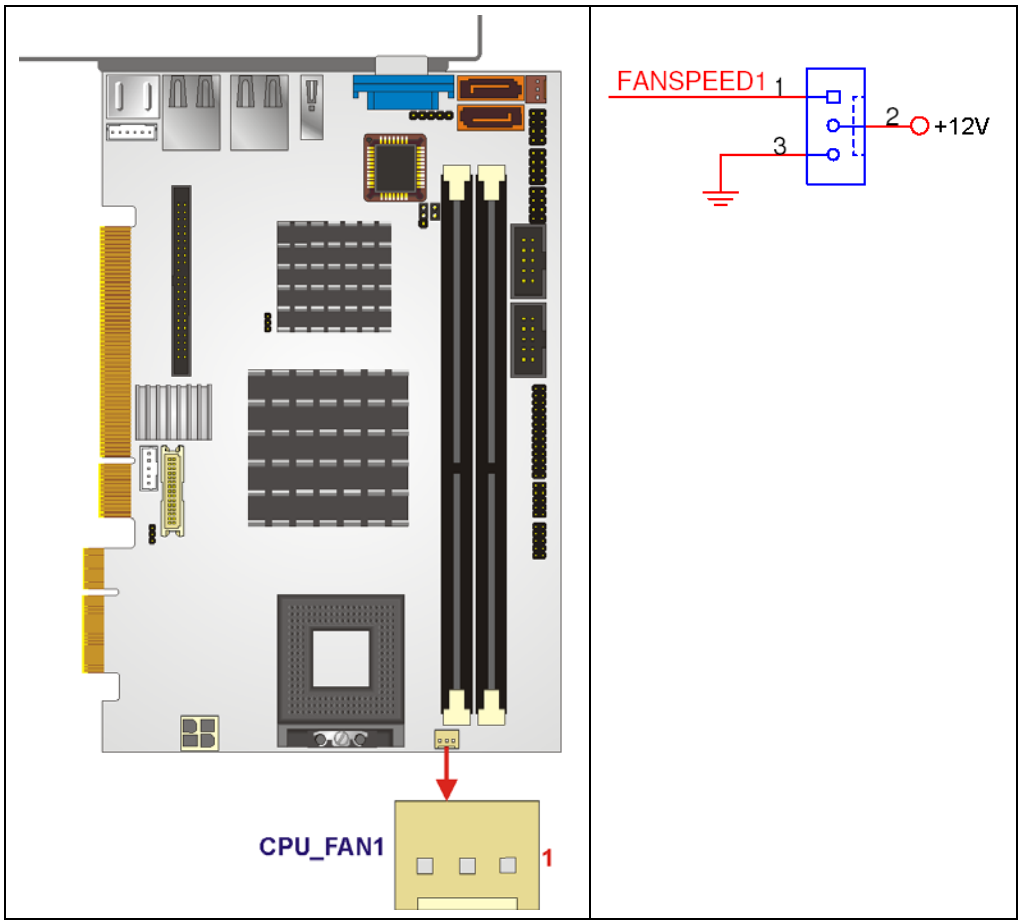

Figure 4-9: +12V Fan Connector Location

PIN NO.	DESCRIPTION
1	Fan Speed Detect
2	+12V
3	GND

Table 4-9: +12V Fan Connector Pinouts

4.2.8 Front Panel Connector (8-pin)

CN Label: F_PANEL1

CN Type: 8-pin header (2x8)

CN Location: See Figure 4-10

CN Pinouts: See Table 4-10

The front panel connector connects to external switches and indicators to monitor and controls the motherboard. These indicators and switches include:

- Power button
- Reset button
- Power LED
- HDD LED

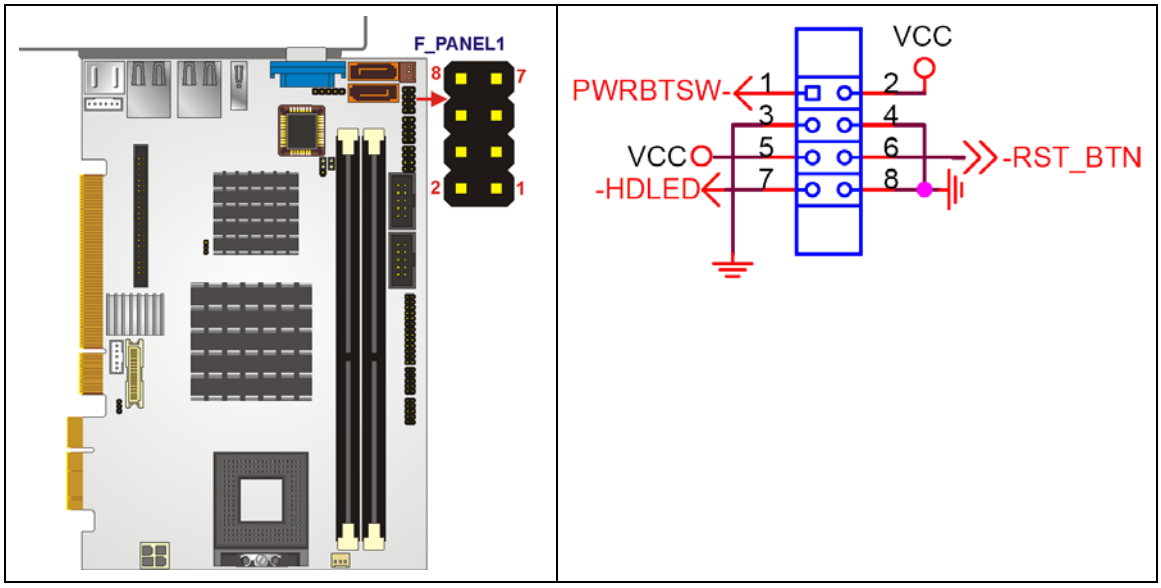

Figure 4-10: Front Panel Connector Pinout Locations

FUNCTION	PIN	DESCRIPTION	FUNCTION	PIN	DESCRIPTION
Power Button	1	PWRBTSW-	Power LED	2	VCC
	3	GND		4	Ground
HDD LED	5	VCC	Reset	6	SYSRST-
	7	HDD LED-		8	GND

Table 4-10: Front Panel Connector Pinouts

4.2.9 IDE Connector (44-pin)

CN Label: IDE1

CN Type: 44-pin header (2x22)

CN Location: See Figure 4-11

CN Pinouts: See Table 4-11

One 44-pin IDE device connector on the PICOe-9452 supports connectivity to two hard disk drives.

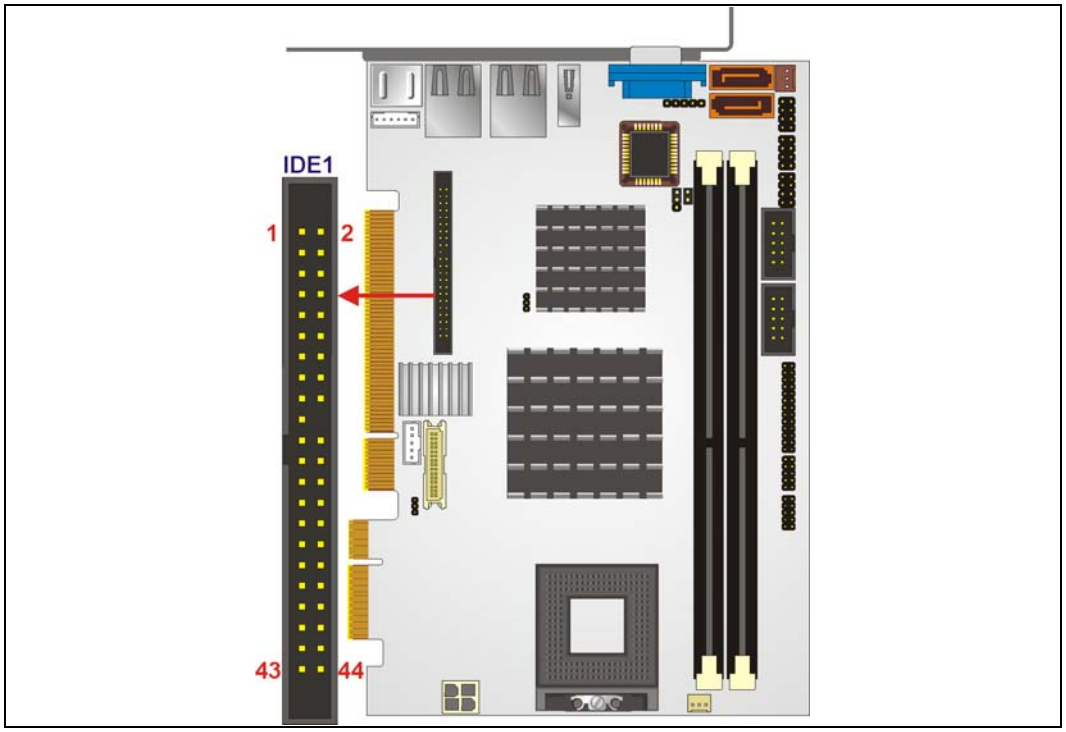

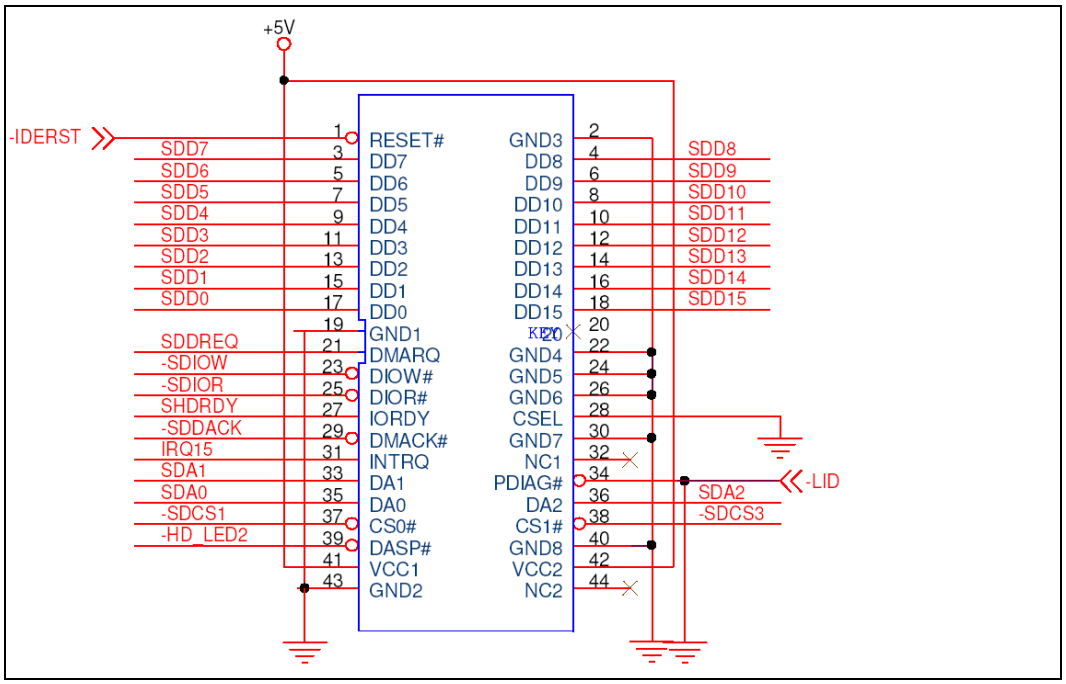

Figure 4-11: IDE Device Connector Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	RESET#	2	GROUND
3	DATA 7	4	DATA 8
5	DATA 6	6	DATA 9
7	DATA 5	8	DATA 10
9	DATA 4	10	DATA 11
11	DATA 3	12	DATA 12
13	DATA 2	14	DATA 13
15	DATA 1	16	DATA 14
17	DATA 0	18	DATA 15
19	GROUND	20	N/C
21	IDE DRQ	22	GROUND
23	IOW#	24	GROUND
25	IOR#	26	GROUND
27	IDE CHRDY	28	GROUND
29	IDE DACK	30	GROUND–DEFAULT
31	INTERRUPT	32	N/C

33	SA1	34	N/C
35	SA0	36	SA2
37	HDC CS0#	38	HDC CS1#
39	HDD ACTIVE#	40	GROUND
41	VCC	42	VCC
43	GROUND	44	N/C

Table 4-11: IDE Connector Pinouts

4.2.10 Infrared Interface Connector (5-pin)

CN Label: **IR1**

CN Type: 5-pin header (1x5)

CN Location: See **Figure 4-12**

CN Pinouts: See **Table 4-12**

The infrared interface connector supports both Serial Infrared (SIR) and Amplitude Shift Key Infrared (ASKIR) interfaces.

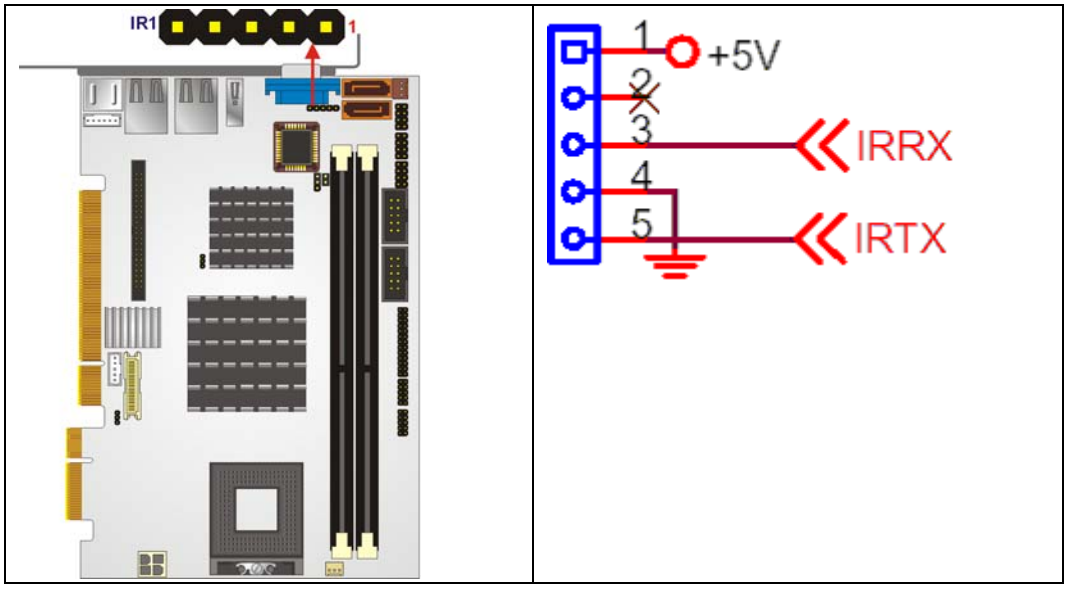

Figure 4-12: Infrared Connector Pinout Locations

PIN NO.	DESCRIPTION
1	VCC
2	NC
3	IR-RX
4	GND
5	IR-TX

Table 4-12: Infrared Connector Pinouts

4.2.11 Keyboard/Mouse Connector

CN Label: **KB_MS1**

CN Type: 6-pin header (1x6)

CN Location: See **Figure 4-13**

CN Pinouts: See **Table 4-13**

The keyboard and mouse connector can be connected to a standard PS/2 cable or PS/2 Y-cable to add keyboard and mouse functionality to the system.

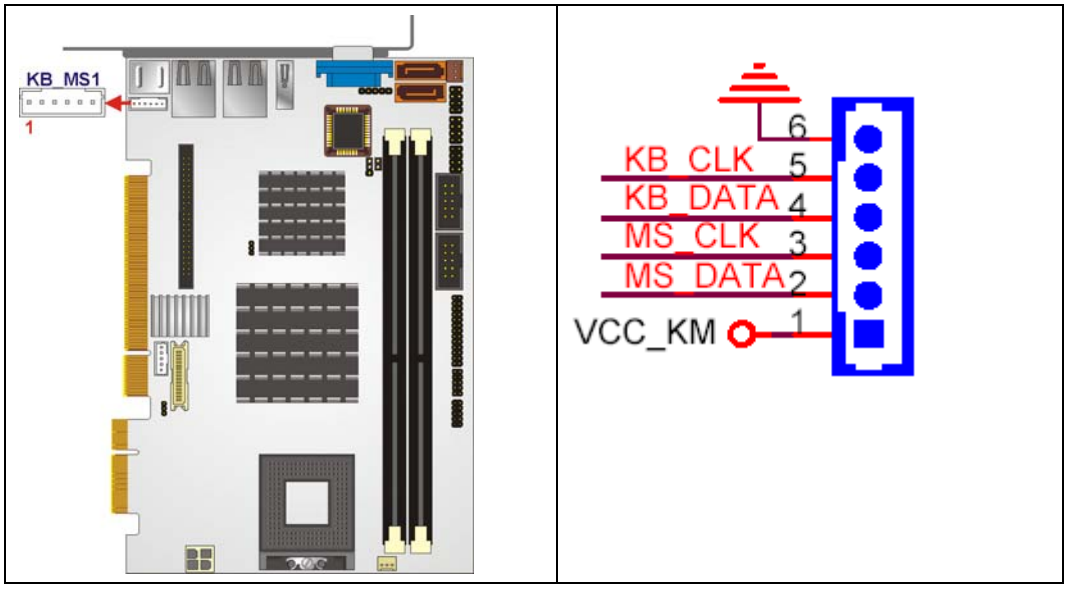

Figure 4-13: Keyboard/Mouse Connector Location

PIN NO.	DESCRIPTION
1	+5V KB DATA
2	MS DATA
3	MS CLK
4	KB DATA
5	KB CLK
6	GROUND

Table 4-13: Keyboard/Mouse Connector Pinouts

4.2.12 LVDS LCD Connector

CN Label: LVDS1

CN Type: 30-pin crimp (2x10)

CN Location: See Figure 4-14

CN Pinouts: See Table 4-14

The 30-pin LVDS LCD connector can be connected to single channel or dual channel, 18-bit LVDS panel.

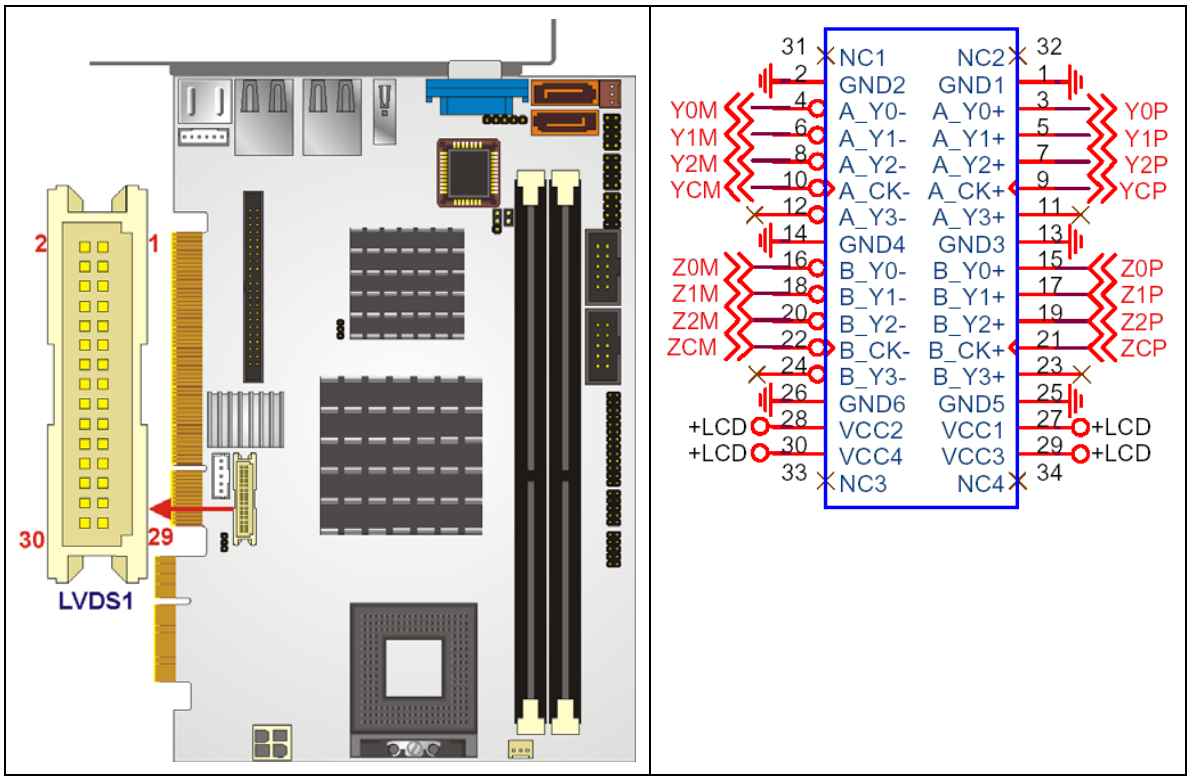

Figure 4-14: LVDS LCD Connector Pinout Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GROUND	2	GROUND
3	LVDSA_Y0+	4	LVDSA_Y0-
5	LVDSA_Y1+	6	LVDSA_Y1-
7	LVDSA_Y2+	8	LVDSA_Y2-
9	LVDSA_CLK+	10	LVDSA_CLK-
11	N/C	12	N/C
13	GROUND	14	GROUND
15	LVDSB_Y0+	16	LVDSB_Y0-
17	LVDSB_Y1+	18	LVDSB_Y1-
19	LVDSB_Y2+	20	LVDSB_Y2-
21	LVDSB_CLK+	22	LVDSB_CLK-
23	N/C	12	N/C
25	GROUND	26	GROUND
27	VCC_LVDS	28	VCC_LVDS

29	VCC_LVDS	30	VCC_LVDS

Table 4-14: LVDS LCD Port Connector Pinouts

4.2.13 Parallel Port Connector

CN Label: LPT1

CN Type: 26-pin box header

CN Location: See Figure 4-15

CN Pinouts: See Table 4-15

The 26-pin parallel port connector connects to a parallel port connector interface or some other parallel port device such as a printer.

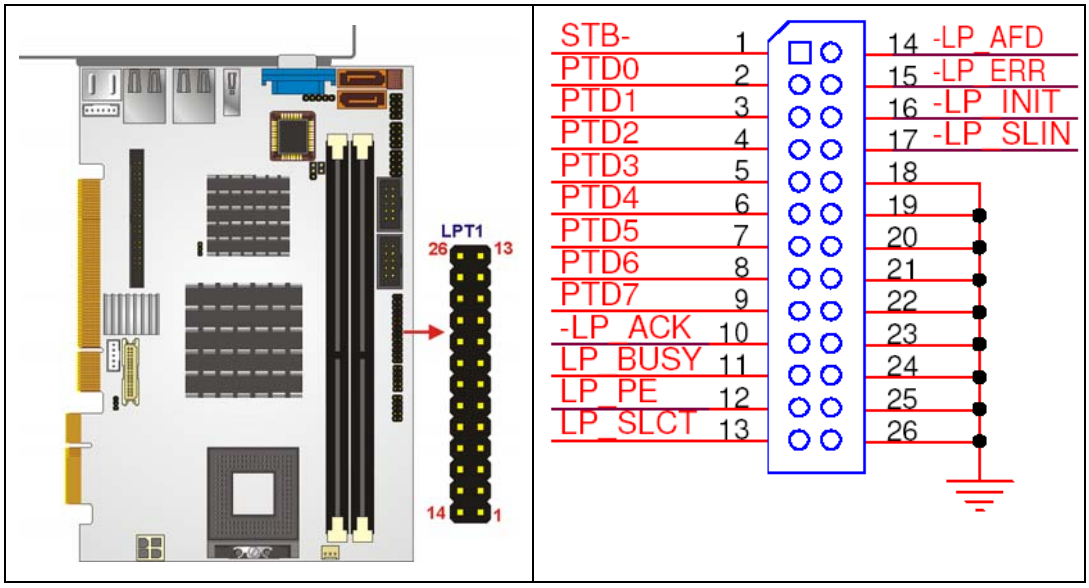

Figure 4-15: Parallel Port Connector Location

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	STROBE#	2	DATA 0
3	DATA 1	4	DATA 2
5	DATA 3	6	DATA 4
7	DATA 5	8	DATA 6

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
9	DATA 7	10	ACKNOWLEDGE
11	BUSY	12	PAPER EMPTY
13	PRINTER SELECT	14	AUTO FORM FEED #
15	ERROR#	16	INITIALIZE
17	PRINTER SELECT LN#	18	GROUND
19	GROUND	20	GROUND
21	GROUND	22	GROUND
23	GROUND	24	GROUND
25	GROUND	26	NC

Table 4-15: Parallel Port Connector Pinouts

4.2.14 SATA Drive Connectors

CN Label: SATA1 and SATA2

CN Type: 7-pin SATA drive connectors

CN Location: See Figure 4-16

CN Pinouts: See Table 4-16

The two SATA drive connectors are each connected to a first generation SATA drive. First generation SATA drives transfer data at speeds as high as 150Mb/s.

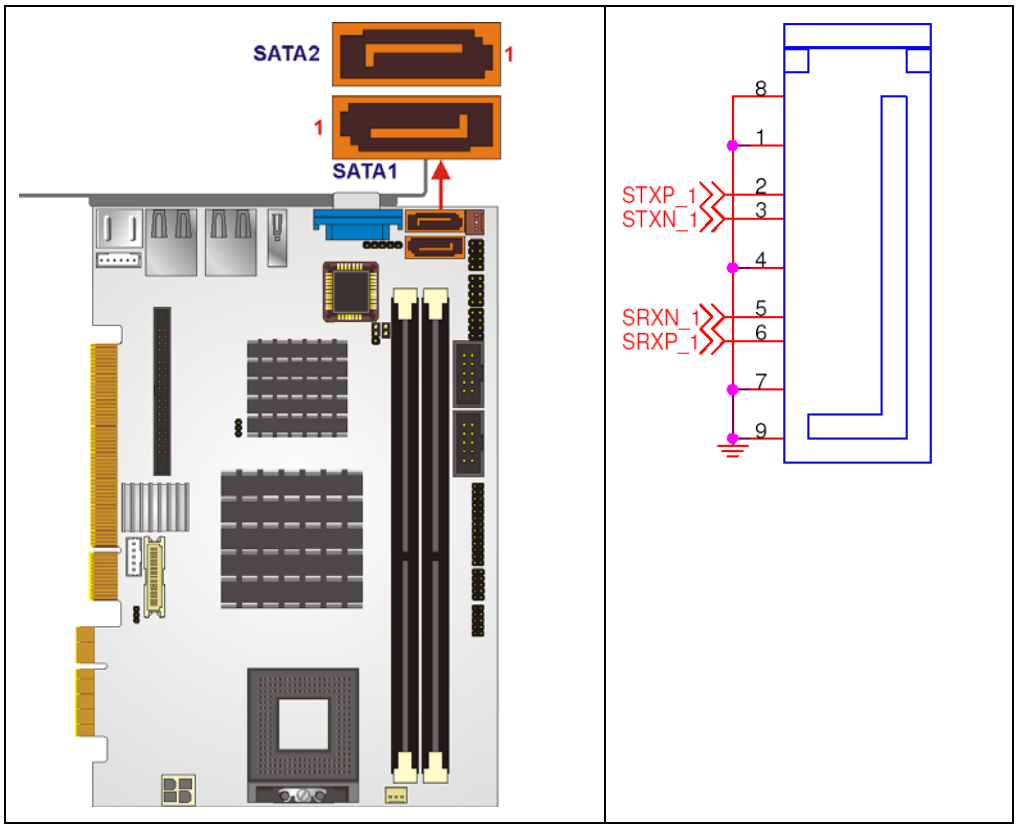

Figure 4-16: SATA Drive Connector Locations

PIN NO.	DESCRIPTION
1	GND
2	TX+
3	TX-
4	GND
5	RX-
6	RX+
7	GND

Table 4-16: SATA Drive Connector Pinouts

4.2.15 Serial Port Connector (COM1 and COM2)

CN Label: COM1 and COM2

CN Type: 10-pin header (2x5)

CN Location: See Figure 4-17

CN Pinouts: See Table 4-17

The 10-pin serial port connector provides a second RS-232 serial communications channel. The COM 2 serial port connector can be connected to external RS-232 serial port devices.

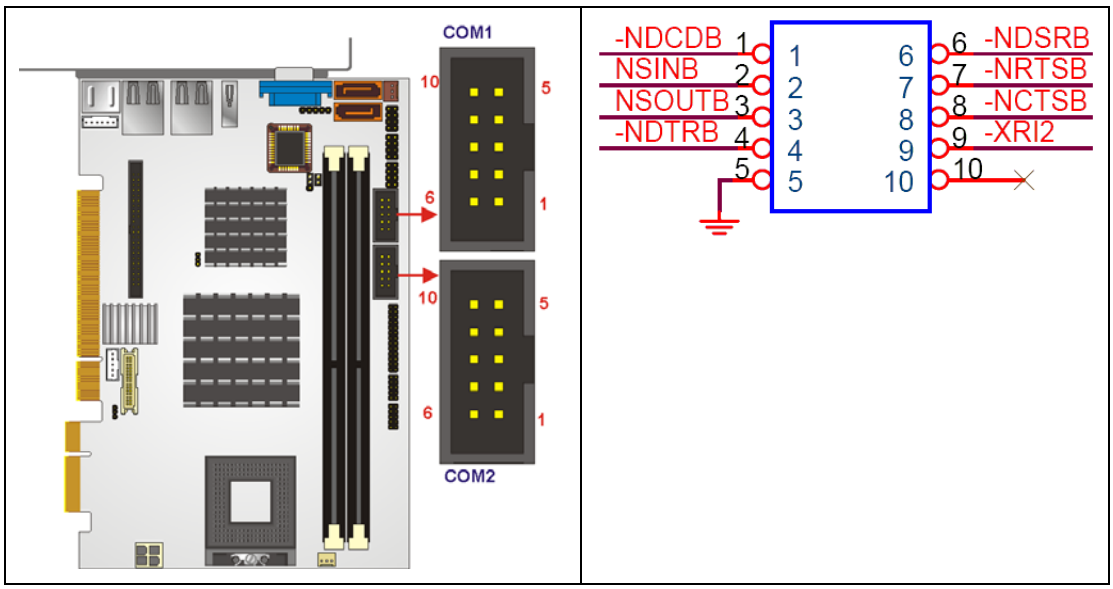

Figure 4-17: COM1 and COM2 Connector Pinout Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	Data Carrier Detect (DCD)	6	Data Set to Ready (DSR)
2	Receive Data (RXD)	7	Request to Send (RTS)
3	Transmit Data (TXD)	8	Clear to Sent (CTS)
4	Data Terminal Ready (DTR)	9	Ring Indicator (RI)
5	Ground (GND)	10	N/C

Table 4-17: COM3 and COM4

4.2.16 USB Connectors (Internal)

CN Label: USB1_2 and USB3_4

CN Type: 8-pin header (2x4)

CN Location: See Figure 4-18

CN Pinouts: See Table 4-18

The 2x4 USB pin connectors each provide connectivity to two USB 1.1 or two USB 2.0 ports. Each USB connector can support two USB devices.. Additional external USB ports are found on the rear panel. The USB ports are used for I/O bus expansion.

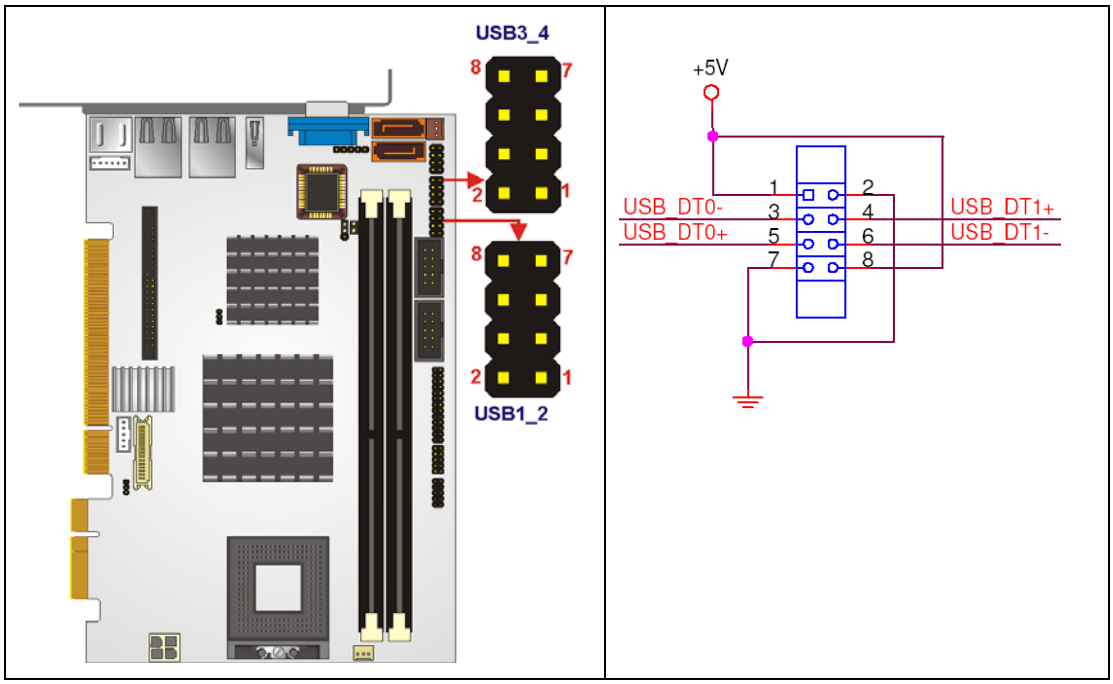

Figure 4-18: USB Connector Pinout Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	VCC	2	GND
3	DATAN-	4	DATA1M+
5	DATAN+	6	DATAM-
7	GND	8	VCC

Table 4-18: USB Port Connector Pinouts

4.3 External Peripheral Interface Connector Panel

Figure 4-19 shows the PICOe-9452 rear panel. The PICOe-9452 rear panel consists of two RJ-45 Ethernet connectors, a PS/2 keyboard connector a USB port and a VGA connector. These connectors are accessible when the PICOe-9452 is installed in a chassis.

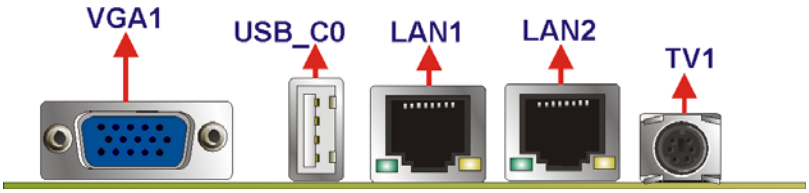

Figure 4-19: PICOe-9452 External Peripheral Interface Connector

4.3.1 LAN Connectors

CN Label: LAN1 and LAN2

CN Type: RJ-45

CN Location: See **Figure 4-19**

CN Pinouts: See **Table 4-19**

The PICOe-9452 is equipped with two built-in RJ-45 Ethernet controllers. The controllers can connect to the LAN through two RJ-45 LAN connectors. There are two LEDs on the connector indicating the status of LAN. The pin assignments are listed in the following table:

PIN	DESCRIPTION	PIN	DESCRIPTION
1	TXA+	5	TXC-
2	TXA-	6	TXB-
3	TXB+	7	TXD+
4	TXC+	8	TXD-

Table 4-19: LAN Pinouts

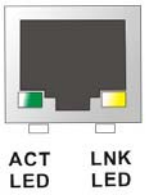

Figure 4-20: RJ-45 Ethernet Connector

The RJ-45 Ethernet connector has two status LEDs, one green and one yellow. The green LED indicates activity on the port and the yellow LED indicates the port is linked. See **Table 4-20**.

STATUS	DESCRIPTION	STATUS	DESCRIPTION
GREEN	Activity	YELLOW	Linked

Table 4-20: RJ-45 Ethernet Connector LEDs

4.3.2 TV Connector

CN Label: TV1

CN Type: 7-pin Mini-DIN

CN Location: See Figure 4-19

CN Pinouts: See Table 4-21

A 7-pin mini DIN connector (TV1) is located on the mounting bracket for easy connection to a TV OUT cable.

PIN NO.	DESCRIPTION
1	GND
2	BLUE_CVBS
3	GND
4	GREEN_Y
5	NC
6	RED_C
7	GND

Table 4-21: TV1 Pinouts

4.3.3 USB Connector

CN Label: USB_C0

CN Type: USB port

CN Location: See Figure 4-19

CN Pinouts: See Table 4-22

The PICOe-9452 has a one external USB 2.0 port. The port connects to both USB 2.0 and USB 1.1 devices.

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	USBV3L 5V	2	GND
3	USBP4N	4	USBP5P
5	USBP4P	6	USBP5N
7	GND	8	USBV3L 5V

Table 4-22: USB Port Pinouts

4.3.4 VGA Connector

CN Label: VGA1

CN Type: 15-pin Female

CN Location: See Figure 4-19

CN Pinouts: See Figure 4-21 and Table 4-23

The PICOe-9452 has a single 15-pin female connector for connectivity to standard display devices.

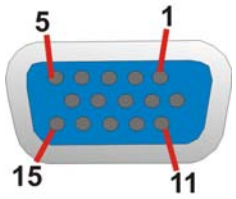

Figure 4-21: VGA Connector

PIN	DESCRIPTION	PIN	DESCRIPTION
1	RED	2	GREEN
3	BLUE	4	NC
5	GND	6	GND
7	GND	8	GND
9	VCC / NC	10	GND
11	NC	12	DDC DAT
13	HSYNC	14	VSYNC
15	DDCCLK		

Table 4-23: VGA Connector Pinouts

THIS PAGE IS INTENTIONALLY LEFT BLANK

Chapter

5

Installation

5.1 Anti-static Precautions

WARNING:

Failure to take ESD precautions during the installation of the PICOe-9452 may result in permanent damage to the PICOe-9452 and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the PICOe-9452. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the PICOe-9452, or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- ***Wear an anti-static wristband***: - Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- ***Self-grounding***:- Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- ***Use an anti-static pad***: When configuring the PICOe-9452, place it on an antic-static pad. This reduces the possibility of ESD damaging the PICOe-9452.
- ***Only handle the edges of the PCB***:-: When handling the PCB, hold the PCB by the edges.

5.2 Installation Considerations

NOTE:

The following installation notices and installation considerations should be read and understood before the PICOe-9452 is installed. All installation notices pertaining to the installation of the PICOe-9452 should be strictly adhered to. Failing to adhere to these precautions may lead to severe damage of the PICOe-9452 and injury to the person installing the motherboard.

5.2.1 Installation Notices

WARNING

The installation instructions described in this manual should be carefully followed in order to prevent damage to the PICOe-9452, PICOe-9452 components and injury to the user.

Before and during the installation please **DO** the following:

- **Read the user manual**:
  - The user manual provides a complete description of the PICOe-9452 installation instructions and configuration options.
- **Wear an electrostatic discharge cuff (ESD)**:
  - Electronic components are easily damaged by ESD. Wearing an ESD cuff removes ESD from the body and helps prevent ESD damage.
- **Place the PICOe-9452 on an antistatic pad**:
  - When installing or configuring the motherboard, place it on an antistatic pad. This helps to prevent potential ESD damage.
- **Turn all power to the PICOe-9452 off**:

- When working with the PICOe-9452, make sure that it is disconnected from all power supplies and that no electricity is being fed into the system.

Before and during the installation of the PICOe-9452 **DO NOT:**

- Remove any of the stickers on the PCB board. These stickers are required for warranty validation.
- Use the product before verifying all the cables and power connectors are properly connected.
- Allow screws to come in contact with the PCB circuit, connector pins, or its components.

5.2.2 Installation Checklist

The following checklist is provided to ensure the PICOe-9452 is properly installed.

- All the items in the packing list are present
- The CPU is installed
- The CPU cooling kit is properly installed
- A compatible memory module is properly inserted into the slot
- The CF Type I or CF Type II card is properly installed into the CF socket
- The jumpers have been properly configured
- The PICOe-9452 is inserted into a chassis with adequate ventilation
- The correct power supply is being used
- The following devices are properly connected
  - IDE device
  - SATA drives
  - Keyboard and mouse cable
  - Audio kit
  - Power supply
  - USB cable
  - Serial port cable
  - Parallel port cable
- The following external peripheral devices are properly connected to the chassis:
  - VGA screen

- Keyboard
- Mouse
- RS-232 serial communications device

5.3 CPU, CPU Cooling Kit and DIMM Installation

WARNING:

A CPU should never be turned on without the specified cooling kit being installed. If the cooling kit (heat sink and fan) is not properly installed and the system turned on, permanent damage to the CPU, PICOe-9452 and other electronic components attached to the system may be incurred. Running a CPU without a cooling kit may also result in injury to the user.

The CPU, CPU cooling kit and DIMM are the most critical components of the PICOe-9452. If one of these component is not installed the PICOe-9452 cannot run.

5.3.1 Socket M CPU Installation

WARNING:

CPUs are expensive and sensitive components. When installing the CPU please be careful not to damage it in anyway. Make sure the CPU is installed properly and ensure the correct cooling kit is properly installed.

To install a Socket M CPU onto the PICOe-9452, follow the steps below:

WARNING:

When handling the CPU, only hold it on the sides. DO NOT touch the pins at the bottom of the CPU.

Step 1: **Unlock the CPU retention screw.** When shipped, the retention screw of the CPU socket should be in the unlocked position. If it is not in the unlocked position, use a screwdriver to unlock the screw. See **Figure 5-1**.

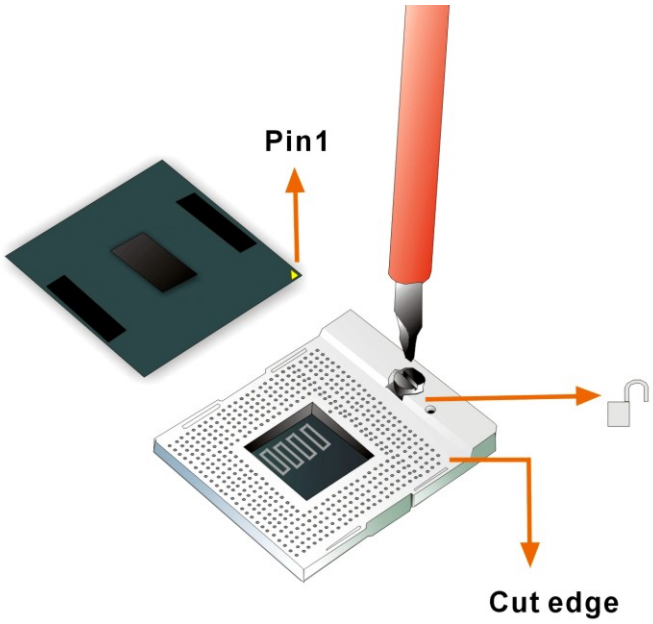

Figure 5-1: Make sure the CPU socket retention screw is unlocked

Step 2: **Inspect the CPU socket.** Make sure there are no bent pins and make sure the socket contacts are free of foreign material. If any debris is found, remove it with compressed air.

Step 3: **Correctly Orientate the CPU**. Make sure the IHS (integrated heat sink) side is facing upwards.

Step 4: **Correctly position the CPU.** Match the Pin 1 mark with the cut edge on the CPU socket. See **Figure 5-1**.

Step 5: **Align the CPU pins.** Carefully align the CPU pins with the holes in the CPU socket.

Step 6: **Insert the CPU.** Gently insert the CPU into the socket. If the CPU pins are properly aligned, the CPU should slide into the CPU socket smoothly.

Step 7: **Lock the retention screw.** Rotate the retention screw into the locked position. See **Figure 5-2**.

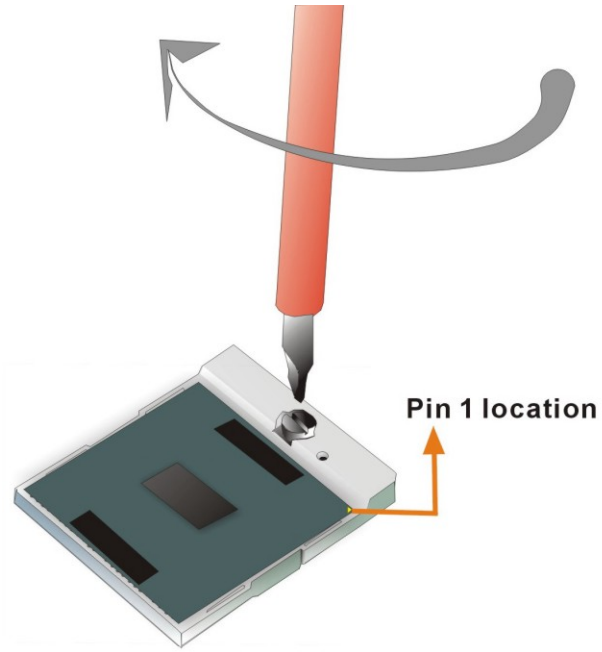

Figure 5-2: Lock the CPU Socket Retention Screw

5.3.2 Cooling Kit CF-479B-RS Installation

Figure 5-3: IEI CF-479B-RS Cooling Kit

An IEI Socket M CPU cooling kit can be purchased separately. The cooling kit comprises a CPU heat sink and a cooling fan.

WARNING:

Do not wipe off (accidentally or otherwise) the pre-sprayed layer of thermal paste on the bottom of the [Fan model#] heat sink. The thermal paste between the CPU and the heat sink is important for optimum heat dissipation.

To install the CF-479B-RS cooling kit, please follow the steps below.

Step 1: **Place the cooling kit onto the CPU**. Make sure the CPU cooling fan cable can be properly routed when the cooling kit is installed.

Step 2: **Properly align the cooling kit**. Make sure its four spring screw fasteners can pass through the pre-drilled holes on the PCB.

Step 3: **Secure the cooling kit**. From the solder side of the PCB, align the support bracket to the screw threads on heat sink that were inserted through the PCB holes. (See **Figure 5-4**)

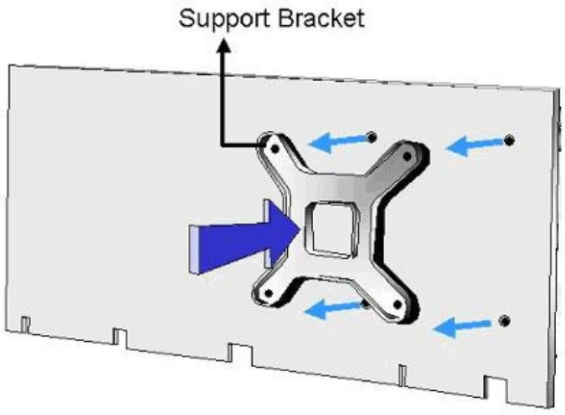

Figure 5-4: Cooling Kit Support Bracket

Step 4: **Tighten the screws**. Use a screwdriver to tighten the four screws. Tighten each nut a few turns at a time and do not over-tighten the screws.

Step 5: **Connect the fan cable**. Connect the cooling kit fan cable to the fan connector on the motherboard. Carefully route the cable and avoid heat generating chips and fan blades. See **Figure 5-5**.

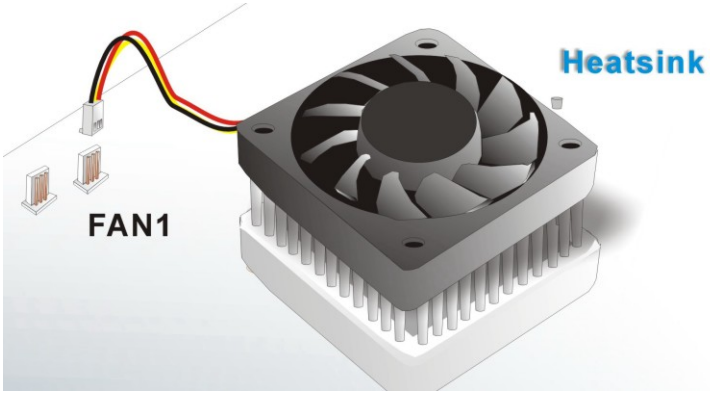

Figure 5-5: Connect the cooling fan cable

5.3.3 DIMM Installation

WARNING:

Using incorrectly specified DIMM may cause permanently damage the PICOe-9452. Please make sure the purchased DIMM complies with the memory specifications of the PICOe-9452. DIMM specifications compliant with the PICOe-9452 are listed in **Chapter 2**.

To install a DIMM into a DIMM socket, please follow the steps below and refer to **Figure 5-6**.

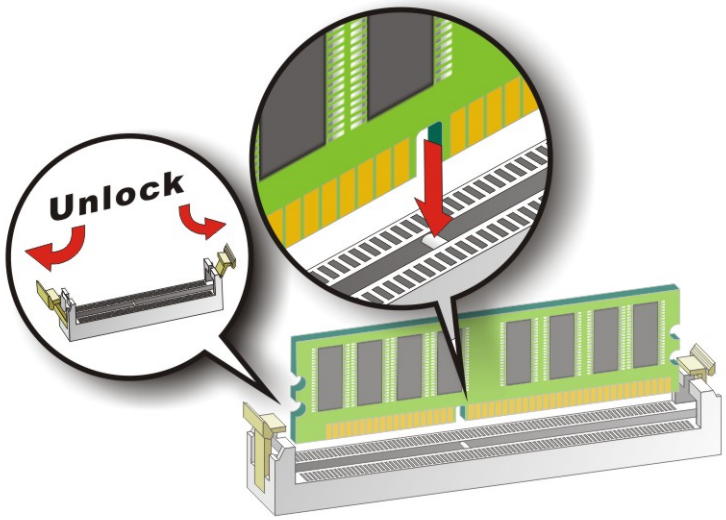

Figure 5-6: Installing a DIMM

Step 1: **Open the DIMM socket handles**. The DIMM socket has two handles that secure the DIMM into the socket. Before the DIMM can be inserted into the socket, the handles must be opened. See **Figure 5-6**.

Step 2: **Align the DIMM with the socket**. The DIMM must be oriented in such a way that the notch in the middle of the DIMM must be aligned with the plastic bridge

in the socket. See **Figure 5-6**.

Step 3: **Insert the DIMM**. Once properly aligned, the DIMM can be inserted into the socket. As the DIMM is inserted, the white handles on the side of the socket will close automatically and secure the DIMM to the socket. See **Figure 5-6**.

Step 4: **Removing a DIMM**. To remove a DIMM, push both handles outward. The memory module is ejected by a mechanism in the socket.

5.3.4 CF Card Installation

NOTE:

The PICOe-9452 can support both CF Type I cards and CF Type II cards. For the complete specifications of the supported CF cards please refer to **Chapter 2**.

To install the a CF card (Type 1 or Type 2) onto the PICOe-9452, please follow the steps below:

Step 1: **Locate the CF card socket**. Place the PICOe-9452 on an anti-static pad with the solder side facing up. Locate the CF card.

Step 2: **Align the CF card**. Make sure the CF card is properly aligned with the CF socket.

Step 3: **Insert the CF card**. Gently insert the CF card into the socket making sure the socket pins are properly inserted into the socket. See **Figure 5-7**.

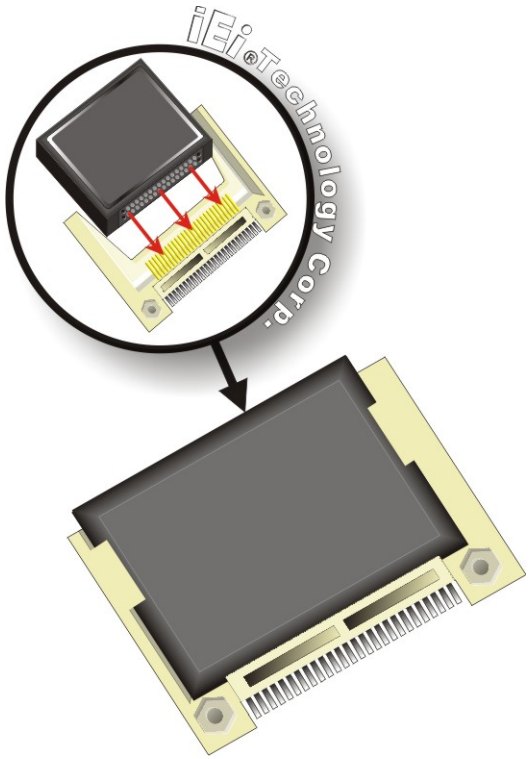

Figure 5-7: CF Card Installation

5.4 Jumper Settings

NOTE:

A jumper is a metal bridge used to close an electrical circuit. It consists of two or three metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To CLOSE/SHORT a jumper means connecting the pins of the jumper with the plastic clip and to OPEN a jumper means removing the plastic clip from a jumper.

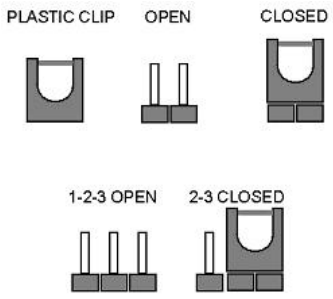

Figure 5-8: Jumper Locations

Before the PICOe-9452 is installed in the system, the jumpers must be set in accordance with the desired configuration. The jumpers on the PICOe-9452 are listed in **Table 5-1**.

Description	Label	Type
CF card setup	J_CF1	3-pin header
Clear CMOS	J_CMOS1	3-pin header
LVDS voltage selection	J_VLVDS1	3-pin header
PCIe interface setup	JP1	2-pin header

Table 5-1: Jumpers

5.4.1 CF Card Setup

Jumper Label: J_CF1

Jumper Type: 3-pin header

Jumper Settings: See Table 5-2

Jumper Location: See Figure 5-9

The CF Card Setup jumper sets the CF Type I card or CF Type II cards as either the slave device or the master device. CF Card Setup jumper settings are shown in **Table 5-2**.

CF Card Setup	Description	
Short 1-2	Master	
Short 2-3	Slave	Default

Table 5-2: CF Card Setup Jumper Settings

The CF Card Setup jumper location is shown in **Figure 5-9**.

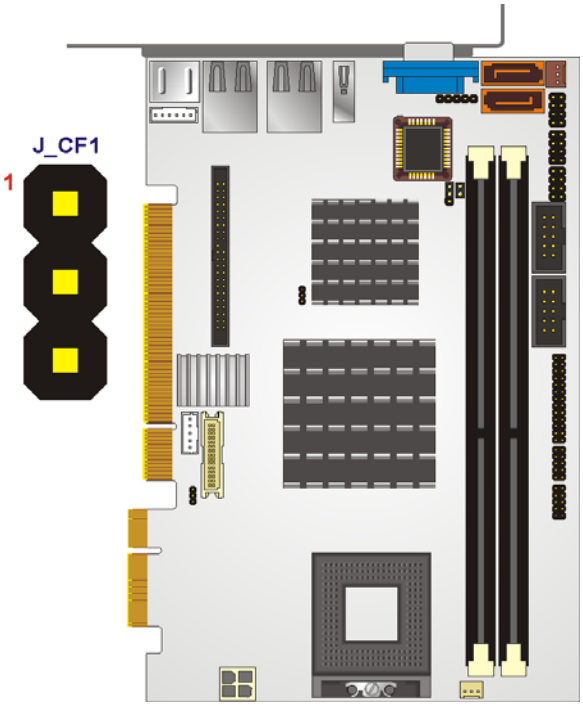

Figure 5-9: CF Card Setup Jumper Location

5.4.2 Clear CMOS Jumper

Jumper Label:	J_CMOS1
Jumper Type:	3-pin header
Jumper Settings:	See Table 5-3
Jumper Location:	See Figure 5-10

If the PICOe-9452 fails to boot due to improper BIOS settings, the clear CMOS jumper clears the CMOS data and resets the system BIOS information. To do this, use the jumper cap to close pins 2 and 3 for a few seconds then reinstall the jumper clip back to pins 1 and 2.

If the “CMOS Settings Wrong” message is displayed during the boot up process, the fault may be corrected by pressing the F1 to enter the CMOS Setup menu. Do one of the following:

- Enter the correct CMOS setting
- Load Optimal Defaults
- Load Failsafe Defaults.

After having done one of the above, save the changes and exit the CMOS Setup menu.

The clear CMOS jumper settings are shown in **Table 5-3**.

AT Power Select	Description	
Short 1 - 2	Keep CMOS Setup	Default
Short 2 - 3	Clear CMOS Setup	

Table 5-3: Clear CMOS Jumper Settings

The location of the clear CMOS jumper is shown in **Figure 5-10** below.

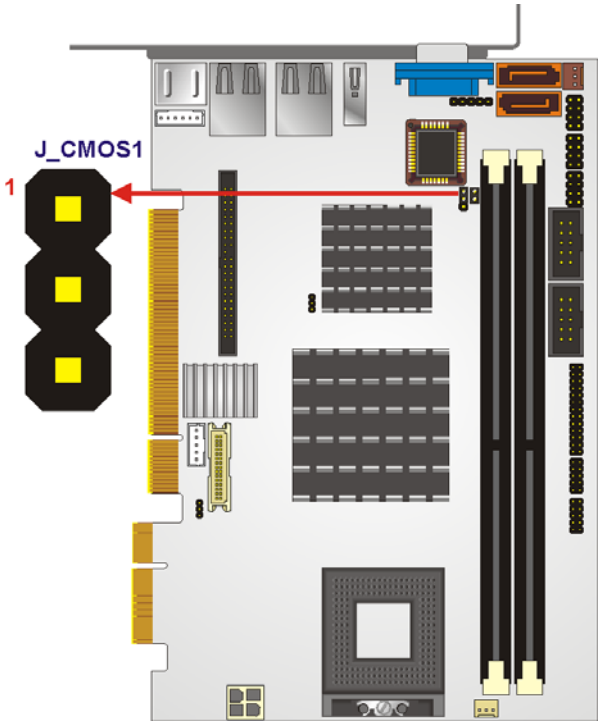

Figure 5-10: Clear CMOS Jumper

5.4.3 LVDS Voltage Selection

WARNING:

Permanent damage to the screen and PICOe-9452 may occur if the wrong voltage is selected with this jumper. Please refer to the user guide that cam with the monitor to select the correct voltage.

Jumper Label:	J_LVDS1
Jumper Type:	3-pin header
Jumper Settings:	See Table 5-4
Jumper Location:	See Figure 5-11

The **LVDS Voltage Selection** jumper allows the LVDS screen voltage to be set. The **LVDS Voltage Selection** jumper settings are shown in **Table 5-4**.

AT Power Select	Description	
Short 1-2	+3V LVDS	Default
Short 2-3	+5V LVDS	

Table 5-4: LVDS Voltage Selection Jumper Settings

The LVDS Voltage Selection jumper location. is shown in **Figure 5-11**.

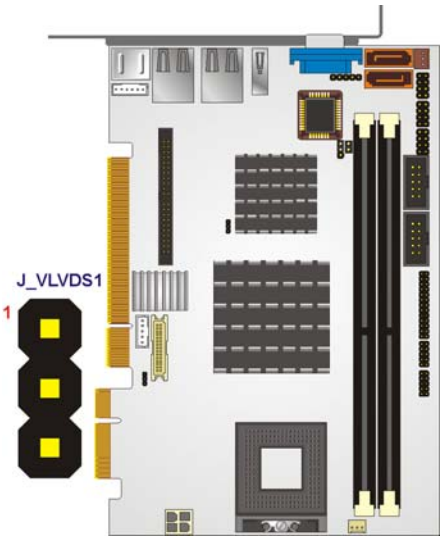

Figure 5-11: LVDS Voltage Selection Jumper Pinout Locations

5.4.4 PCIe Interface Setup

Jumper Label: JP1

Jumper Type: 3-pin header

Jumper Settings: See **Table 5-5**

Jumper Location: See **Figure 5-12**

The **PCIe Interface Select** jumper sets the PCIe bus as either PCIe x1 or PCIe x4. The **PCIe Interface Select** jumper settings are shown in **Table 5-5**.

AT Power Select	Description	
Short 1-2	PCIe x1	Default
Open 1-2	PCIe x4	

Table 5-5: PCIe Interface Select Jumper Settings

The **PCIe Interface Select** jumper location. is shown in **Figure 5-12**.

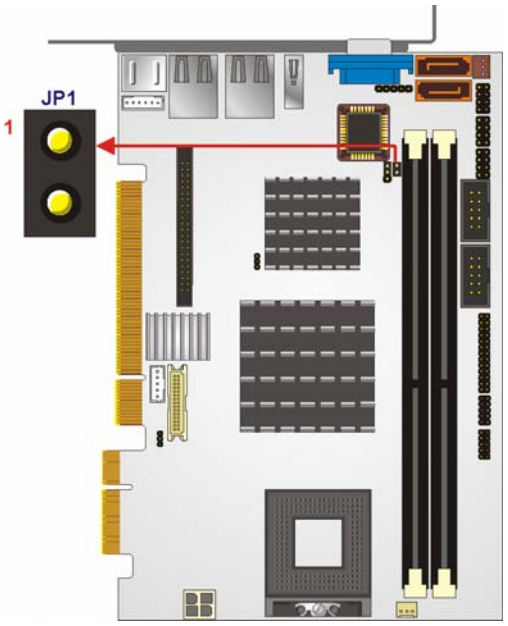

Figure 5-12: PCIe Interface Select Jumper Pinout Locations

5.5 Chassis Installation

5.5.1 Airflow

WARNING:

Airflow is critical to the cooling of the CPU and other onboard components. The chassis in which the PICOe-9452 must have air vents to allow cool air to move into the system and hot air to move out.

The PICOe-9452 must be installed in a chassis with ventilation holes on the sides allowing airflow to travel through the heat sink surface. In a system with an individual power supply unit, the cooling fan of a power supply can also help generate airflow through the board surface.

NOTE:

IEI has a wide range of chassis available. Please refer to **Chapter 2** in this manual or contact your PICOe-9452 vendor, reseller or an IEI sales representative at sales@iei.com.tw or visit the IEI website (http://www.ieiworld.com.tw) to find out more about the available chassis.

5.6 Internal Peripheral Device Connections

5.6.1 Peripheral Device Cables

The cables listed in **Table 5-6** are shipped with the PICOe-9452.

Quantity	Type
1	IDE Cable
1	KB/MS cable
1	Dual RS-232 cable
2	SATA drive cables
1	SATA drive power cable
1	Dual USB cable

Table 5-6: IEI Provided Cables

Optional cables are listed below:

- 7.1 channel audio kit
- 5.1 channel audio kit
- LPT cable
- S-video cable

5.6.2 IDE Cable Connection

The IDE flat cable connects to the PICOe-9452 to one or two IDE devices. To connect an IDE HDD to the PICOe-9452 please follow the instructions below.

Step 1: **Locate the IDE connector**. The location/s of the IDE device connector/s is/are shown in **Chapter 3**..

Step 2: **Insert the connector**. Connect the IDE cable connector to the onboard connector. See **Figure 5-13**. A key on the front of the cable connector ensures it can only be inserted in one direction.

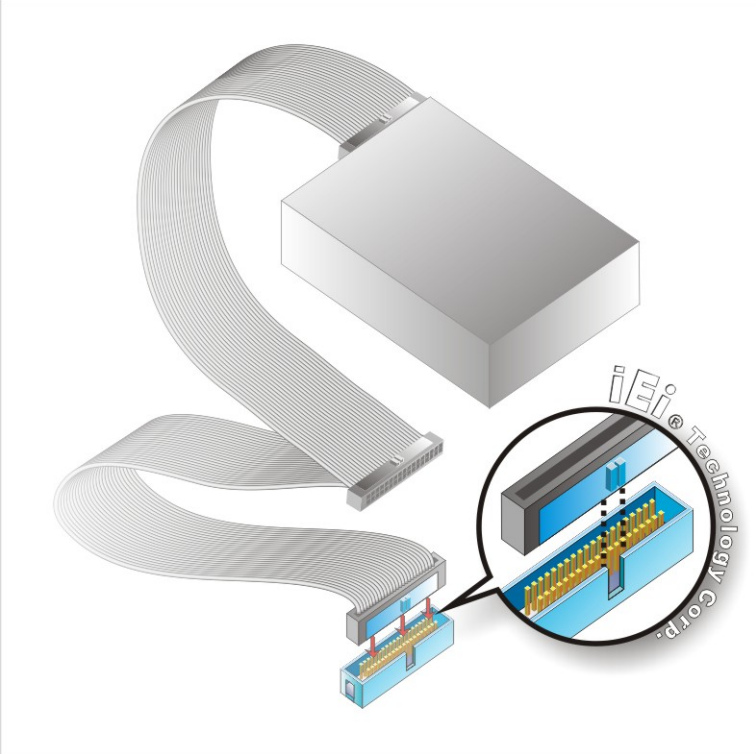

Figure 5-13: IDE Cable Connection

Step 3: **Connect the cable to an IDE device**. Connect the two connectors on the other side of the cable to one or two IDE devices. Make sure that pin 1 on the cable corresponds to pin 1 on the connector

5.6.3 5.1 Channel Audio Kit Installation

NOTE:

This is an optional item that must be ordered separately. For further information please contact the nearest PICOe-9452 distributor, reseller or vendor or contact an iEi sales representative directly. Send any queries to sales@iei.com.tw.

The optional 5.1 channel audio kit connects to the 10-pin audio connector on the PICOe-9452. The audio kit consists of three audio jacks. One audio jack, Mic In, connects to a microphone. The remaining two audio jacks, Line-In and Line-Out, connect to two speakers. To install the audio kit, please refer to the steps below:

Step 1: **Connect the audio kit cable.** The audio kit is shipped with a cable that connects the audio kit to the PICOe-9452. Connect the cable to the connector on the back of the audio kit. Make sure the pins are properly aligned (i.e. pin 1 connects to pin 1).

Step 2: **Locate the audio connector**. The location of the 10-pin audio connector is shown in **Chapter 3**.

Step 3: **Align pin 1**. Align pin 1 on the onboard connector with pin 1 on the audio kit cable connector. Pin 1 on the audio kit cable connector is indicated with a white dot. See **Figure 5-14**.

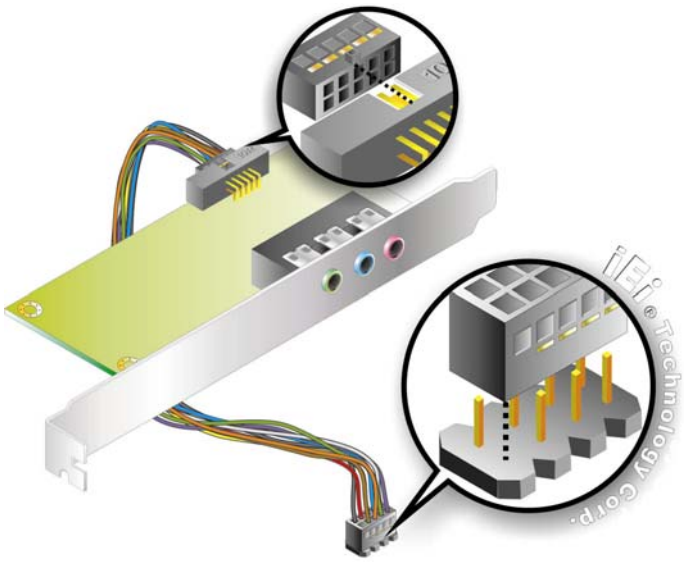

Figure 5-14: 5.1 Channel Audio Kit

Step 4: **Mount the audio kit onto the chassis**. Once the audio kit is connected to the PICOe-9452, secure the audio kit bracket to the system chassis.

Step 5: **Connect the audio devices**. Connect one speaker to the line-in audio jack, one speaker to the line-out audio jack and a microphone to the mic-in audio jack.

Step 6: **Install the driver**. If the 5.1 channel audio kit is used, the ALC655 Realtek codec driver must be installed. Refer to **Chapter 7** for driver installation instructions.

5.6.4 7.1 Channel Audio Kit Installation

NOTE:

This is an optional item that must be ordered separately. For further information please contact the nearest PICOe-9452 distributor, reseller or vendor or contact an iEi sales representative directly. Send any queries to sales@iei.com.tw.

The optional 7.1 channel audio kit connects to the 10-pin audio connector on the PICOe-9452. The audio kit consists of five audio jacks. One audio jack, Mic In, connects to a microphone. The remaining four audio jacks, Line-In, Front-Out, Rear-Out, and Center Subwoofer, connect to speakers. To install the audio kit, please refer to the steps below:

Step 1: **Connect the audio kit cable.** The audio kit is shipped with a cable that connects the audio kit to the PICOe-9452. Connect the cable to the connector on the back of the audio kit. Make sure the pins are properly aligned (i.e. pin 1 connects to pin 1).

Step 2: **Locate the audio connector**. The location of the 10-pin audio connector is shown in **Chapter 3**.

Step 3: **Align pin 1**. Align pin 1 on the onboard connector with pin 1 on the audio kit cable connector. Pin 1 on the audio kit cable connector is indicated with a white dot. See **Figure 5-14**.

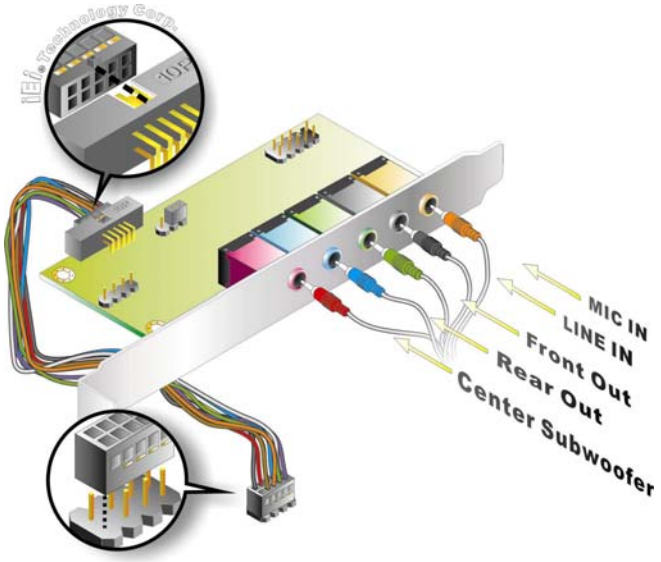

Figure 5-15: 5.1 Channel Audio Kit

Step 4: **Mount the audio kit onto the chassis**. Once the audio kit is connected to the PICOe-9452, secure the audio kit bracket to the system chassis.

Step 5: **Connect the audio devices**. Connect one speaker to the line-in audio jack, one speaker to the line-out audio jack and a microphone to the mic-in audio jack.

Step 6: **Install the driver**. If the 5.1 channel audio kit is used, the ALC655 Realtek codec driver must be installed. Refer to **Chapter 7** for driver installation instructions.

5.6.5 Keyboard and Mouse PS/2 Cable with Bracket

The PICOe-9452 can be shipped with an optional keyboard and mouse PS/2 cable with bracket. The keyboard and mouse PS/2 cable with bracket comprises of two PS/2 connectors installed on a bracket. Each PS/2 connector is connected via a cable to two separate female 5-pin wafer connectors. The female 5-pin wafer connectors are connected to the corresponding on-board keyboard and mouse connector. To connect the optional keyboard and mouse PS/2 cable with bracket please follow the steps below.

Step 1: **Locate the connectors**. The locations of the keyboard connector and the mouse connector are shown in Chapter 3.

Step 2: **Align the connectors**. Correctly align pin 1 on the PS/2 keyboard (mouse) cable connector with pin 1 on the SPCIE keyboard (mouse) connector. See Figure 5-16.

Step 3: **Insert the cable connectors**. Once the keyboard (mouse) cable connector is properly aligned with the keyboard (mouse) connector on the PICOe-9452, connect the cable connector to the on-board connector. See Figure 5-16.

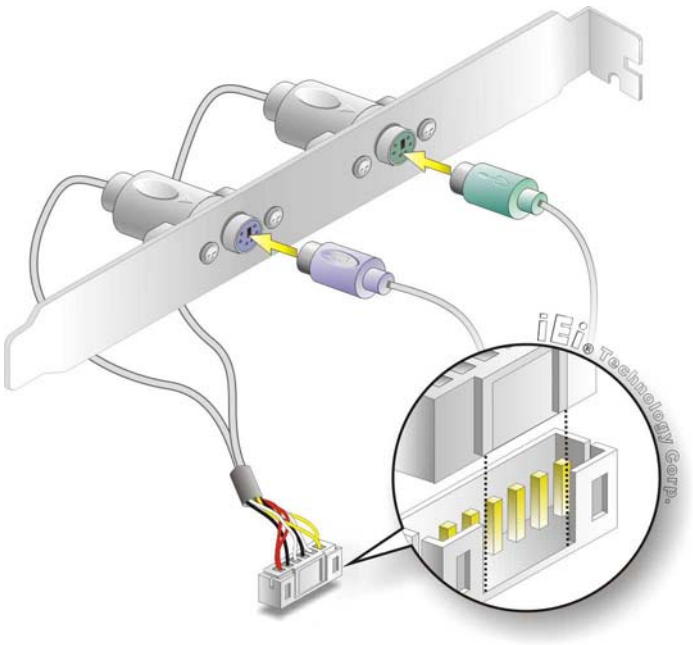

Figure 5-16: Keyboard and Mouse PS/2 Cable with Bracket

Step 4: **Connect the bracket to the chassis**. The bracket has a retention screw hole at the top. Properly insert the bracket into the chassis and secure the bracket to the chassis with a retention screw passing through the retention screw hole. Please see the chassis installation instructions for more details.

Step 5: **Connect the keyboard and mouse**. Once the PS/2 connectors are connected to the chassis, a keyboard and mouse can each be connected to one of the PS/2 connectors. See Figure 5-16.The keyboard PS/2 connector and mouse PS/2 connector are both marked. Please make sure the keyboard and mouse are connected to the correct PS/2 connector.

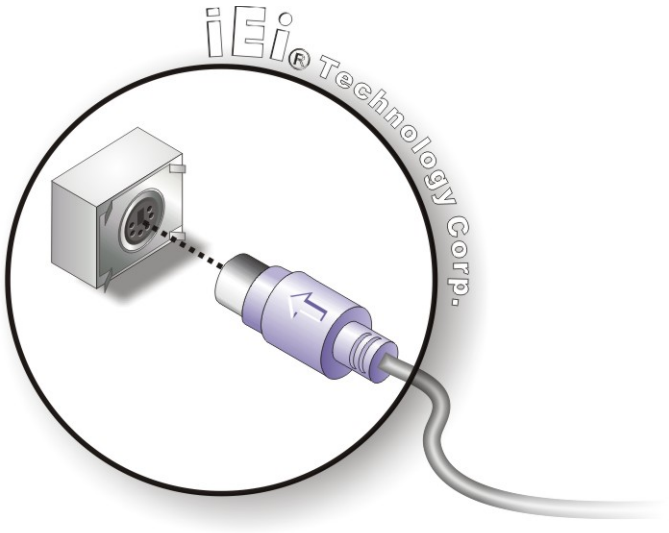

Figure 5-17: PS/2 Connector

5.6.6 Parallel Port Cable without Bracket

The optional parallel port (LPT) cable respectively connects the onboard LPT 26-pin box header to an external LPT device (like a printer). The cable comprises a 26-pin female header, to be connected to the onboard LPT box-header, on one side and on the other side a standard external LPT connector. To connect the LPT cable, please follow the steps below.

Step 1: **Locate the connector**. The LPT connector location is shown in **Chapter 4**.

Step 2: **Align the connectors**. Correctly align pin 1 on the cable connector with pin 1 on the PICOe-9452 LPT box-header connector. See **Figure 5-18**.

Step 3: **Insert the cable connectors** Once the cable connector is properly aligned with the 26-pin box-header connector on the PICOe-9452, connect the cable connector to the onboard connector. See **Figure 5-18.**

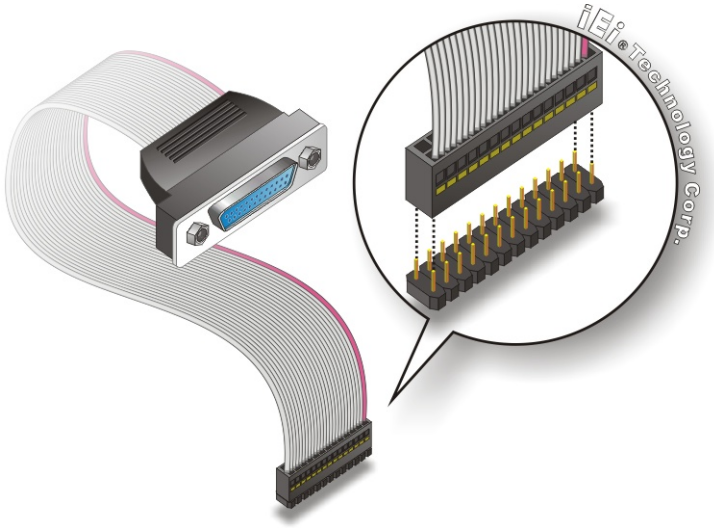

Figure 5-18: LPT Cable Connection

Step 4: **Attach the LPT connector to the chassis**. To secure the LPT interface connector to the chassis please refer to the installation instructions that came with the chassis.

Step 5: **Connect LPT device**. Once the LPT interface connector is connected to the chassis, the LPT device can be connected to the LPT interface connector. See **Figure 5-19**

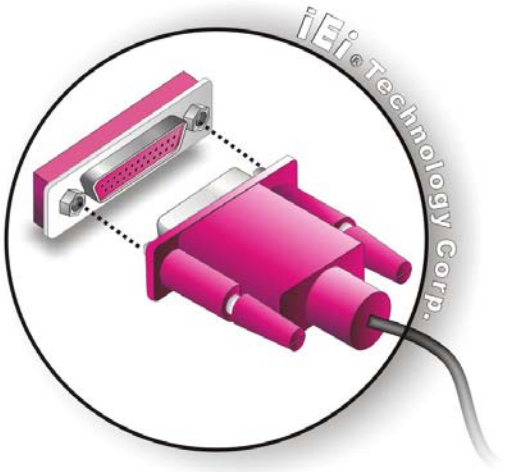

Figure 5-19: Connect the LPT Device

5.6.7 Dual RS-232 Cable with Slot Bracket

The dual RS-232 cable slot connector consists of two connectors attached to two independent cables. Each cable is then attached to a D-sub 9 male connector that is mounted onto a slot. To install the dual RS-232 cable, please follow the steps below.

Step 1: **Locate the connectors**. The locations of the RS-232 connectors are shown in **Chapter 3**.

Step 2: **Insert the cable connectors**. Insert one connector into each serial port box headers. See **Figure 5-20**. A key on the front of the cable connectors ensures the connector can only be installed in one direction.

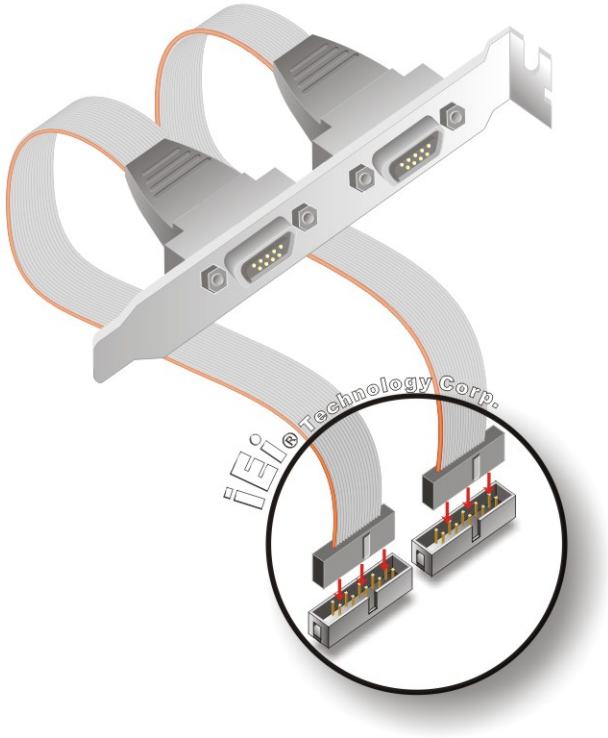

Figure 5-20: Dual RS-232 Cable Installation

Step 3: **Secure the bracket**. The dual RS-232 connector has two D-sub 9 male connectors secured on a bracket. To secure the bracket to the chassis please

refer to the reference material that came with the chassis

5.6.8 SATA Drive Connection

The PICOe-9452 is shipped with two SATA drive cables and one SATA drive power cable. To connect the SATA drives to the connectors, please follow the steps below.

Step 1: **Locate the connectors**. The locations of the SATA drive connectors are shown in **Chapter 3**.

Step 2: **Insert the cable connector**. Press the clip on the connector at the end of the SATA cable and insert the cable connector into the onboard SATA drive connector. See **Figure 5-21**.

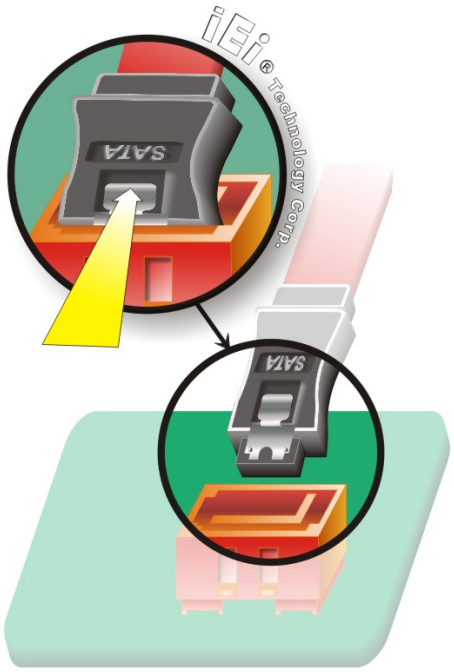

Figure 5-21: SATA Drive Cable Connection

Step 3: **Connect the cable to the SATA disk**. Connect the connector on the other end of the cable to the connector at the back of the SATA drive. See **Figure 5-22**.

Step 4: **Connect the SATA power cable**. Connect the SATA power connector to the back of the SATA drive. See **Figure 5-22**.

Figure 5-22: SATA Power Drive Connection

5.6.9 USB Cable (Dual Port) with Slot Bracket

The PICOe-9452 is shipped with a dual port USB 2.0 cable. To connect the USB cable connector, please follow the steps below.

Step 1: **Locate the connectors**. The locations of the USB connectors are shown in **Chapter 3**.

WARNING:

If the USB pins are not properly aligned, the USB device can burn out.

Step 2: **Align the connectors**. The cable has two connectors. Correctly align pin 1on each cable connector with pin 1 on the PICOe-9452 USB connector.

Step 3: **Insert the cable connectors** Once the cable connectors are properly aligned with the USB connectors on the PICOe-9452, connect the cable connectors to the onboard connectors. See **Figure 5-23**.

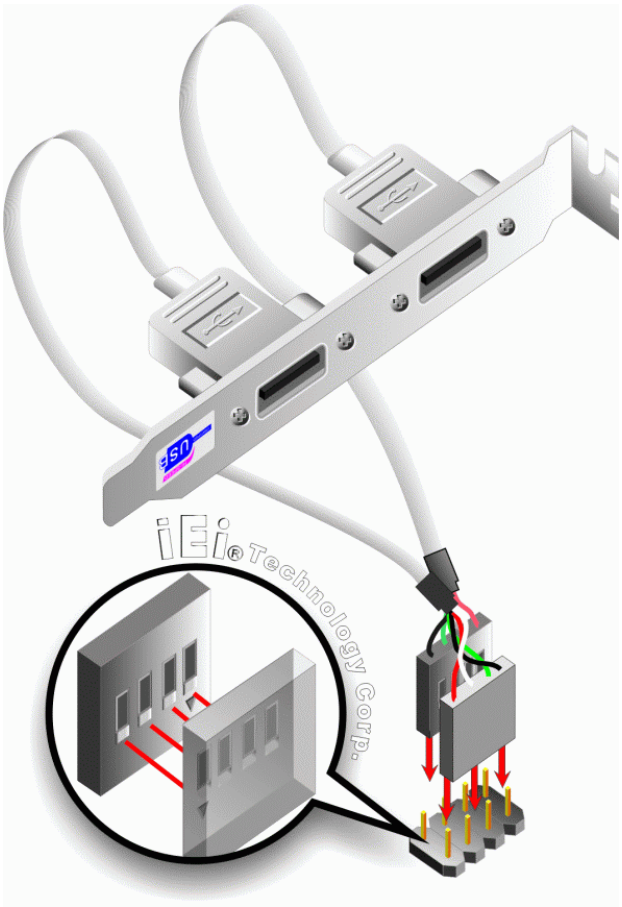

Figure 5-23: Dual USB Cable Connection

Step 4: **Attach the bracket to the chassis**. The USB 2.0 connectors are attached to a bracket. To secure the bracket to the chassis please refer to the installation.

5.7 External Peripheral Interface Connection

The following external peripheral devices can be connected to the external peripheral interface connectors.

- RJ-45 Ethernet cable connectors
- S-video display device
- USB device
- VGA monitor

To install these devices, connect the corresponding cable connector from the actual device to the corresponding PICOe-9452 external peripheral interface connector making sure the pins are properly aligned.

5.7.1 LAN Connection (Single Connector)

There are two external RJ-45 LAN connectors. The RJ-45 connectors enable connection to an external network. To connect a LAN cable with an RJ-45 connector, please follow the instructions below.

Step 1: **Locate the RJ-45 connectors**. The locations of the USB connectors are shown in **Chapter 4**.

Step 2: **Align the connectors.** Align the RJ-45 connector on the LAN cable with one of the RJ-45 connectors on the PICOe-9452. See **Figure 5-24**.

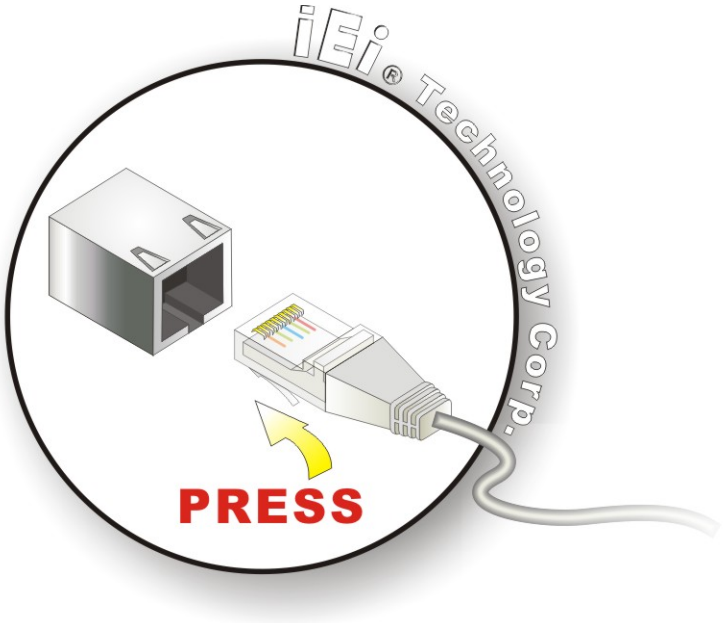

Figure 5-24: LAN Connection

Step 3: **Insert the LAN cable RJ-45 connector.** Once aligned, gently insert the LAN cable RJ-45 connector into the onboard RJ-45 connector.

5.7.2 S-video Cable Connection

There is a single mini DIN TV out connector mounted on the CPU card as an external connector. The optional S-video cable is able to connect the mini DIN connector on the system with an external display device. To connect an external display device to the system through the mini DIN connector with the S-video cable, please follow the instruction below.

Step 1: **Locate the TV-OUT DIN connector**. The location of the TV-OUT DIN connector is shown in **Chapter 4**.

Step 2: **Align the connectors.** Align the connector on the end of the S-video cable with the mini DIN connector. See **Figure 5-25**.

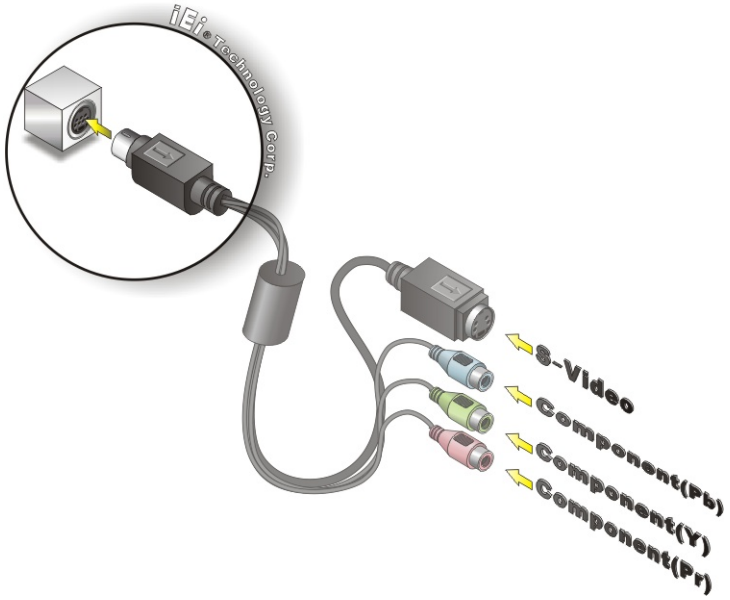

Figure 5-25: S-video Cable Connector

Step 3: **Insert S-video cable connector.** Once aligned, gently insert the S-video cable connector into the onboard connector.

Step 4: **Connect the cables to the display device.** Connect the S-video connector and the Pb, Y and Pr component connectors on the other end of the S-video cables to the respective connectors on the display device.

5.7.3 USB Device Connection (Single Connector)

There are two external USB 2.0 connectors. Both connectors are perpendicular to the PICOe-9452. To connect a USB 2.0 or USB 1.1 device, please follow the instructions below.

Step 1: **Located the USB connectors**. The locations of the USB connectors are shown in **Chapter 4**.

Step 2: **Align the connectors.** Align the USB device connector with one of the connectors on the PICOe-9452. See Figure 5-26.

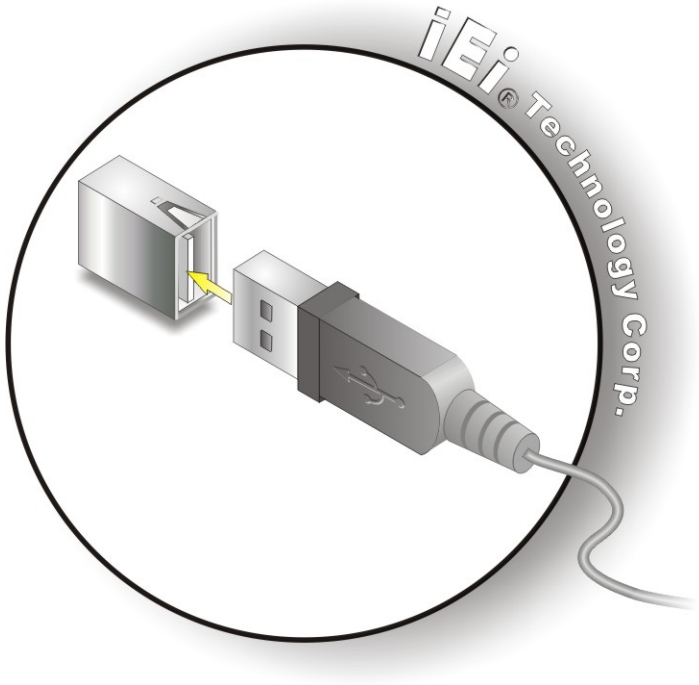

Figure 5-26: USB Device Connection

Step 3: **Insert the device connector.** Once aligned, gently insert the USB device connector into the onboard connector.

5.7.4 VGA Monitor Connection

The PICOe-9452 has a single female DB-15 connector on the external peripheral interface panel. The DB-15 connector is connected to a CRT or VGA monitor. To connect a monitor to the PICOe-9452, please follow the instructions below.

Step 1: **Locate the female DB-15 connector**. The location of the female DB-15 connector is shown in **Chapter 3**.

Step 2: **Align the VGA connector**. Align the male DB-15 connector on the VGA screen cable with the female DB-15 connector on the external peripheral interface.

Step 3: **Insert the VGA connector** Once the connectors are properly aligned with the insert the male connector from the VGA screen into the female connector on the PICOe-9452. See **Figure 5-27**.

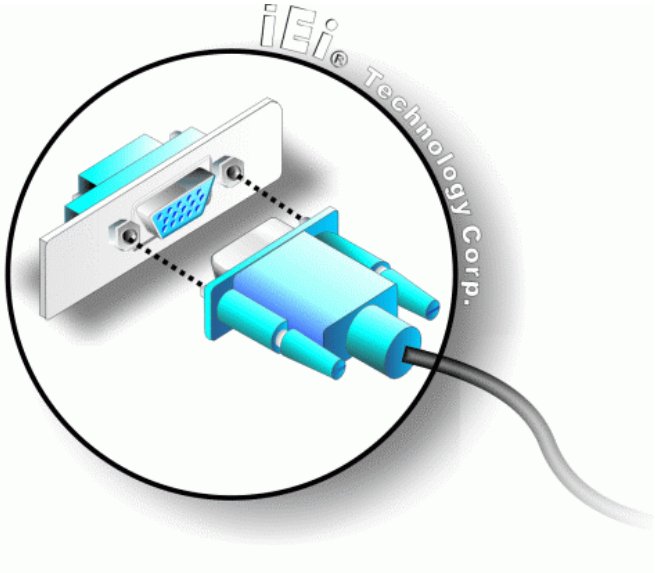

Figure 5-27: VGA Connector

Step 4: **Secure the connector**. Secure the DB-15 VGA connector from the VGA monitor to the external interface by tightening the two retention screws on either side of the connector.

Chapter

6

AMI BIOS

6.1 Introduction

A licensed copy of AMI BIOS is preprogrammed into the ROM BIOS. The BIOS setup program allows users to modify the basic system configuration. This chapter describes how to access the BIOS setup program and the configuration options that may be changed.

6.1.1 Starting Setup

The AMI BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

1. Press the **DELETE** key as soon as the system is turned on or
2. Press the **DELETE** key when the "**Press Del to enter SETUP**" message appears on the screen.

If the message disappears before the **DELETE** key is pressed, restart the computer and try again.

6.1.2 Using Setup

Use the arrow keys to highlight items, press **ENTER** to select, use the PageUp and PageDown keys to change entries, press **F1** for help and press **ESC** to quit. Navigation keys are shown in.

Key	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left hand side
Right arrow	Move to the item on the right hand side
Esc key	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
Page Up key	Increase the numeric value or make changes
Page Dn key	Decrease the numeric value or make changes

Key	Function
F1 key	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2 /F3 key	Change color from total 16 colors. F2 to select color forward.
F10 key	Save all the CMOS changes, only for Main Menu

Table 6-1: BIOS Navigation Keys

6.1.3 Getting Help

When **F1** is pressed a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window press **Esc** or the **F1** key again.

6.1.4 Unable to Reboot After Configuration Changes

If the computer cannot boot after changes to the system configuration is made, CMOS defaults. Use the jumper described in **Chapter 5**.

6.1.5 BIOS Menu Bar

The **menu bar** on top of the BIOS screen has the following main items:

- **Main** Changes the basic system configuration.
- **Advanced** Changes the advanced system settings.
- **PCIPnP** Changes the advanced PCI/PnP Settings
- **Boot** Changes the system boot configuration.
- **Security** Sets User and Supervisor Passwords.
- **Chipset** Changes the chipset settings.
- **Power** Changes power management settings.
- **Exit** Selects exit options and loads default settings

The following sections completely describe the configuration options found in the menu items at the top of the BIOS screen and listed above.

6.2 Main

The **Main** BIOS menu (**BIOS Menu 1**) appears when the **BIOS Setup** program is entered.

The **Main** menu gives an overview of the basic system information.

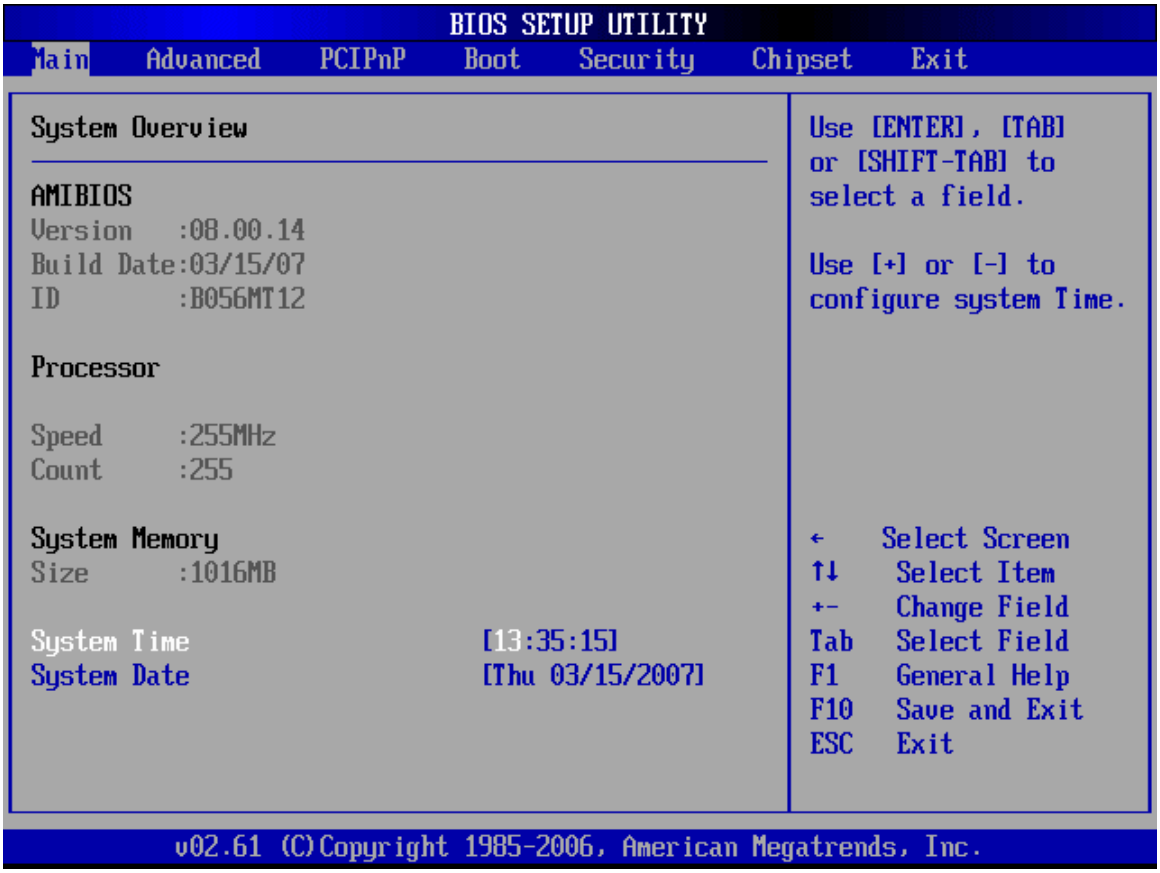

BIOS Menu 1: Main

➔ System Overview

The **System Overview** lists a brief summary of different system components. The fields in **System Overview** cannot be changed. The items shown in the system overview include:

- **AMI BIOS**: Displays auto-detected BIOS information
  - **Version**: Current BIOS version
  - **Build Date**: Date the current BIOS version was made
  - **ID**: Installed BIOS ID

- **Processor**: Displays auto-detected CPU specifications
  - **Type**: Names the currently installed processor
  - **Speed**: Lists the processor speed
  - **Count**: The number of CPUs on the motherboard
- **System Memory**: Displays the auto-detected system memory.
  - **Size**: Lists memory size

The System Overview field also has two user configurable fields:

➔ **System Time [xx:xx:xx]**

Use the **System Time** option to set the system time. Manually enter the hours, minutes and seconds.

➔ **System Date [xx/xx/xx]**

Use the **System Date** option to set the system date. Manually enter the day, month and year.

6.3 Advanced

Use the **Advanced** menu (**BIOS Menu 2**) to configure the CPU and peripheral devices through the following sub-menus:

WARNING:

Setting the wrong values in the sections below may cause the system to malfunction. Make sure that the settings made are compatible with the hardware.

- **CPU Configuration** (see **Section 6.3.1**)
- **IDE Configuration** (see **Section 6.3.2**)
- **SuperIO Configuration** (see **Section 6.3.3**)
- **Hardware Health Configuration** (see **Section 6.3.4**)
- **ACPI Configuration** (see **Section 6.3.5**)

- **APM Configuration** (See **Section 6.3.6**)
- **MPS Configuration** (see **Section 6.3.6**)
- **Remote Access Configuration** (see **Section 6.3.8**)
- **USB Configuration** (see **Section 6.3.8**)

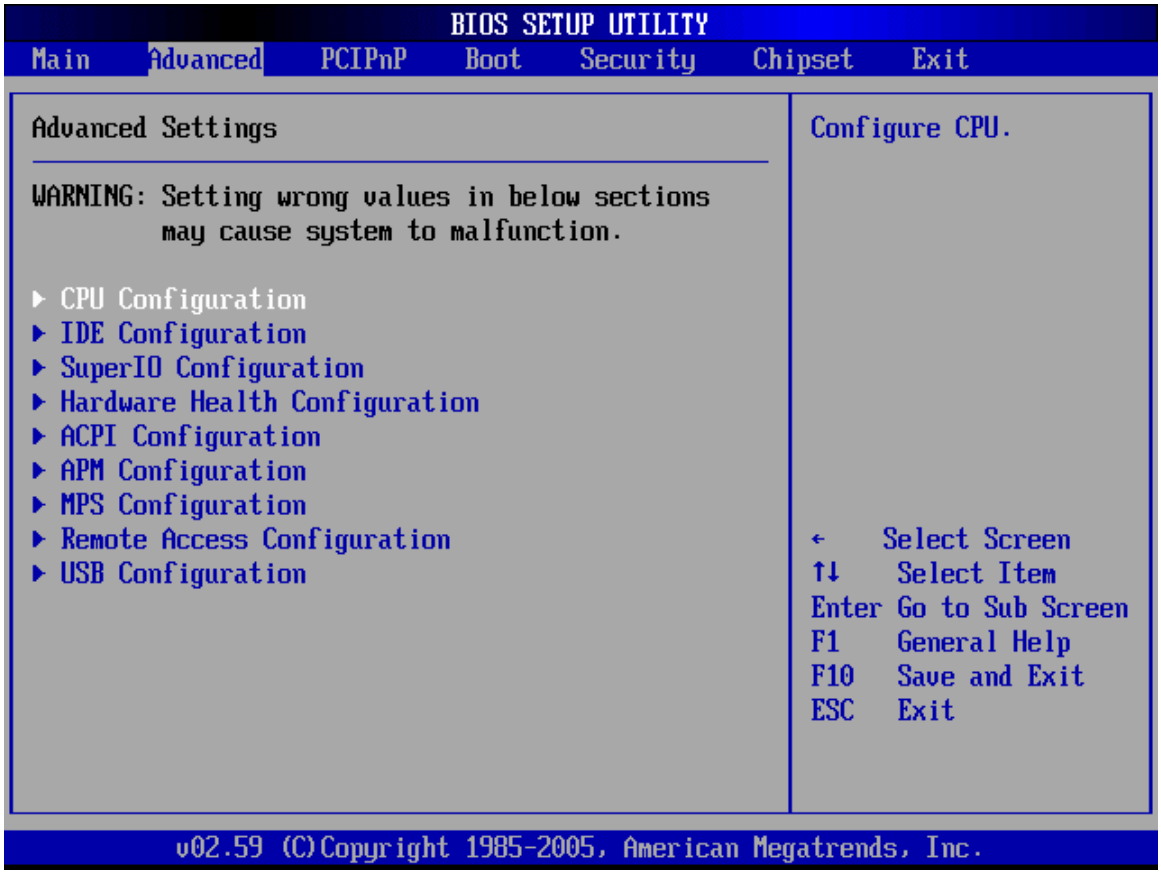

BIOS Menu 2: Advanced

6.3.1 CPU Configuration

Use the **CPU Configuration** menu (BIOS Menu 3) to view detailed CPU specifications and configure the CPU.

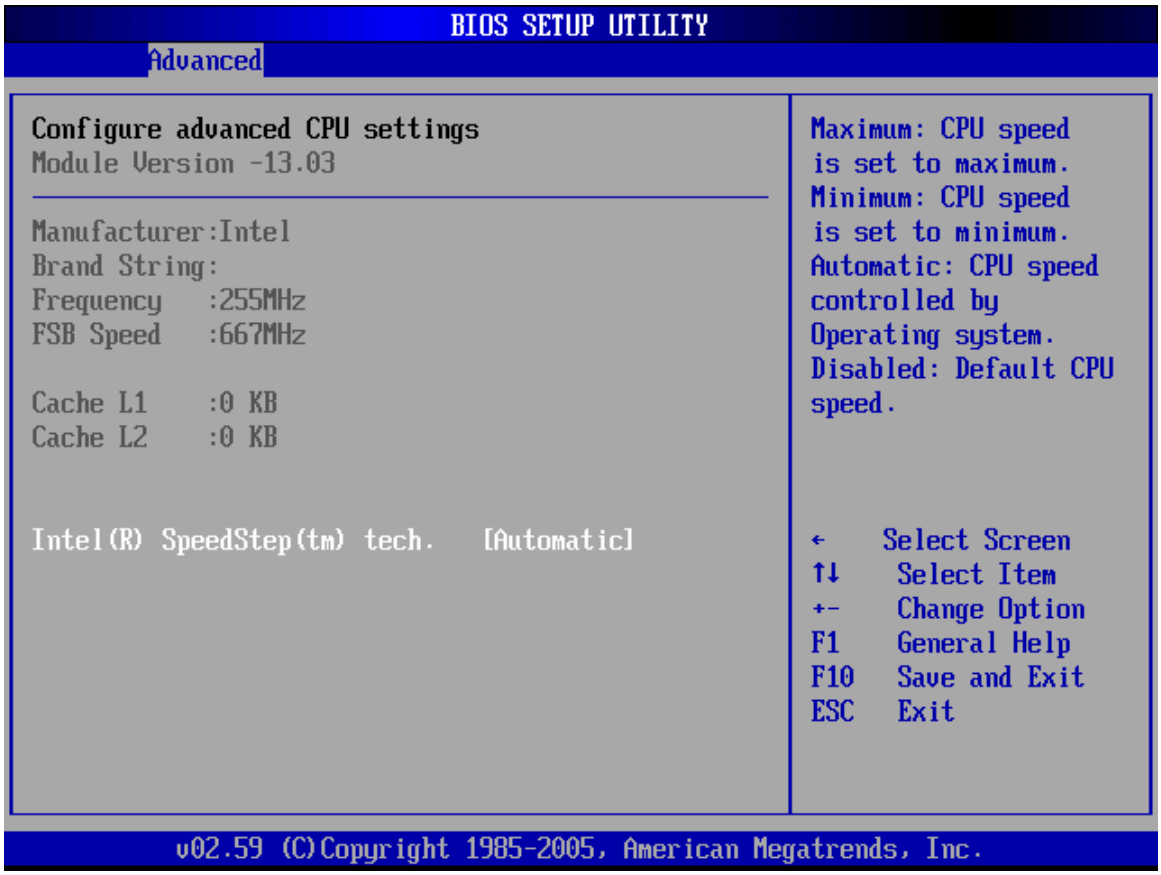

BIOS Menu 3: CPU Configuration

The CPU Configuration menu (BIOS Menu 3) lists the following CPU details:

- **Manufacturer**: Lists the name of the CPU manufacturer
- **Brand String**: Lists the brand name of the CPU being used
- **Frequency:** Lists the CPU processing speed
- **FSB Speed**: Lists the FSB speed
- **Cache L1**: Lists the CPU L1 cache size
- **Cache L2**: Lists the CPU L2 cache size

The following **CPU Configuration** menu items can be configured.

- Intel ® SpeedStep ™ tech.

6.3.2 IDE Configuration

Use the **IDE Configuration** menu (**BIOS Menu 4**) to change and/or set the configuration of the IDE devices installed in the system.

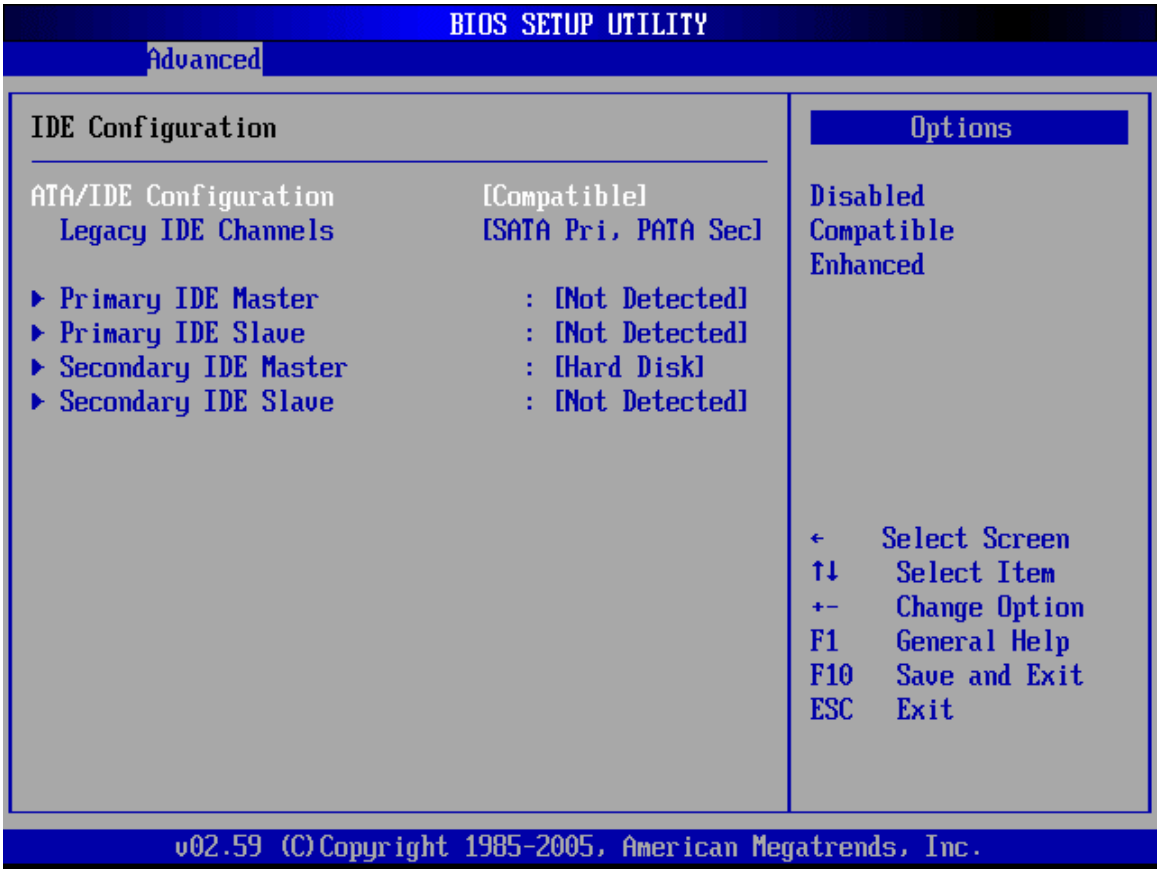

BIOS Menu 4: IDE Configuration

➔ **ATA/IDE Configurations [Compatible]**

- ➔ **Disabled** (Default)
- ➔ **Compatible**
- ➔ **Enhanced**

➔ **Legacy IDE Channels [PATA Pri, SATA Sec]**

- ➔ **SATA Only**
- ➔ **SATA Pri, PATA Sec (Default)**
- ➔ **SATA Only**

➔ **IDE Master and IDE Slave**

When entering setup, BIOS auto detects the presence of IDE devices. BIOS displays the status of the auto detected IDE devices. The following IDE devices are detected and are shown in the **IDE Configuration** menu:

- Primary IDE Master
- Primary IDE Slave
- Secondary IDE Master
- Secondary IDE Slave

The **IDE Configuration** menu (**BIOS Menu 4**) allows changes to the configurations for the IDE devices installed in the system. If an IDE device is detected, and one of the above listed four BIOS configuration options are selected, the IDE configuration options shown in **Section 6.3.2.1** appear.

6.3.2.1 IDE Master, IDE Slave

Use the **IDE Master** and **IDE Slave** configuration menu to view both primary and secondary IDE device details and configure the IDE devices connected to the system.

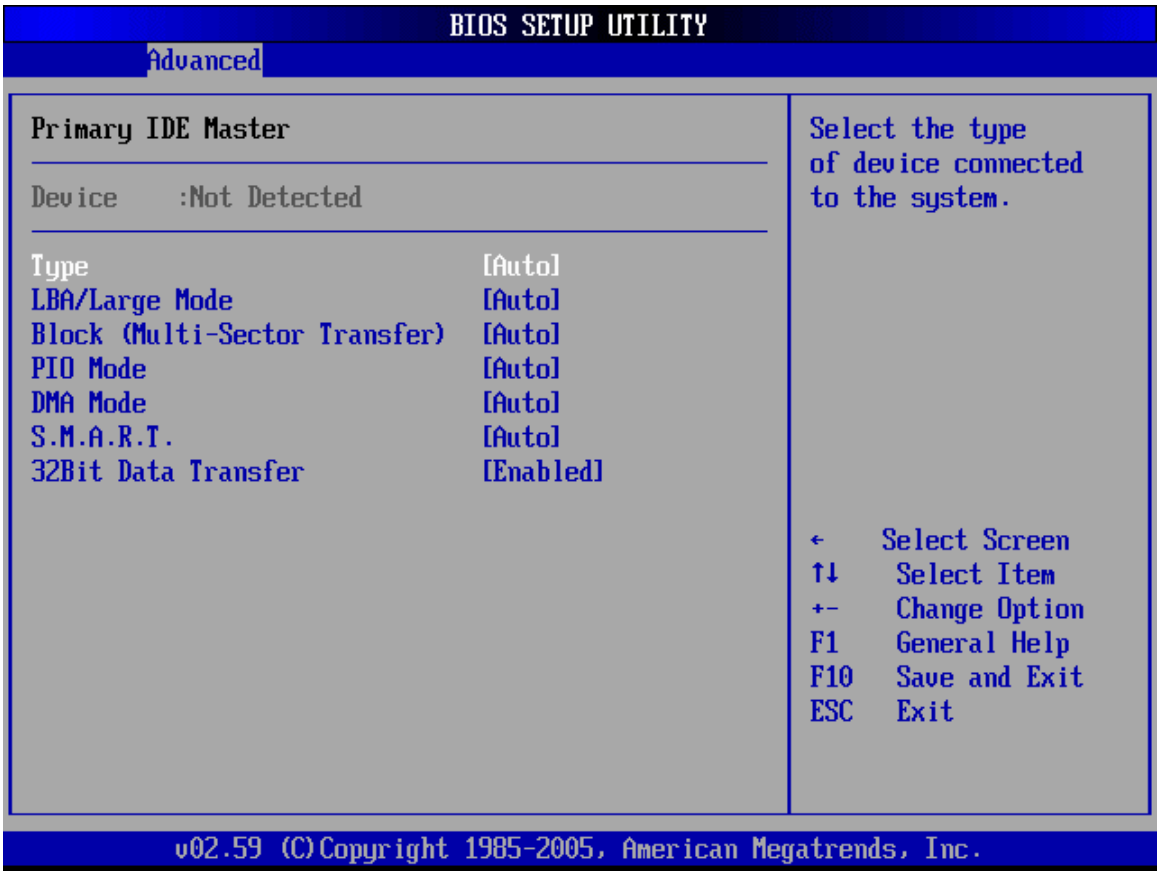

BIOS Menu 5: IDE Master and IDE Slave Configuration

➔ **Auto-Detected Drive Parameters**

The “grayed-out” items in the left frame are IDE disk drive parameters automatically detected from the firmware of the selected IDE disk drive. The drive parameters are listed as follows:

- **Device**: Lists the device type (e.g. hard disk, CD-ROM etc.)
- **Type**: Indicates the type of devices a user can manually select
- **Vendor**: Lists the device manufacturer
- **Size**: List the storage capacity of the device.
- **LBA Mode**: Indicates whether the LBA (Logical Block Addressing) is a method of addressing data on a disk drive is supported or not.
- **Block Mode**: Block mode boosts IDE drive performance by increasing the amount of data transferred. Only 512 bytes of data can be transferred per

interrupt if block mode is not used. Block mode allows transfers of up to 64 KB per interrupt.

- **PIO Mode**: Indicates the PIO mode of the installed device.
- **Async DMA**: Indicates the highest Asynchronous DMA Mode that is supported.
- **Ultra DMA**: Indicates the highest Synchronous DMA Mode that is supported.
- **S.M.A.R.T.**: Indicates whether or not the Self-Monitoring Analysis and Reporting Technology protocol is supported.
- **32Bit Data Transfer**: Enables 32-bit data transfer.

➔ **Type [Auto]**

Use the **Type** BIOS option select the type of device the AMIBIOS attempts to boot from after the Power-On Self-Test (POST) is complete.

➔ **Not Installed** BIOS is prevented from searching for an IDE disk drive on the specified channel.

➔ **Auto** **DEFAULT** The BIOS auto detects the IDE disk drive type attached to the specified channel. This setting should be used if an IDE hard disk drive is attached to the specified channel.

➔ **CD/DVD** The CD/DVD option specifies that an IDE CD-ROM drive is attached to the specified IDE channel. The BIOS does not attempt to search for other types of IDE disk drives on the specified channel.

➔ **ARMD** This option specifies an ATAPI Removable Media Device. These include, but are not limited to:

- ➔ **ZIP**
- ➔ **LS-120**

➔ **LBA/Large Mode [Auto]**

Use the **LBA/Large Mode** option to disable or enable BIOS to auto detects LBA (Logical Block Addressing). LBA is a method of addressing data on a disk drive. In LBA mode, the maximum drive capacity is 137 GB.

➔ **Disabled**		BIOS is prevented from using the LBA mode control on the specified channel.
➔ **Auto**	**DEFAULT**	BIOS auto detects the LBA mode control on the specified channel.

➔ **Block (Multi Sector Transfer) [Auto]**

Use the **Block (Multi Sector Transfer)** to disable or enable BIOS to auto detect if the device supports multi-sector transfers.

➔ **Disabled**		BIOS is prevented from using Multi-Sector Transfer on the specified channel. The data to and from the device occurs one sector at a time.
➔ **Auto**	**DEFAULT**	BIOS auto detects Multi-Sector Transfer support on the drive on the specified channel. If supported the data transfer to and from the device occurs multiple sectors at a time.

➔ **PIO Mode [Auto]**

Use the **PIO Mode** option to select the IDE PIO (Programmable I/O) mode program timing cycles between the IDE drive and the programmable IDE controller. As the PIO mode increases, the cycle time decreases.

➔ **Auto**	**DEFAULT**	BIOS auto detects the PIO mode. Use this value if the IDE disk drive support cannot be determined.

- **0** PIO mode 0 selected with a maximum transfer rate of 3.3MBps
- **1** PIO mode 1 selected with a maximum transfer rate of 5.2MBps
- **2** PIO mode 2 selected with a maximum transfer rate of 8.3MBps
- **3** PIO mode 3 selected with a maximum transfer rate of 11.1MBps
- **4** PIO mode 4 selected with a maximum transfer rate of 16.6MBps

  (This setting generally works with all hard disk drives manufactured after 1999. For other disk drives, such as IDE CD-ROM drives, check the specifications of the drive.)

➔ **DMA Mode [Auto]**

Use the **DMA Mode** BIOS selection to adjust the DMA mode options.

- **Auto** **DEFAULT** BIOS auto detects the DMA mode. Use this value if the IDE disk drive support cannot be determined.
- **SWDMA0** Single Word DMA mode 0 selected with a maximum data transfer rate of 2.1MBps
- **SWDMA1** Single Word DMA mode 1 selected with a maximum data transfer rate of 4.2MBps
- **SWDMA2** Single Word DMA mode 2 selected with a maximum data transfer rate of 8.3MBps
- **MWDMA0** Multi Word DMA mode 0 selected with a maximum data transfer rate of 4.2MBps
- **MWDMA1** Multi Word DMA mode 1 selected with a maximum data transfer rate of 13.3MBps
- **MWDMA2** Multi Word DMA mode 2 selected with a maximum data transfer rate of 16.6MBps

- **UDMA1** Ultra DMA mode 0 selected with a maximum data transfer rate of 16.6MBps
- **UDMA1** Ultra DMA mode 1 selected with a maximum data transfer rate of 25MBps
- **UDMA2** Ultra DMA mode 2 selected with a maximum data transfer rate of 33.3MBps
- **UDMA3** Ultra DMA mode 3 selected with a maximum data transfer rate of 44MBps (To use this mode, it is required that an 80-conductor ATA cable is used.)
- **UDMA4** Ultra DMA mode 4 selected with a maximum data transfer rate of 66.6MBps (To use this mode, it is required that an 80-conductor ATA cable is used.)
- **UDMA5** Ultra DMA mode 5 selected with a maximum data transfer rate of 99.9MBps (To use this mode, it is required that an 80-conductor ATA cable is used.)

➔ **S.M.A.R.T [Auto]**

Use the **S.M.A.R.T** option to auto-detect, disable or enable Self-Monitoring Analysis and Reporting Technology (SMART) on the drive on the specified channel. **S.M.A.R.T** predicts impending drive failures. The **S.M.A.R.T** BIOS option enables or disables this function.

- **Auto** **DEFAULT** BIOS auto detects HDD SMART support.
- **Disabled** Prevents BIOS from using the HDD SMART feature.
- **Enabled** Allows BIOS to use the HDD SMART feature

➔ **32Bit Data Transfer [Enabled]**

Use the **32Bit Data Transfer** BIOS option to enables or disable 32-bit data transfers.

➔ **Disabled** Prevents the BIOS from using 32-bit data transfers.

➔ **Enabled** **DEFAULT** Allows BIOS to use 32-bit data transfers on supported hard disk drives.

6.3.3 Super IO Configuration

Use the **Super IO Configuration** menu (**BIOS Menu 6**) to set or change the configurations for the FDD controllers, parallel ports and serial ports.

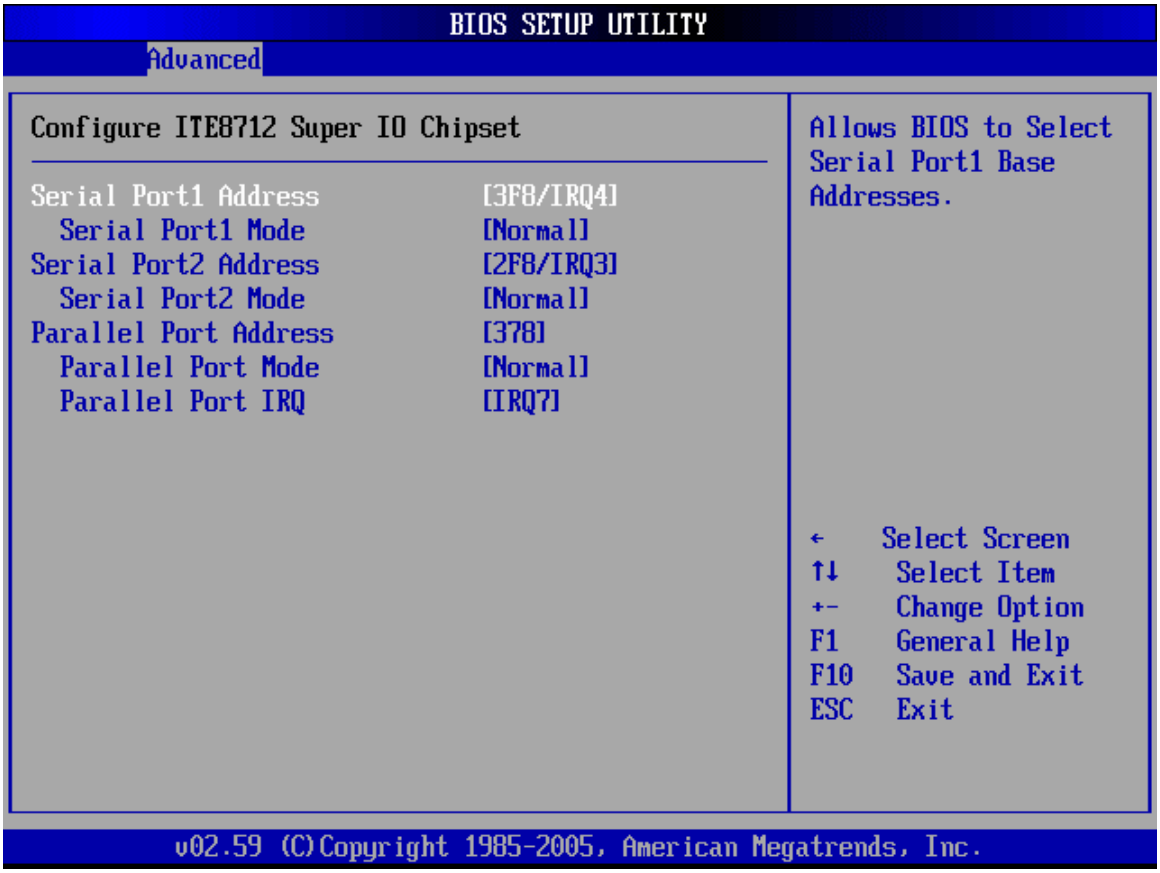

BIOS Menu 6: Super IO Configuration

➔ **Serial Port1 Address [3F8/IRQ4]**

Use the **Serial Port1 Address** option to select the Serial Port 1 base address.

➔ **Disabled**		No base address is assigned to Serial Port 1
➔ **3F8/IRQ4**	**DEFAULT**	Serial Port 1 I/O port address is 3F8 and the interrupt address is IRQ4
➔ **3E8/IRQ4**		Serial Port 1 I/O port address is 3E8 and the interrupt address is IRQ4
➔ **2E8/IRQ3**		Serial Port 1 I/O port address is 2E8 and the interrupt address is IRQ3

➔ **Serial Port1 Mode [Normal]**

Use the **Serial Port1 Mode** option to select the transmitting and receiving mode for the first serial port.

➔ **Normal**	(Default)	Serial Port 1 mode is normal
➔ **ASK IR**		Serial Port 1 mode is ASK IR

➔ **Serial Port2 Address [2F8/IRQ3]**

Use the **Serial Port2 Address** option to select the Serial Port 2 base address.

➔ **Disabled**		No base address is assigned to Serial Port 2
➔ **2F8/IRQ3**	**DEFAULT**	Serial Port 2 I/O port address is 3F8 and the interrupt address is IRQ3
➔ **3E8/IRQ4**		Serial Port 2 I/O port address is 3E8 and the interrupt address is IRQ4
➔ **2E8/IRQ3**		Serial Port 2 I/O port address is 2E8 and the interrupt

address is IRQ3

➔ **Serial Port2 Mode [Normal]**

Use the **Serial Port2 Mode** option to select the Serial Port2 operational mode.

➔ **Normal**	**DEFAULT**	Serial Port 2 mode is normal
➔ **IrDA**		Serial Port 2 mode is IrDA
➔ **ASK IR**		Serial Port 2 mode is ASK IR

➔ **Parallel Port Address [Disabled]**

Use the **Parallel Port Address** option to select the parallel port base address.

➔ **Disabled**	**DEFAULT**	No base address is assigned to the Parallel Port
➔ **378**		Parallel Port I/O port address is 378
➔ **278**		Parallel Port I/O port address is 278
➔ **3BC**		Parallel Port I/O port address is 3BC

➔ **Parallel Port Mode [Normal]**

Use the **Parallel Port Mode** option to select the mode the parallel port operates in.

➔ **Normal**	**DEFAULT**	The normal parallel port mode is the standard mode for parallel port operation.
➔ **Bi-directional**		Parallel port outputs are 8-bits long. Inputs are accomplished by reading 4 of the 8 bits on the status register.
➔ **EPP**		The parallel port operates in the enhanced parallel port mode (EPP). The EPP mode supports bi-directional communication between the system

and the parallel port device and the transmission rates between the two are much faster than the Normal mode.

ECP The parallel port operates in the extended capabilities port (ECP) mode. The ECP mode supports bi-directional communication between the system and the parallel port device and the transmission rates between the two are much faster than the Normal mode

➔ **ECP+EPP** The parallel port is compatible with ECP and EPP devices described above

➔ **Parallel Port IRQ [IRQ7]**

Use the **Parallel Port IRQ** option to set the parallel port interrupt address.

➔ **IRQ5** IRQ5 is assigned as the parallel port interrupt address

➔ **IRQ7** **DEFAULT** IRQ7 is assigned as the parallel port interrupt address

6.3.4 Hardware Health Configuration

The **Hardware Health Configuration** menu (**BIOS Menu 7**) shows the operating temperature, fan speeds and system voltages.

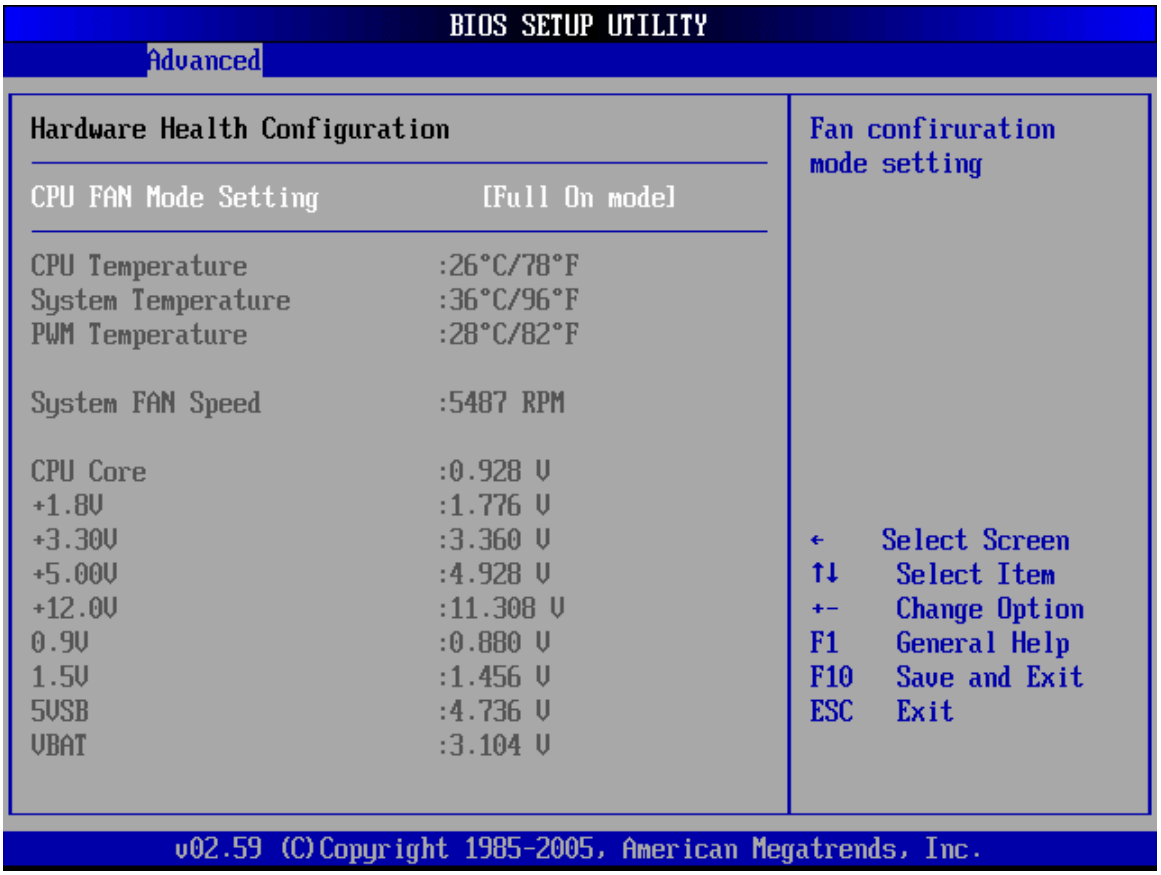

BIOS Menu 7: Hardware Health Configuration

➔ **CPU FAN Mode Setting [Full On Mode]**

Use the **CPU FAN Mode Setting** option to configure the second fan.

➔ **Full On Mode**	**DEFAULT**	Fan is on all the time
➔ **Automatic mode**		Fan is off when the temperature is low enough. Parameters must be set by the user.
➔ **PWM Manual mode**		Pulse width modulation set manually

When the **CPU FAN Mode Setting** option is in the **Automatic Mode**, the following parameters can be set.

- CPU Temp. Limit of OFF
- CPU Temp. Limit of Start
- CPU Temp. Limit of Full
- CPU Fan Start PWM
- Slope PWM 1

When the **CPU FAN Mode Setting** option is in the **PWM Manual Mode**, the following parameters can be set.

- CPU Fan PWM control

➔ **CPU Temp. Limit of OFF [000]**

WARNING:

Setting this value too high may cause the fan to stop when the CPU is at a high temperature and therefore cause the system to be damaged.

The **CPU Temp. Limit of OFF** option can only be set if the **CPU FAN Mode Setting** option is set to **Automatic Mode**. Use the **CPU Temp. Limit of OFF** option to select the CPU temperature at which the cooling fan should automatically turn off. To select a value, select the **CPU Temp. Limit of OFF** option and enter a decimal number between 000 and 127. The temperature range is specified below.

- Minimum Value: 0°C
- Maximum Value: 127°C

➔ **CPU Temp. Limit of Start [020]**

WARNING:

Setting this value too high may cause the fan to start only when the CPU is at a high temperature and therefore cause the system to be damaged.

The **CPU Temp. Limit of Start** option can only be set if the **CPU FAN Mode Setting** option is set to **Automatic Mode**. Use the **CPU Temp. Limit of Start** option to select the CPU temperature at which the cooling fan should automatically turn on. When the fan starts, it rotates using the starting pulse width modulation (PWM) specified in the **Fan 3 Start PWM** option below. To select a value, select the **CPU Temp. Limit of Start** option and enter a decimal number between 000 and 127. The temperature range is specified below.

- Minimum Value: 0°C
- Maximum Value: 127°C

➔ **CPU Temp. Limit of Full [080]**

WARNING:

Setting this value too high may cause the fan to start rotating at full speed only when the CPU is at a high temperature and therefore cause the system to be damaged.

The **CPU Temp. Limit of Full** option can only be set if the **CPU FAN Mode Setting** option is set to **Automatic Mode**. Use the **CPU Temp. Limit of Full** option to select the CPU temperature at which the cooling fan starts to rotate at full speed. When the CPU temperature exceeds the temperature specified in this option, the fan starts to rotate at full

speed. To select a value, select the **CPU Temp. Limit of Full** option and enter a decimal number between 000 and 127. The temperature range is specified below.

- Minimum Value: 0°C
- Maximum Value: 127°C

➔ **CPU Fan Start PWM [070]**

The **Fan 3 Start PWM** option can only be set if the **CPU FAN Mode Setting** option is set to **Automatic Mode**. Use the **Fan 3 Start PWM** option to select the PWM mode the fan starts to rotate with after the temperature specified in the **Temperature 3 Limit of Start** is exceeded. The Super I/O chipset supports 128 PWM modes. To select a value, select the **Fan 3 Start PWM** option and enter a decimal number between 000 and 127. The temperature range is specified below.

- PWM Minimum Mode: 0
- PWM Maximum Mode: 127

➔ **Slope PWM 1 [1 PWM]**

The **Slope PWM 1** option can only be set if the **CPU FAN Mode Setting** option is set to **Automatic Mode**. Use the **Slope PWM 1** option to select the linear rate at which the PWM mode increases with respect to an increase in temperature. A list of available options is shown below:

- 0 PWM
- 1 PWM
- 2 PWM
- 4 PWM
- 8 PWM
- 16 PWM
- 32 PWM
- 64 PWM

➔ **CPU Fan PWM Control [070]**

The **CPU Fan PWM Control** option can only be set if the **CPU FAN Mode Setting** option is set to **Manual Mode**. Use the **CPU Fan PWM Control** option to select PWM duty cycle control. The PWM duty cycle specifies the width of the modulated pulse. A high value ensures a wide pulse and a low value ensures a narrow pulse. To select a value, select the **CPU Fan PWM Control** option and enter a decimal number between 000 and 127. The PWM Duty Cycle control range is specified below.

- PWM Minimum Mode: 0
- PWM Maximum Mode: 127

➔ **Hardware Health Monitoring**

Use the **Hardware Health Configuration** menu (**BIOS Menu 7**) monitor system environmental parameters. The following health parameters are monitored.

- **Temperature monitoring:** The following system temperatures are monitored:
  - CPU Temperature
  - System Temperature
  - PWM Temperature

- **Fan Speed Monitoring:** The following system fan speeds are monitored:
  - System FAN Speed

- **Voltage Monitoring:** The following system voltages are monitored:
  - CPU Core
  - +1.8V
  - +3.30V
  - +5.00V
  - +12.0V
  - 0.9V
  - 1.5V
  - 5VSB
  - VBAT

6.3.5 ACPI Configuration

The **ACPI Configuration** menu (**BIOS Menu 8**) configures the Advanced Configuration and Power Interface (ACPI) and Power Management (APM) options.

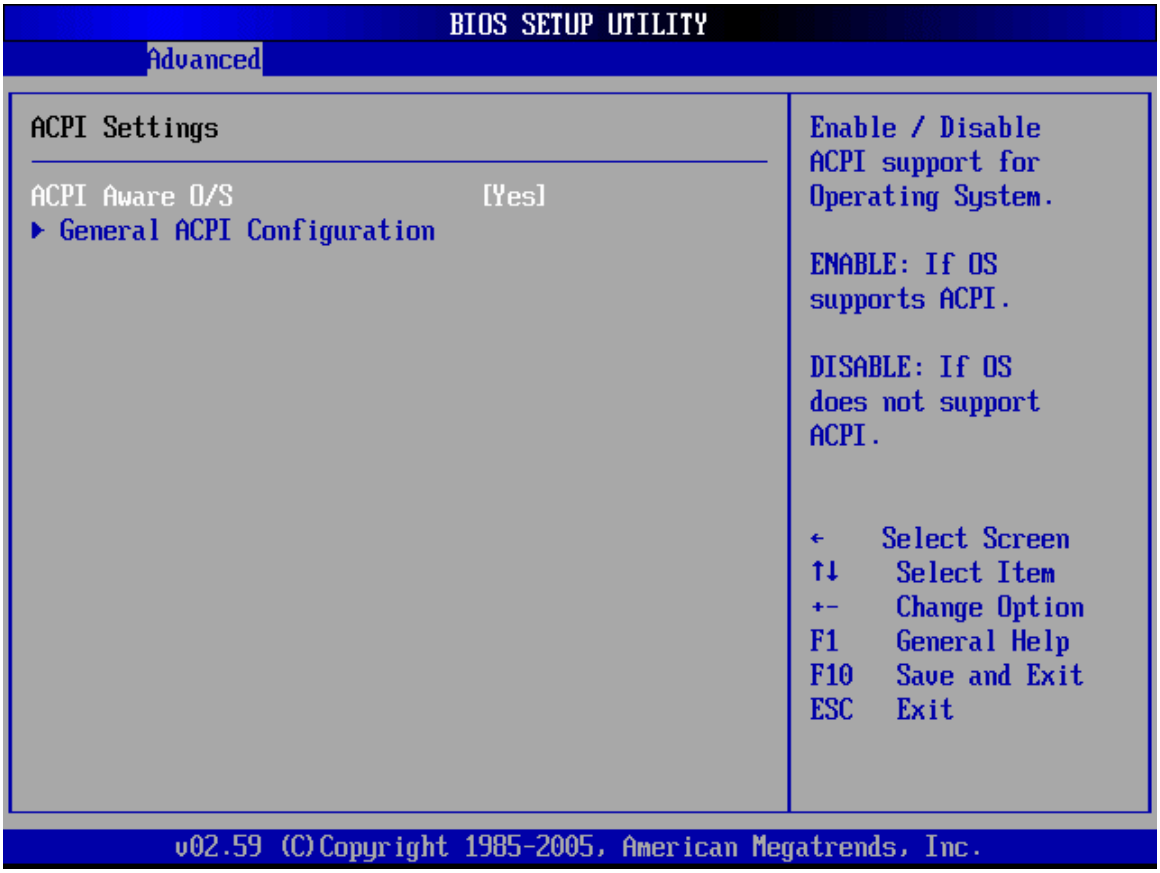

BIOS Menu 8: ACPI Configuration

➔ **ACPI Aware O/S [Yes]**

Use the **ACPI Aware O/S** option to enable the system to configure ACPI power saving options. ACPI can only be implemented if the system OS complies with the ACPI standard. Windows 98, Windows 2000, and Windows XP all comply with ACPI.

➔ **No** Disables the ACPI support for the OS. This selection should be disabled if the OS does not support ACPI

➔ **Yes** **DEFAULT** Enables the ACPI support for the operating system. This selection should be enabled if the OS does support ACPI

6.3.5.1 General ACPI Configuration

Use the General ACPI Configuration menu (BIOS Menu 9) to select the ACPI state when the system is suspended.

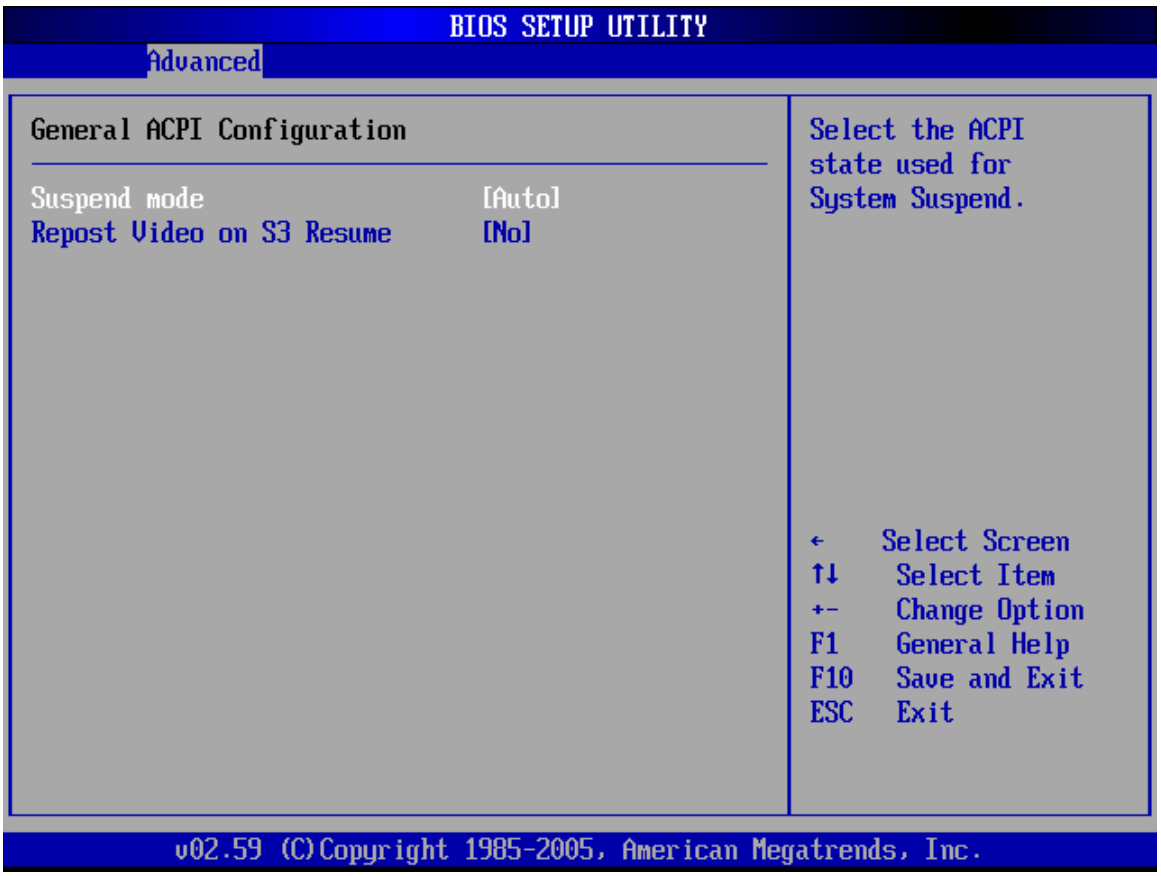

BIOS Menu 9: General ACPI Configuration [Advanced\ ACPI Configuration]

➔ **Suspend Mode [S1(POS)]**

Use the **Suspend Mode** option to specify the sleep state the system enters when it is not being used.

➔ **S1 (POS)** The system enters S1(POS) sleep state. The system appears off. The CPU is stopped; RAM is refreshed; the system is running in a low power mode.

➔ **S3 (STR)** The system enters a S3(STR) sleep state. The CPU has no power; RAM is in slow refresh; the power supply is in a reduced power mode.

➔ **Auto** **DEFAULT** The BIOS automatically selects a sleep state for the system.

➔ **Repost Video on S3 Resume [No]**

Use the **Repost Video on S3 Resume** to determine whether the VGA BIOS post will be invoked after the system is roused from an S3 (STR) suspend state.

➔ **No** **DEFAULT** The VGA BIOS post is not invoked

➔ **Yes** The VGA BIOS post is invoked

6.3.6 APM Configuration

The APM Configuration menu (BIOS Menu 10) allows the advanced power management options to be configured.

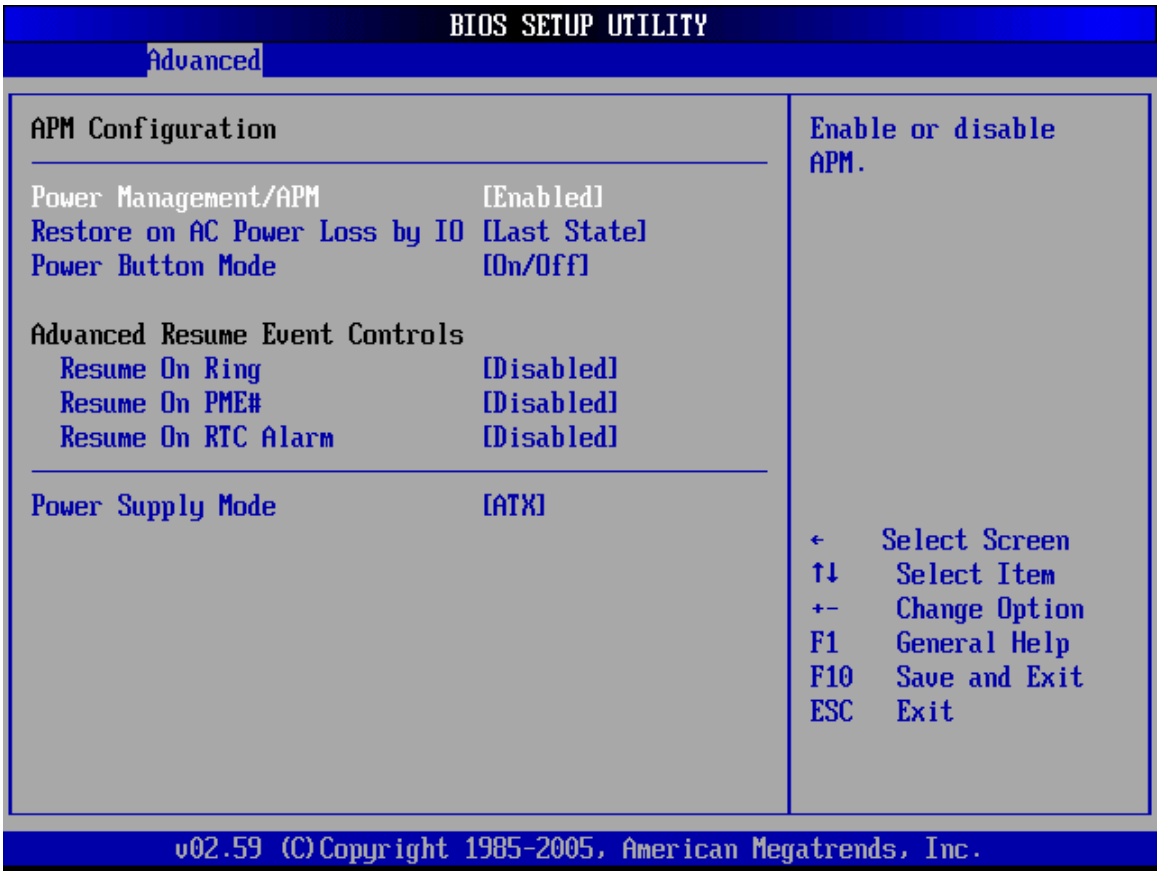

BIOS Menu 10:Advanced Power Management Configuration

➔ **Power Management/APM [Enabled]**

Use the **Power Management/APM** BIOS option to enable access to the advanced power management features. If this option is disabled, the only other option on the screen is the **Power Button Mode**.

➔ **Disabled** Disables the Advanced Power Management (APM) feature

➔ **Enabled** (Default) Enables the APM feature

➔ **Restore on AC Power Loss [Power Off]**

Use the **Restore on AC Power Loss** BIOS option to specify what state the system returns to if there is a sudden loss of power to the system.

➔ **Power Off**		The system remains turned off
➔ **Power On**	(Default)	The system turns on
➔ **Last State**		The system returns to its previous state. If it was on, it turns itself on. If it was off, it remains off.

➔ **Power Button Mode [On/Off]**

Use the **Power Button Mode** BIOS to specify how the power button functions.

➔ **On/Off**	(Default)	When the power button is pressed the system is either turned on or off
➔ **Suspend**		When the power button is pressed the system goes into suspend mode

➔ **Resume on Ring [Disabled]**

Use the **Resume on Ring** BIOS option to enable activity on the RI (ring in) modem line to rouse the system from a suspend or standby state. That is, the system will be roused by an incoming call on a modem.

➔ **Disabled**	(Default)	Wake event not generated by an incoming call
➔ **Enabled**		Wake event generated by an incoming call

➔ **Resume on PME# [Disabled]**

Use the **Resume on PME#** BIOS option to enable activity on the PCI PME (power management event) controller to rouse the system from a suspend or standby state.

➔ **Disabled** (Default) Wake event not generated by PCI PME controller activity

➔ **Enabled** Wake event generated by PCI PME controller activity

➔ **Resume On RTC Alarm [Disabled]**

Use the **Resume On RTC Alarm** option to specify the time the system should be roused from a suspended state.

➔ **Disabled** (Default) The real time clock (RTC) cannot generate a wake event

➔ **Enabled** If selected, the following appears with values that can be selected:

- ➔ **RTC Alarm Date (Days)**
- ➔ **System Time**

After setting the alarm, the computer turns itself on from a suspend state when the alarm goes off.

➔ **Power Supply Mode [ATX]**

Use the **Power Supply Mode** BIOS option to to select the power supply that is connected to the system.

➔ **AT** An AT power supply is connected to the system

➔ **ATX** **DEFAULT** An ATX power supply is connected to the system

6.3.7 MPS Configuration

Use the MPS Configuration menu (BIOS Menu 11) to select `he multi-processor table.

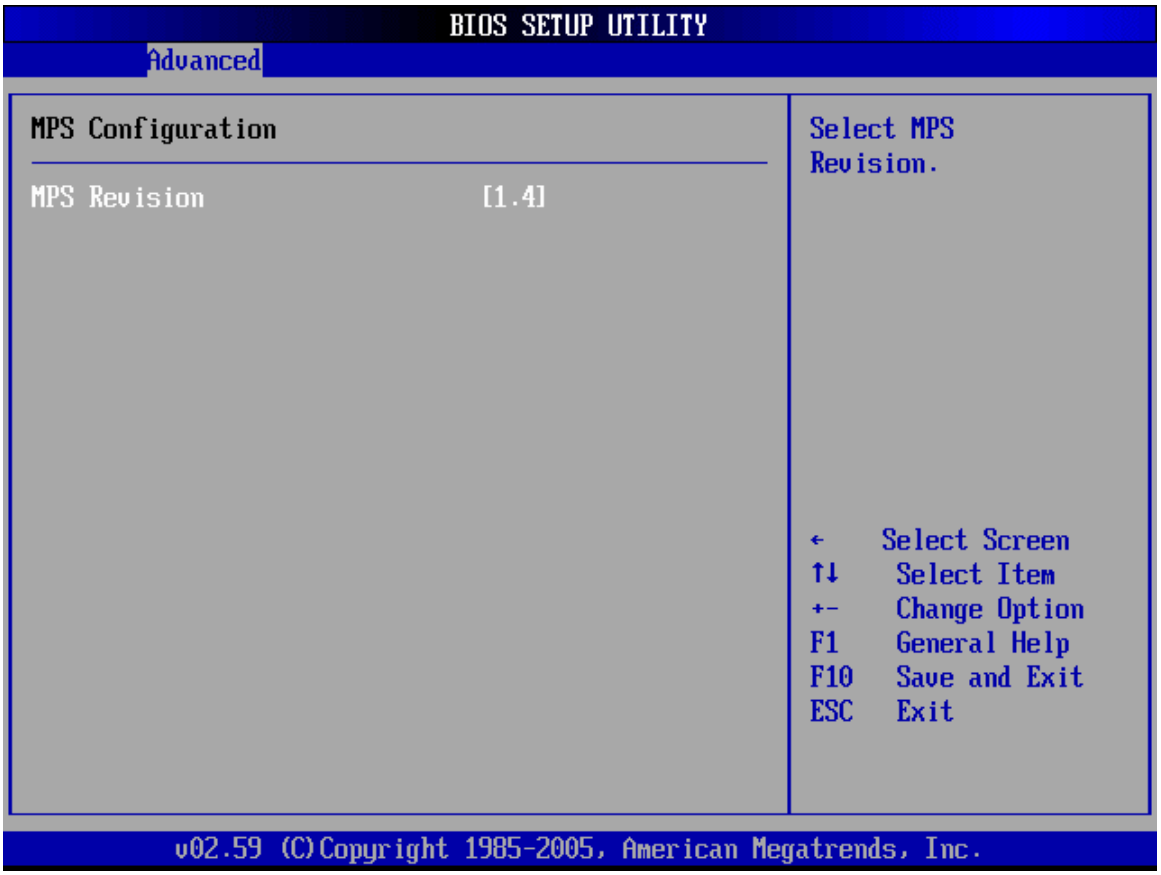

BIOS Menu 11: MPS Configuration

➔ **MPS Revision [1.4]**

Use the **Multiprocessor Specification (MPS) for OS** option to specify the MPS version to be used.

➔ **1.1** MPS version 1.1 is used

➔ **1.4** **DEFAULT** MPS version 1.4 is used

6.3.8 Remote Access Configuration

Use the **Remote Access Configuration** menu (**BIOS Menu 12**) to configure remote access parameters. The **Remote Access Configuration** is an AMIBIOS feature and

allows a remote host running a terminal program to display and configure the BIOS settings.

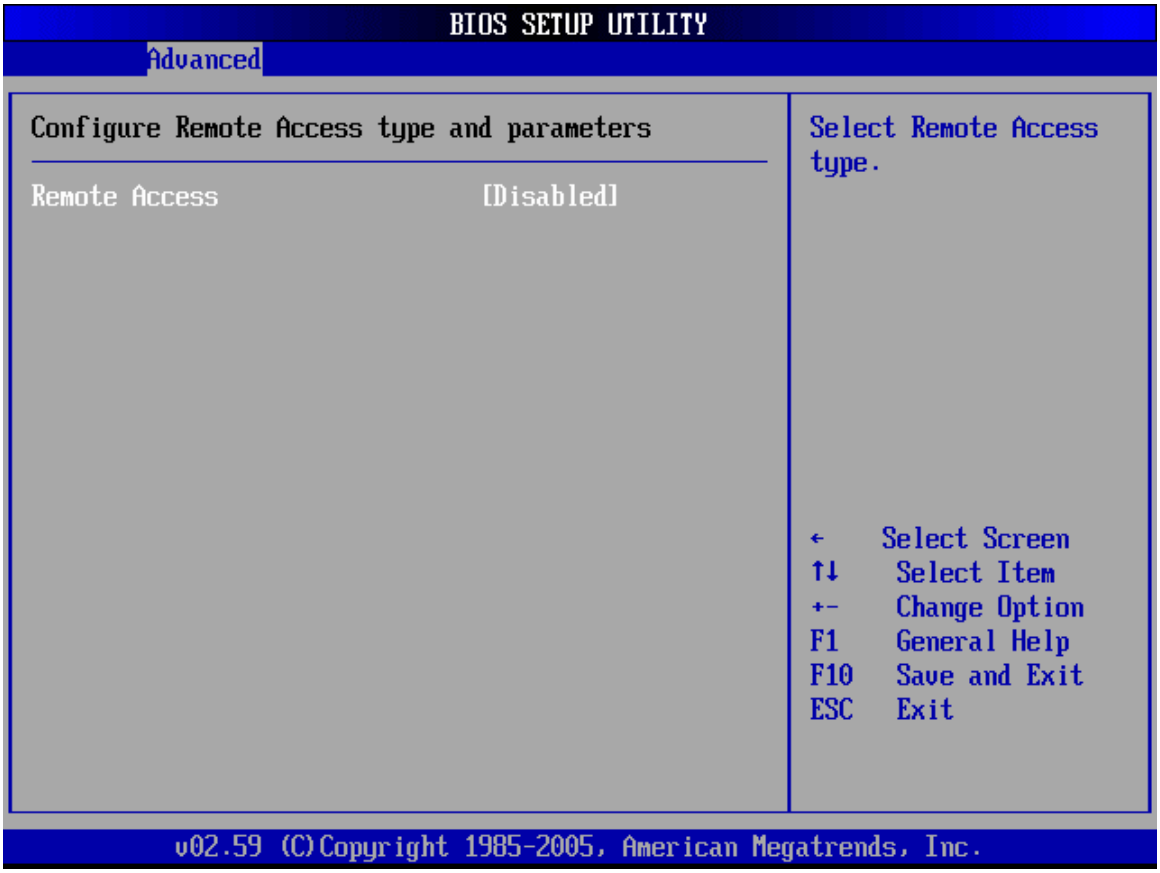

BIOS Menu 12: Remote Access Configuration [Advanced]

➔ **Remote Access [Disabled]**

Use the **Remote Access** option to enable or disable access to the remote functionalities of the system.

➔ **Disabled** **DEFAULT** Remote access is disabled.

➔ **Enabled** Remote access configuration options shown below appear:

➔ **Serial Port Number**

- ➔ **Serial Port Mode**
- ➔ **Flow Control**
- ➔ **Redirection after BIOS POST**
- ➔ **Terminal Type**
- ➔ **VT-UTF8 Combo Key Support**

These configuration options are discussed below.

➔ **Serial Port Number [COM1]**

Use the **Serial Port Number** option to select the serial port used for remote access.

➔ **COM1**	**DEFAULT**	System is remotely accessed through COM1
➔ **COM2**		System is remotely accessed through COM2

NOTE: Make sure the selected COM port is enabled through the Super I/O configuration menu.

➔ **Base Address, IRQ [3F8h,4]**

The **Base Address, IRQ** option cannot be configured and only shows the interrupt address of the serial port listed above.

➔ **Serial Port Mode [115200 8,n,1]**

Use the **Serial Port Mode** option to select baud rate through which the console redirection is made. The following configuration options are available

- 115200 8,n,1 **DEFAULT**
- 57600 8,n,1
- 38400 8,n,1
- 19200 8,n,1
- 09600 8,n,1

Note:

Identical baud rate setting musts be set on the host (a management computer running a terminal software) and the slave

➔ **Flow Control [None]**

Use the **Flow Control** option to report the flow control method for the console redirection application.

➔ **None**	**DEFAULT**	No control flow,
➔ **Hardware**		Hardware is set as the console redirection
➔ **Software**		Software is set as the console redirection

➔ **Redirection After BIOS POST [Always]**

Use the **Redirection After BIOS POST** option to specify when console redirection should occur.

➔ **Disabled**		The console is not redirected after POST
➔ **Boot Loader**		Redirection is active during POST and during Boot Loader
➔ **Always**	**DEFAULT**	Redirection is always active (Some OSes may not work if set to Always)

➔ **Terminal Type [ANSI]**

Use the **Terminal Type** BIOS option to specify the remote terminal type.

➔ **ANSI**	**DEFAULT**	The target terminal type is ANSI

➔ **VT100** The target terminal type is VT100

➔ **VT-UTF8** The target terminal type is VT-UTF8

➔ **VT-UTF8 Combo Key Support [Disabled]**

Use the **VT-UFT8 Combo Key Support** option to enable additional keys that are not provided by VT100 for the PC 101 keyboard.

The VT100 Terminal Definition is the standard convention used to configure and conduct emergency management tasks with UNIX-based servers. VT100 does not support all keys on the standard PC 101-key layout, however. The VT-UTF8 convention makes available additional keys that are not provided by VT100 for the PC 101 keyboard.

➔ **Disabled** **DEFAULT** Disables the VT-UTF8 terminal keys

➔ **Enabled** Enables the VT-UTF8 combination key. Support for ANSI/VT100 terminals

➔ **Sredir Memory Display Delay [Disabled]**

Use the **Sredir Memory Display Delay** option to select the delay before memory information is displayed. Configuration options are listed below

- No Delay **DEFAULT**
- Delay 1 sec
- Delay 2 sec
- Delay 4 sec

6.3.9 USB Configuration

Use the **USB Configuration** menu (**BIOS Menu 13**) to read USB configuration information and configure the USB settings.

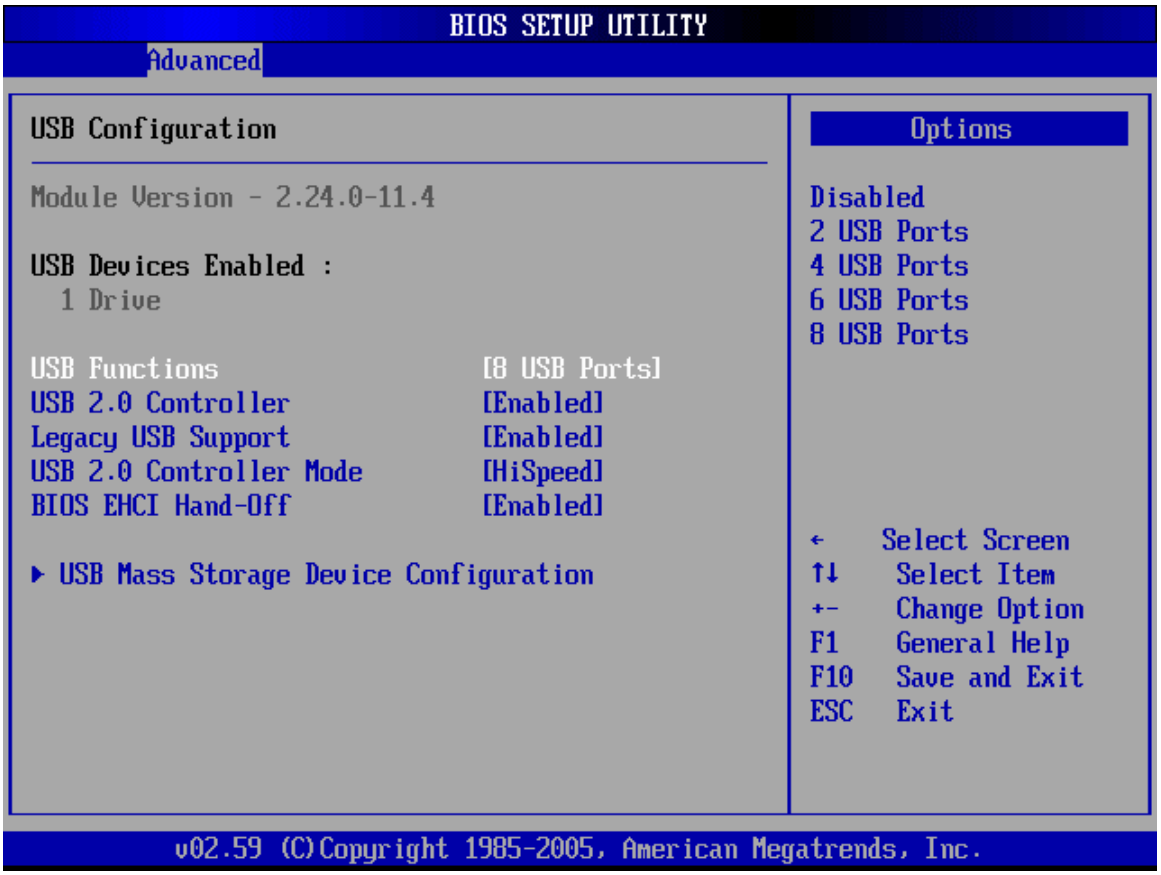

BIOS Menu 13: USB Configuration

➔ **USB Function [8 USB ports]**

Use the **USB Function** BIOS option to enable or disable a specified number of USB ports. If only two USB ports are being used, disabling the remaining six USB frees up system resources that can be redirected elsewehere.

➔ **Disabled**		USB function support disabled
➔ **2 USB Ports**		Two USB ports are enabled
➔ **4 USB Ports**		Four USB ports are enabled
➔ **6 USB Ports**		Six USB ports are enabled
➔ **8 USB Ports**	**DEFAULT**	Eight USB ports are enabled

➔ **USB 2.0 Controller [Enabled]**

Use the **USB 2.0 Controller** BIOS option to enable or disable the USB 2.0 controller

➔ **Disabled**		USB 2.0 controller disabled
➔ **Enabled**	**DEFAULT**	USB 2.0 controller enabled

➔ **Legacy USB Support [Enabled]**

Use the **Legacy USB Support** BIOS option to enable USB mouse and USB keyboard support.

Normally if this option is not enabled, any attached USB mouse or USB keyboard does not become available until a USB compatible operating system is fully booted with all USB drivers loaded. When this option is enabled, any attached USB mouse or USB keyboard can control the system even when there is no USB driver loaded onto the system.

➔ **Disabled**		Legacy USB support disabled
➔ **Enabled**	**DEFAULT**	Legacy USB support enabled
➔ **Auto**		Legacy USB support disabled if no USB devices are connected

➔ **USB 2.0 Controller Mode [HiSpeed]**

Use the **USB 2.0 Controller Mode** option to set the speed of the USB2.0 controller.

➔ **FullSpeed**		The controller is capable of operating at 12Mb/s
➔ **HiSpeed**	**DEFAULT**	The controller is capable of operating at 480Mb/s

➔ **BIOS EHCI Handoff**

Use the **BIOS EHCI Handoff** option for systems running OSes that do not have EHCI hand-off support. The EHCI ownership change is managed by the EHCI driver.

➔ **Disabled** Systems with OSes that do not support EHCI can use the EHCI handoff functionality.

➔ **Enabled** **DEFAULT** Systems with OSes that do not support EHCI cannot use the EHCI handoff functionality.

6.4 PCI/PnP

Use the **PCI/PnP** menu (**BIOS Menu 13**) to configure advanced PCI and PnP settings.

WARNING:

Setting wrong values for the BIOS selections in the PCIPnP BIOS menu may cause the system to malfunction.

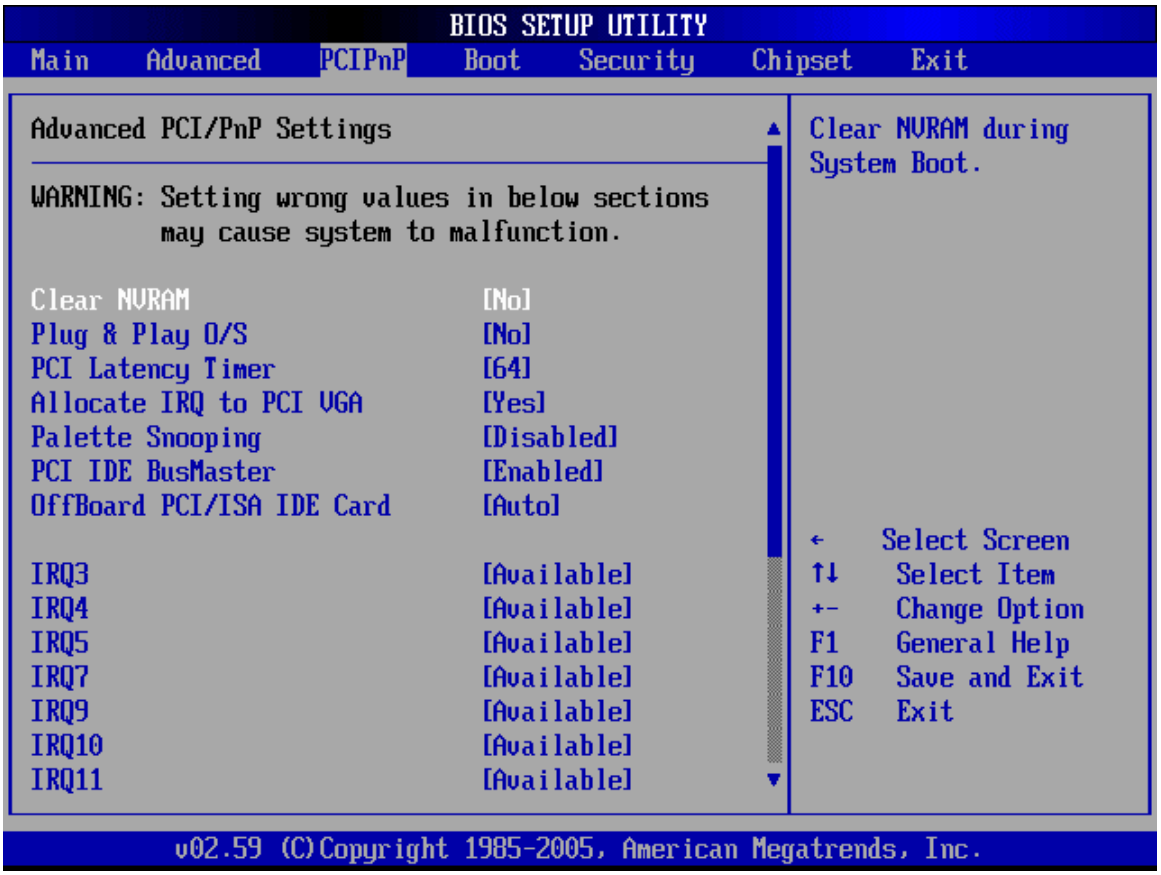
BIOS SETUP UTILITY
Main Advanced PCIPnP Boot Security Chipset Exit
Advanced PCI/PnP Settings
WARNING: Setting wrong values in below sections may cause system to malfunction.
Clear NVRAM [No]
Plug & Play O/S [No]
PCI Latency Timer [64]
Allocate IRQ to PCI VGA [Yes]
Palette Snooping [Disabled]
PCI IDE BusMaster [Enabled]
OffBoard PCI/ISA IDE Card [Auto]
IRQ3 [Available]
IRQ4 [Available]
IRQ5 [Available]
IRQ7 [Available]
IRQ9 [Available]
IRQ10 [Available]
IRQ11 [Available]
Clear NVRAM during System Boot.
← Select Screen
↑↓ Select Item
+- Change Option
F1 General Help
F10 Save and Exit
ESC Exit
v02.59 (C)Copyright 1985-2005, American Megatrends, Inc.

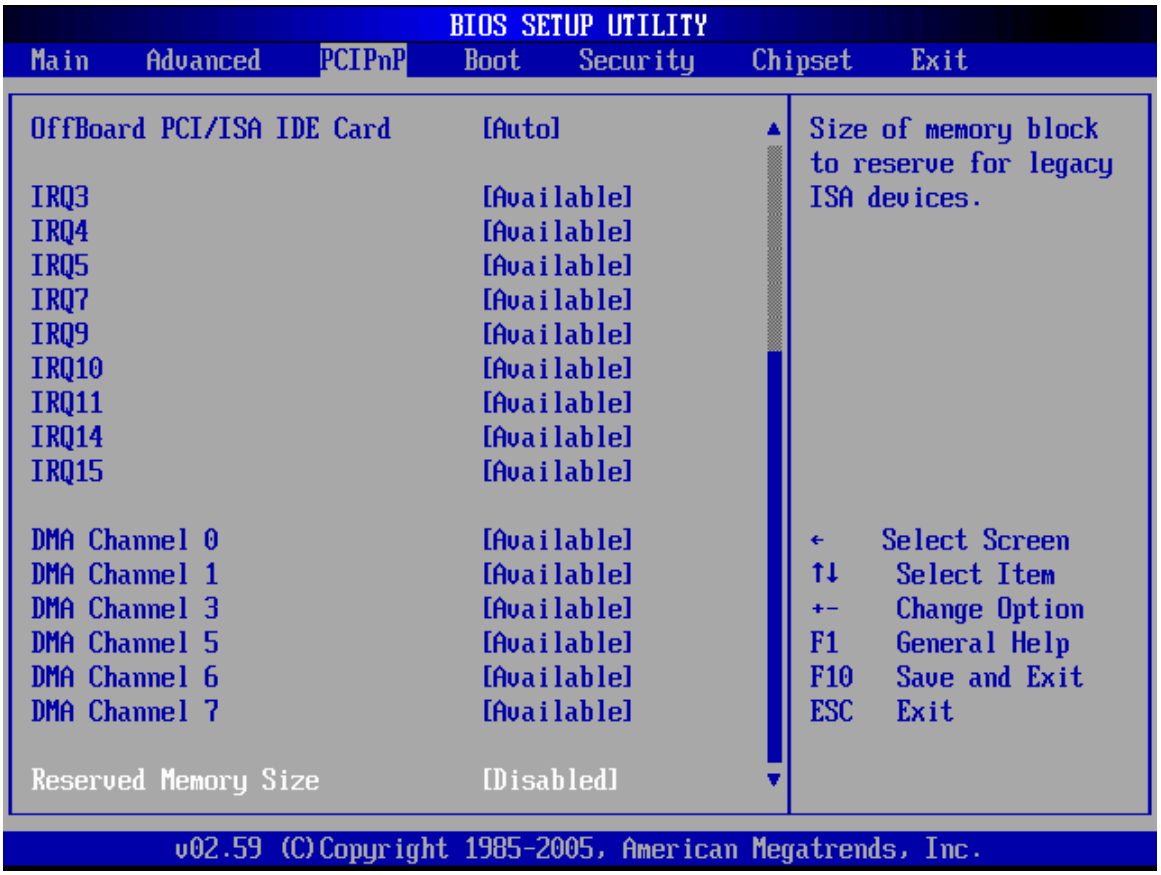

BIOS Menu 14: PCI/PnP Configuration

➔ **Clear NVRAM [No]**

Use the **Clear NVRAM** option to specify if the NVRAM (Non-Volatile RAM) is cleared when the power is turned off.

➔ **No**	**DEFAULT**	System does not clear NVRAM during system boot
➔ **Yes**		System clears NVRAM during system boot

➔ **Plug & Play O/S [No]**

Use the **Plug & Play O/S** BIOS option to specify whether system plug and play devices are configured by the operating system or the BIOS.

➔ **No** **DEFAULT** If the operating system does not meet the Plug and Play specifications, this option allows the BIOS to configure all the devices in the system.

➔ **Yes** This setting allows the operating system to change the interrupt, I/O, and DMA settings. Set this option if the system is running Plug and Play aware operating systems.

➔ PCI Latency Timer [64]

Use the **PCI Latency Timer** option to specify the PCI latency time. The latency time is measured in units of PCI clock cycles for the PCI device latency timer register. Configuration options are:

- 32
- 64 **DEFAULT**
- 96
- 128
- 160
- 192
- 224
- 248

➔ Allocate IRQ to PCI VGA [Yes]

Use the **Allocate IRQ to PCI VGA** option to restrict the system from giving the VGA adapter card an interrupt address.

➔ **Yes** (Default) Assigns an IRQ to a PCI VGA card if card requests IRQ

➔ **No** Does not assign IRQ to a PCI VGA card even if the card requests an IRQ

➔ Palette Snooping [Disabled]

Use the **Palette Snooping** option to enable or disable the palette snooping function.

➔ **Disabled** **DEFAULT** Unless the VGA card manufacturer requires palette snooping to be enabled, this option should be disabled.

➔ **Enabled** PCI devices are informed that an ISA based Graphics device is installed in the system so the ISA based Graphics card functions correctly. This does not necessarily indicate a physical ISA adapter card. The graphics chipset can be mounted on a PCI card. Always check with the adapter card manual first, before modifying the default settings in the BIOS.

➔ **PCI IDE BusMaster [Disabled]**

Use the **PCI IDE BusMaster** BIOS option to enable or prevent PCI IDE busmastering.

➔ **Disabled** **DEFAULT** Busmastering is prevented

➔ **Enabled** IDE controller on the PCI local bus has mastering capabilities

➔ **OffBoard PCI/ISA IDE Card [Auto]**

Use the OffBoard PCI/ISA IDE Card BIOS option to select the OffBoard PCI/ISA IDE Card.

➔ **Auto** **DEFAULT** The location of the Off Board PCI IDE adapter card is automatically detected by the AMIBIOS.

➔ **PCI Slot 1** PCI Slot 1 is selected as the location of the OffBoard PCI IDE adapter card. Only select this slot if the adapter card is installed in PCI Slot 1.

➔ **PCI Slot 2** PCI Slot 2 is selected as the location of the OffBoard PCI IDE adapter card. Only select this slot if the adapter card is installed in PCI Slot 2.

➔ **PCI Slot 3** PCI Slot 3 is selected as the location of the OffBoard PCI IDE adapter card. Only select this slot if the adapter card is installed in PCI Slot 3.

➔ **PCI Slot 4** PCI Slot 4 is selected as the location of the OffBoard PCI IDE adapter card. Only select this slot if the adapter card is installed in PCI Slot 4.

➔ **PCI Slot 5** PCI Slot 5 is selected as the location of the OffBoard PCI IDE adapter card. Only select this slot if the adapter card is installed in PCI Slot 5.

➔ **PCI Slot 6** PCI Slot 6 is selected as the location of the OffBoard PCI IDE adapter card. Only select this slot if the adapter card is installed in PCI Slot 6.

➔ **IRQ# [Available]**

Use the **IRQ#** address to specify what IRQs can be assigned to a particular peripheral device.

➔ **Available** **DEFAULT** The specified IRQ is available to be used by PCI/PnP devices

➔ **Reserved** The specified IRQ is reserved for use by Legacy ISA devices

Available IRQ addresses are:

- IRQ3
- IRQ4
- IRQ5
- IRQ7
- IRQ9
- IRQ10

- IRQ 11
- IRQ 14
- IRQ 15

➔ **DMA Channel# [Available]**

Use the **DMA Channel#** option to assign a specific DMA channel to a particular PCI/PnP device.

➔ **Available**	**DEFAULT**	The specified DMA is available to be used by PCI/PnP devices
➔ **Reserved**		The specified DMA is reserved for use by Legacy ISA devices

Available DMA Channels are:

- DM Channel 0
- DM Channel 1
- DM Channel 3
- DM Channel 5
- DM Channel 6
- DM Channel 7

➔ **Reserved Memory Size [Disabled]**

Use the **Reserved Memory Size** BIOS option to specify the amount of memory that should be reserved for legacy ISA devices.

➔ **Disabled**	**DEFAULT**	No memory block reserved for legacy ISA devices
➔ **16K**		16KB reserved for legacy ISA devices
➔ **32K**		32KB reserved for legacy ISA devices
➔ **64K**		54KB reserved for legacy ISA devices

6.5 Boot

Use the Boot menu (BIOS Menu 15) to configure system boot options.

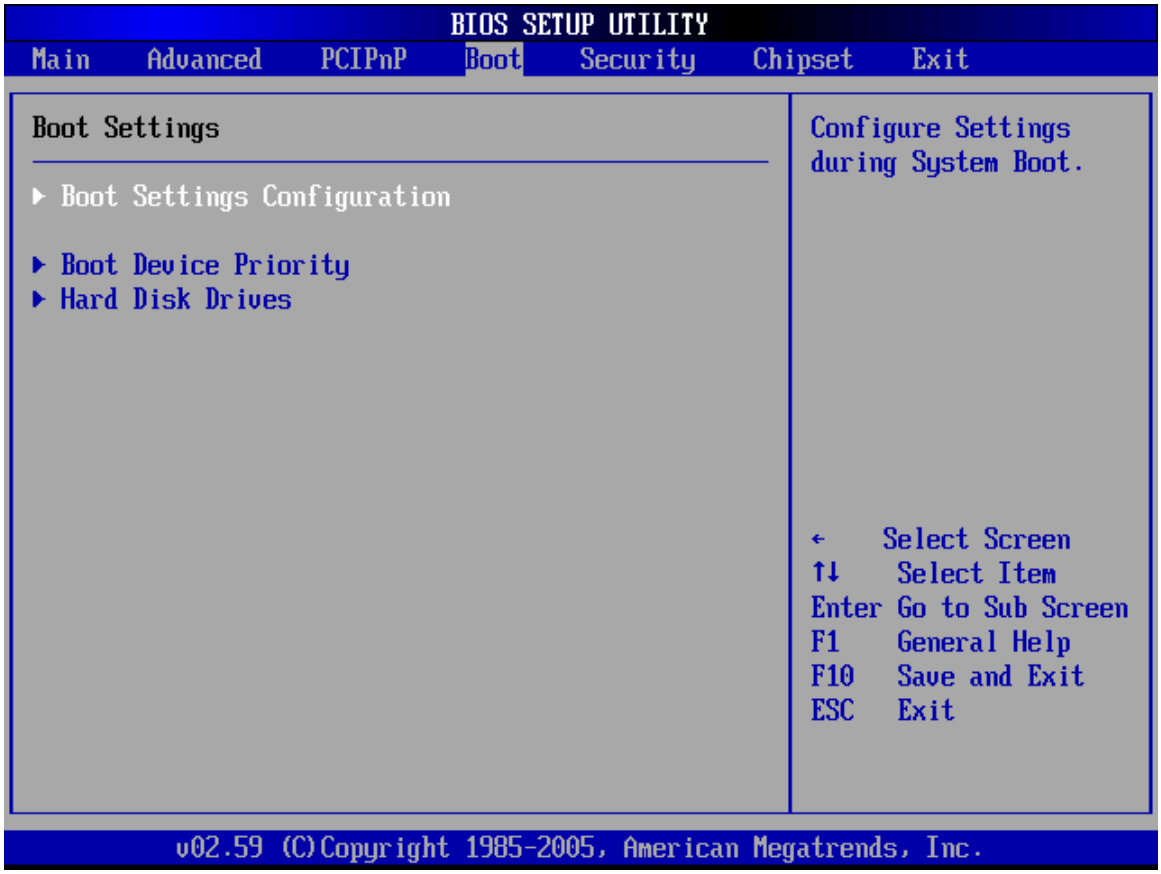

BIOS Menu 15: Boot

6.5.1 Boot Settings Configuration

Use the Boot Settings Configuration menu (BIOS Menu 15) to configure advanced system boot options.

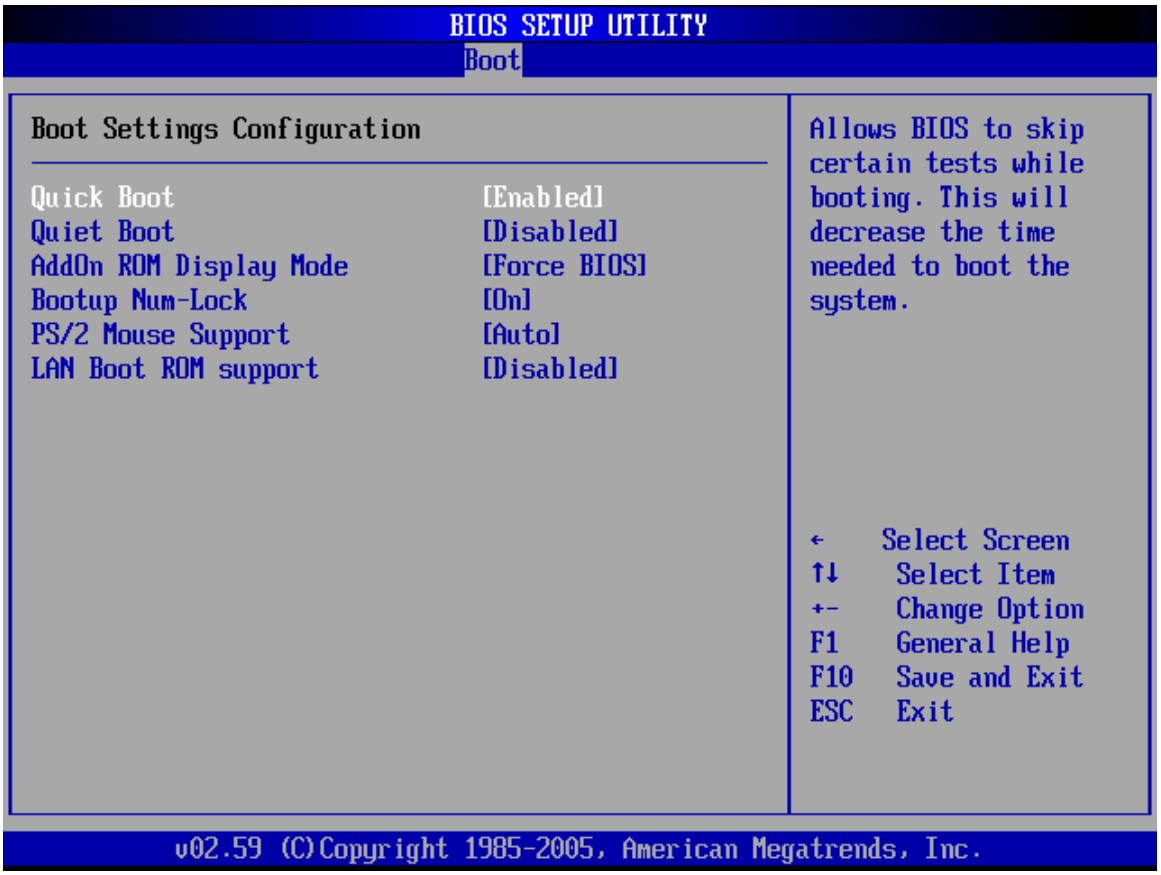
BIOS SETUP UTILITY
Boot
Boot Settings Configuration
Quick Boot [Enabled]
Quiet Boot [Disabled]
AddOn ROM Display Mode [Force BIOS]
Bootup Num-Lock [On]
PS/2 Mouse Support [Auto]
LAN Boot ROM support [Disabled]
Allows BIOS to skip certain tests while booting. This will decrease the time needed to boot the system.
← Select Screen
↑↓ Select Item
+- Change Option
F1 General Help
F10 Save and Exit
ESC Exit
v02.59 (C)Copyright 1985-2005, American Megatrends, Inc.

BIOS Menu 16: Boot Settings Configuration

➔ **Quick Boot [Enabled]**

Use the **Quick Boot** BIOS option to make the computer speed up the boot process.

➔ **Disabled**		No POST procedures are skipped
➔ **Enabled**	**DEFAULT**	Some POST procedures are skipped to decrease the system boot time

➔ **Quiet Boot [Disabled]**

Use the **Quiet Boot** BIOS option to select the screen display when the system boots.

➔ **Disabled**	**DEFAULT**	Normal POST messages displayed

➔ **Enabled** OEM Logo displayed instead of POST messages

➔ **AddOn ROM Display Mode [Force BIOS]**

Use the **AddOn ROM Display Mode** option to allow add-on ROM (read-only memory) messages to be displayed.

➔ **Force BIOS** **DEFAULT** The system forces third party BIOS to display during system boot.

➔ **Keep Current** The system displays normal information during system boot.

➔ **Bootup Num-Lock [On]**

Use the **Bootup Num-Lock** BIOS option to specify if the number lock setting must be modified during boot up.

➔ **Off** Does not enable the keyboard Number Lock automatically. To use the 10-keys on the keyboard, press the Number Lock key located on the upper left-hand corner of the 10-key pad. The Number Lock LED on the keyboard lights up when the Number Lock is engaged.

➔ **On** **DEFAULT** Allows the Number Lock on the keyboard to be enabled automatically when the computer system boots up. This allows the immediate use of the 10-key numeric keypad located on the right side of the keyboard. To confirm this, the Number Lock LED light on the keyboard is lit.

➔ **PS/2 Mouse Support [Enabled]**

Use the **PS/2 Mouse Support** option adjusts PS/2 mouse support capabilities.

➔ **Disabled** PS/2 mouse support is disabled and prevented from using system resources.

➔ **Enabled** **DEFAULT** Allows the system to use a PS/2 mouse.

➔ **Auto** The system auto-adjusts PS/2 mouse support.

➔ **LAN Boot ROM Support [Disabled]**

Use the **LAN Boot ROM Support** option to enable the system to be booted from a remote system.

➔ **Disabled** (Default) Cannot be booted from a remote system through the LAN

➔ **Enabled** (Default) Can be booted from a remote system through the LAN

6.5.2 Boot Device Priority

Use the **Boot Device Priority** menu (**BIOS Menu 17**) to specify the boot sequence from the available devices. Possible boot devices may include:

- 1st FLOPPY DRIVE
- HDD
- CD/DVD

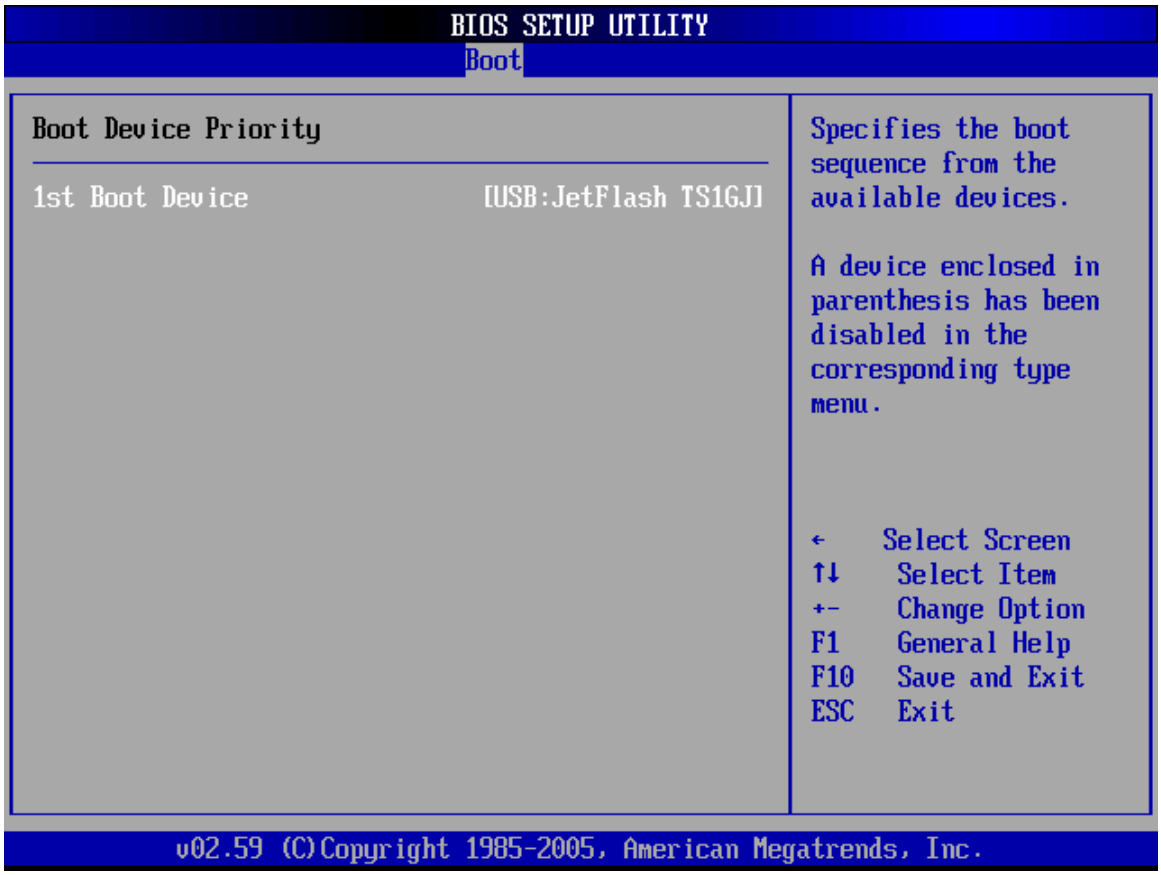
BIOS SETUP UTILITY
Boot
Boot Device Priority
1st Boot Device
[USB:JetFlash TS1GJ]
Specifies the boot sequence from the available devices.
A device enclosed in parenthesis has been disabled in the corresponding type menu.
← Select Screen
↑↓ Select Item
+- Change Option
F1 General Help
F10 Save and Exit
ESC Exit
v02.59 (C)Copyright 1985-2005, American Megatrends, Inc.

BIOS Menu 17: Boot Device Priority Settings

6.5.3 Hard Disk Drives

Use the **Hard Disk Drives** menu to specify the boot sequence of the available HDDs. When the menu is opened, the HDDs connected to the system are listed as shown below:

- 1st Drive [HDD: PM-(part number)]
- 2nd Drive [HDD: PS-(part number)]
- 3rd Drive [HDD: SM-(part number)]
- 4th Drive [HDD: SM-(part number)]

NOTE:

Only the drives connected to the system are shown. For example, if only two HDDs are connected only "**1st Drive**" and "**2nd Drive**" are listed.

The boot sequence from the available devices is selected. If the "**1st Drive**" option is selected a list of available HDDs is shown. Select the first HDD the system boots from. If the "**1st Drive**" is not used for booting this option may be disabled.

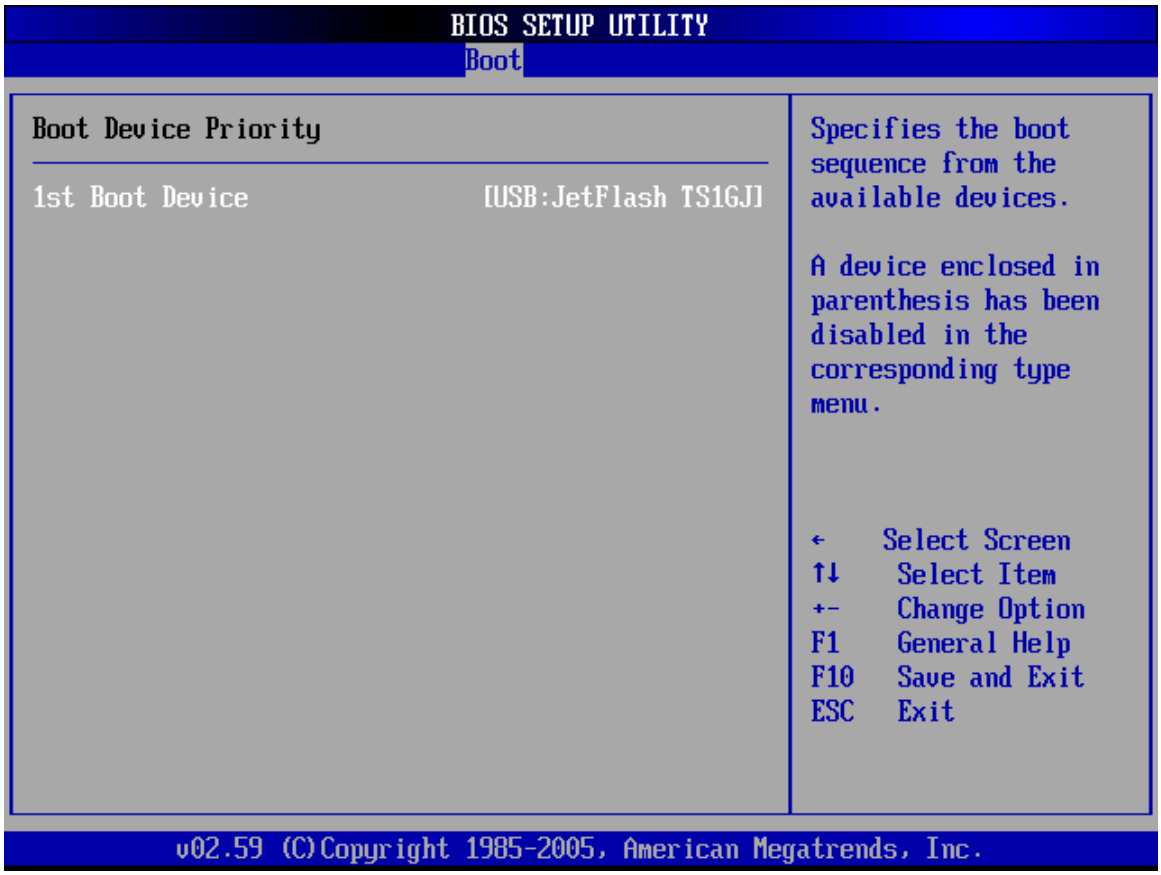
BIOS SETUP UTILITY
Boot
Boot Device Priority
1st Boot Device
[USB:JetFlash TS1GJ]
Specifies the boot sequence from the available devices.
A device enclosed in parenthesis has been disabled in the corresponding type menu.
← Select Screen
↑↓ Select Item
+- Change Option
F1 General Help
F10 Save and Exit
ESC Exit
v02.59 (C)Copyright 1985-2005, American Megatrends, Inc.

BIOS Menu 18: Hard Disk Drives

6.6 Security

Use the Security menu (BIOS Menu 19) to set system and user passwords.

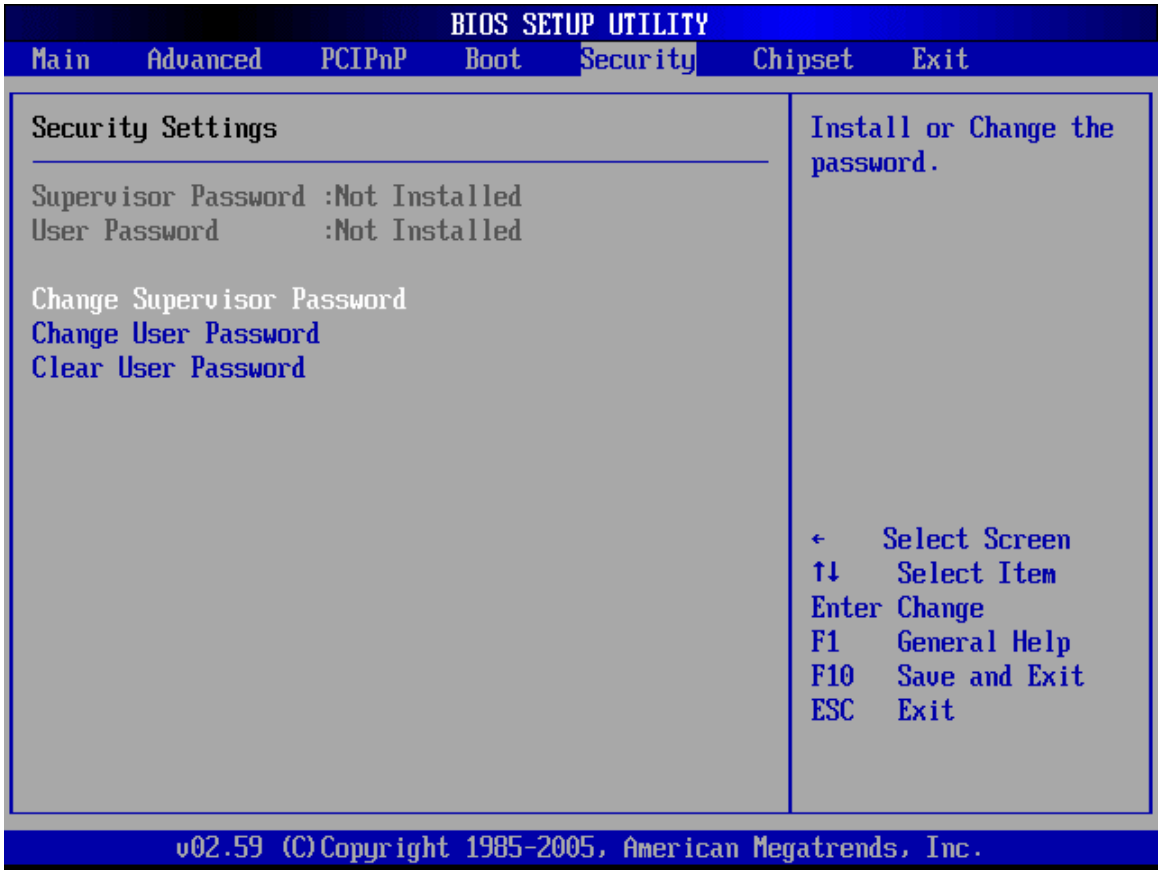

BIOS Menu 19: Security

➔ **Change Supervisor Password**

Use the **Change Supervisor Password** to set or change a supervisor password. The default for this option is **Not Installed**. If a supervisor password must be installed, select this field and enter the password. After the password has been added, **Install** appears next to **Change Supervisor Password**.

➔ **Change User Password**

Use the **Change User Password** to set or change a user password. The default for this option is **Not Installed**. If a user password must be installed, select this field and enter the password. After the password has been added, **Install** appears next to **Change User Password**.

6.7 Chipset

Use the **Chipset** menu (**BIOS Menu 20**) to access the NorthBridge and SouthBridge configuration menus.

WARNING:

Setting the wrong values for the Chipset BIOS selections in the Chipset BIOS menu may cause the system to malfunction.

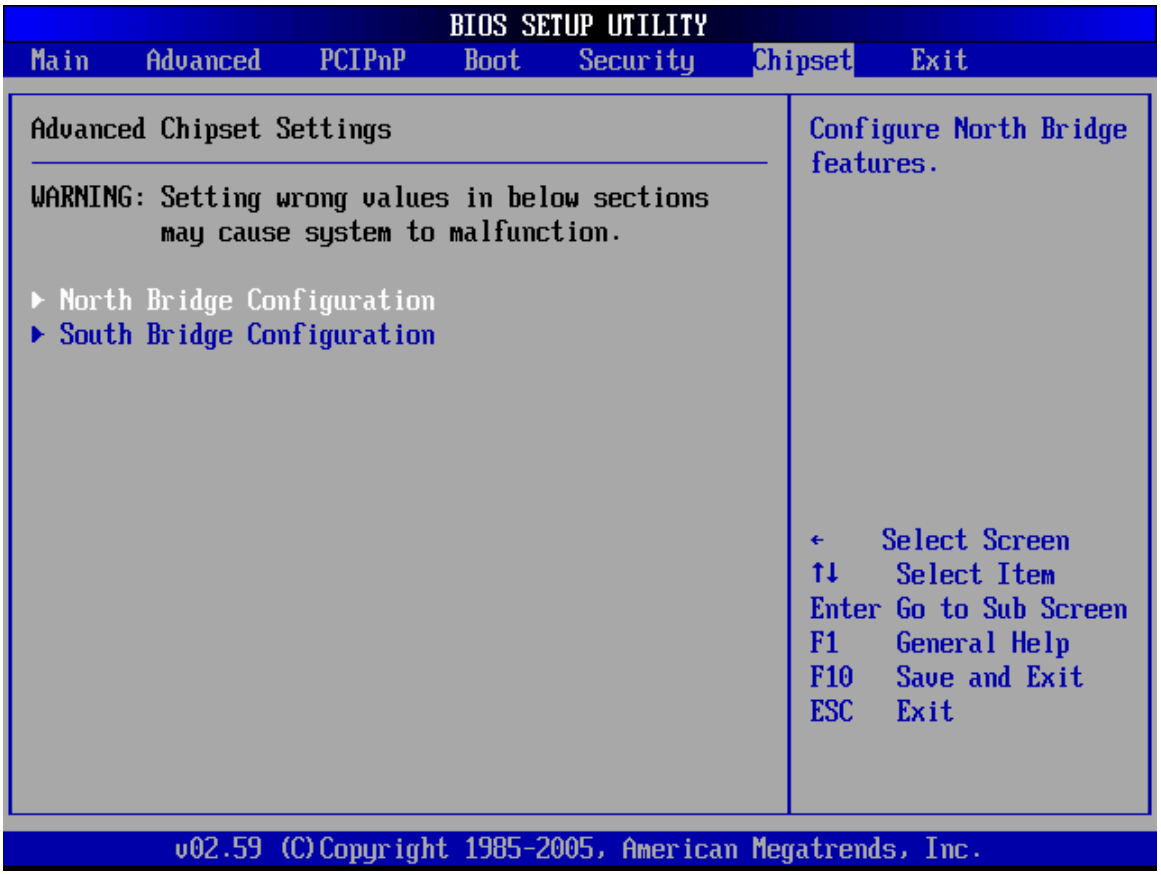
BIOS SETUP UTILITY
Main Advanced PCIPnP Boot Security Chipset Exit
Advanced Chipset Settings
WARNING: Setting wrong values in below sections
may cause system to malfunction.
North Bridge Configuration
South Bridge Configuration
Configure North Bridge features.
← Select Screen
↑↓ Select Item
Enter Go to Sub Screen
F1 General Help
F10 Save and Exit
ESC Exit
v02.59 (C)Copyright 1985-2005, American Megatrends, Inc.

BIOS Menu 20: Chipset

6.7.1 NorthBridge Configuration

Use the NorthBridge Configuration menu (BIOS Menu 20) to configure the northbridge chipset.

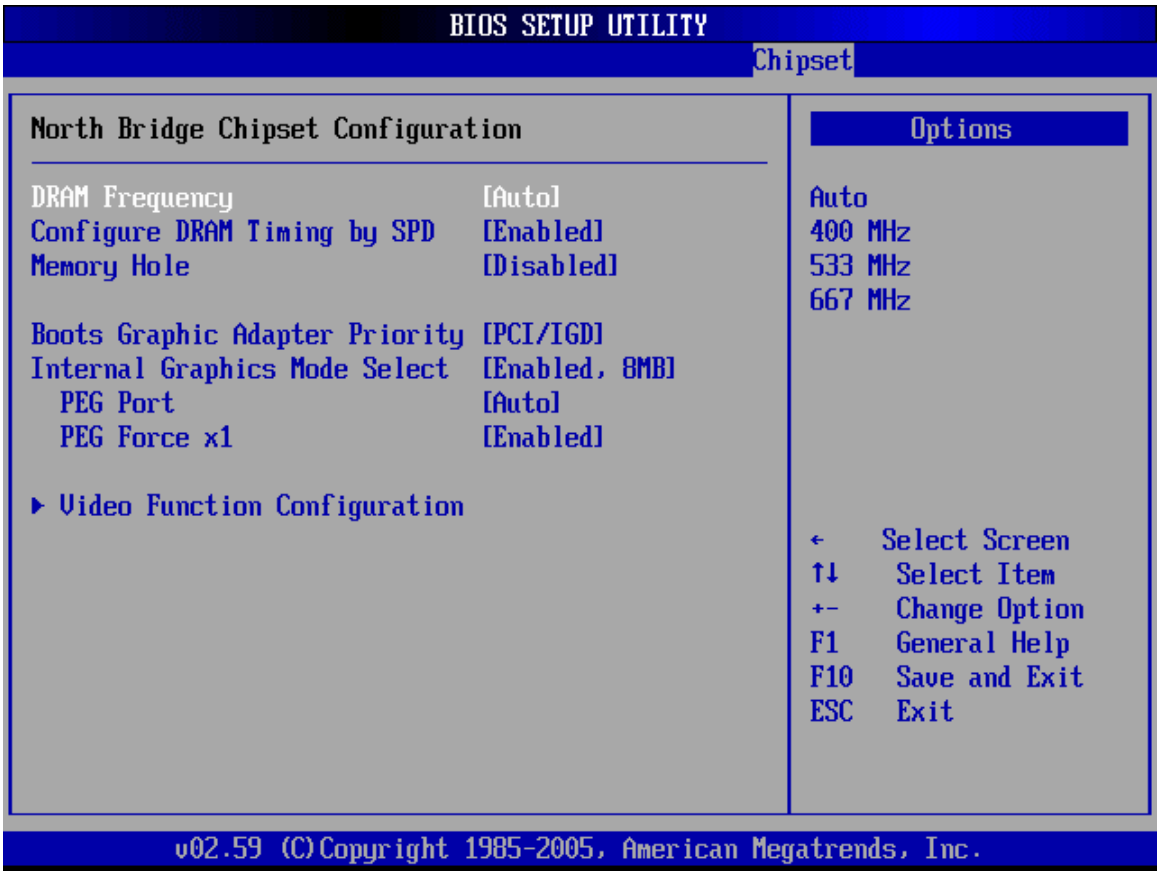

BIOS Menu 21:NorthBridge Chipset Configuration

➔ **DRAM Frequency [Auto]**

Use the **DRAM Frequency** option to specify the DRAM frequency or allow the system to automatically detect the DRAM frequency.

➔	**400MHz**		Sets the DRAM frequency to 400MHz
➔	**533MHz**		Sets the DRAM frequency to 533MHz
➔	**667MHz**		Sets the DRAM frequency to 667MHz
➔	**Auto**	**DEFAULT**	Automatically selects the DRAM frequency

➔ **Configure DRAM Timing by SPD [Enabled]**

Use the **Configure DRAM Timing by SPD** option to determine if the system uses the SPD *(*Serial Presence Detect) EEPROM to configure the DRAM timing. The SPD EEPROM contains all necessary DIMM specifications including the speed of the individual components such as CAS and bank cycle time as well as valid settings for the module and the manufacturer's code. The SPD enables the BIOS to read the spec sheet of the DIMMs on boot-up and then adjust the memory timing parameters accordingly.

➔ **Disabled**		DRAM timing parameters are manually set using the DRAM sub-items
➔ **Enabled**	**DEFAULT**	DRAM timing parameter are set according to the DRAM Serial Presence Detect (SPD)

If the **Configure DRAM Timing by SPD** option is disabled, the following configuration options appear.

- DRAM CAS# Latency [3]
- DRAM RAS# to CAS# Delay [5 DRAM Clocks]
- DRAM RAS# Precharge [5 DRAM Clocks]
- DRAM RAS# Activate to Precha [15 DRAM Clocks]

➔ **DRAM CAS# Latency [6**

Use the **CAS Latency Time** configuration option to set the Column Address Strobe (CAS) delay time. (To be able to change this configuration option the **DRAM Latency Timing** configuration option must be set to "**Manual**") The following configuration options are available

- 6 nanoseconds **DEFAULT**
- 5 nanoseconds
- 4 nanoseconds
- 3 nanoseconds

➔ **DRAM RAS# to CAS# Delay [6 DRAM Clocks]**

Use the **DRAM RAS# to CAS# Delay** option to specify the number of clock cycles must elapse between sending a RAS (row address strobe) signal and the CAS (column address strobe) signal. A pause is required between the RAS signal and the CAS signal to ensure the memory is correctly addressed. (To be able to change this configuration option the **Configure DRAM Timing by SPD** configuration option must be set to "**Disabled**") Configuration options are listed below:

- 2 DRAM Clocks
- 3 DRAM Clocks
- 4 DRAM Clocks
- 5 DRAM Clocks
- 6 DRAM Clocks **DEFAULT**

➔ **DRAM RAS# Precharge [3 DRAM Clocks]**

Use the **DRAM RAS# Precharge** option to set the speed at which the RAM terminates the access of one row and start accessing another. (To be able to change this configuration option the **DRAM RAS# Precharge** configuration option must be set to "**Manual**") The following configuration options are available

- 2 DRAM Clocks
- 3 DRAM Clocks
- 4 DRAM Clocks
- 5 DRAM Clocks
- 6 DRAM Clocks **DEFAULT**

➔ **DRAM RAS# Activate to Precha [15 DRAM Clocks]**

Use the **DRAM RAS# Activate to Precha** option to specify the length of the delay between the activation and precharge commands for the RAS signal. That is how long after activation can the access cycle be started again. This influences row activation time that is considered when memory has hit the last column in a specific row, or when an entirely different memory location is requested. (To be able to change this configuration

option the **Configure DRAM Timing by SPD** configuration option must be set to "**Disabled**") The following configuration options are available:

- 4 DRAM Clocks
- 5 DRAM Clocks
- 6 DRAM Clocks
- 7 DRAM Clocks
- 8 DRAM Clocks
- 9 DRAM Clocks
- 10 DRAM Clocks
- 11 DRAM Clocks
- 12 DRAM Clocks
- 13 DRAM Clocks
- 14 DRAM Clocks
- 15 DRAM Clocks **DEFAULT**

➔ **Memory Hole [Disabled]**

Use the **Memory Hole** option to reserve memory space between 15MB and 16MB for ISA expansion cards that require a specified area of memory to work properly. If an older ISA expansion card is used, please refer to the documentation that came with the card to see if it is necessary to reserve the space.

➔ **Disabled**	**DEFAULT**	Memory is not reserved for ISA expansion cards
➔ **15MB – 16MB**		Between 15MB and 16MB of memory is reserved for ISA expansion cards

➔ **Boots Graphics Adapter [PEG/PCI]**

Use the **Boots Graphics Adapter** option to select the graphics controller used as the primary boot device. Select either an integrated graphics controller (IGD) or a combination of PCI graphics controller, a PCI express (PEG) controller or an IGD. Configuration options are listed below:

- IGD
- PCI/IGD **DEFAULT**

➔ **Internal Graphics Mode Select [Enable, 8MB]**

Use the **Internal Graphic Mode Select** option to specify the amount of system memory that can be used by the Internal graphics device.

➔ **Disable**		
➔ **Enable, 1MB**		1MB of memory used by internal graphics device
➔ **Enable, 8MB**	**DEFAULT**	8MB of memory used by internal graphics device

➔ **PEG Port [Enabled]**

Use the **PEG Port** option to enable or disable the PCI Express port.

➔ **Disabled**		Installed PEG cards cannot function.
➔ **Auto**	**DEFAULT**	PEG card is detected automatically and functions normally

➔ **PEG Force X1 [Disabled]**

Use the **PEG Force x1** option to convert a PCI express X16 slot into a PCI express X1 slot.

➔ **Disabled**		PCI express X16 slot runs in normal mode

➔ **Enabled** **DEFAULT** PCI express X16 slot runs in PCI express X1 mode

6.7.1.1 Video Function Configuration

Use the **Video Function Configuration** menu to configure the video device connected to the system.

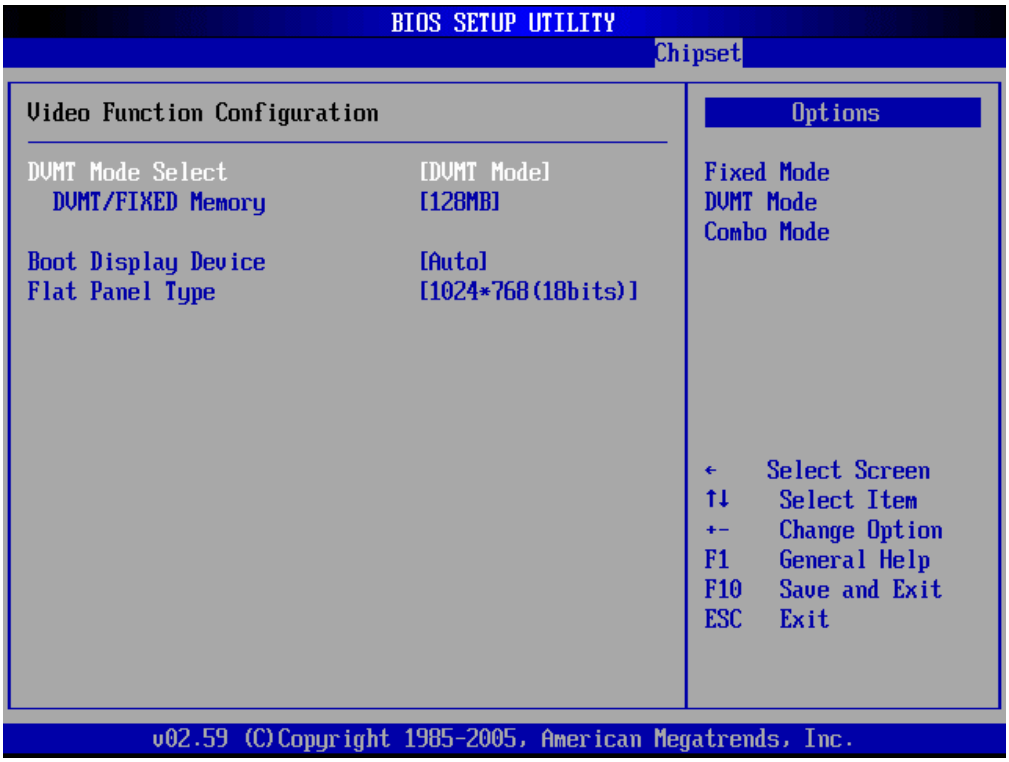

Figure 6-1: Video Function Configuration

➔ **DVMT Mode Select [DVMT Mode]**

Use the **DVMT Mode Select** option to select the Intel Dynamic Video Memory Technology (DVMT) operating mode.

➔ **Fixed Mode** A fixed portion of graphics memory is reserved as graphics memory.

➔ **DVMT Mode** **DEFAULT** Graphics memory is dynamically allocated according to the system and graphics needs.

➔ **Combo Mode** A fixed portion of graphics memory is reserved as graphics memory. If more memory is needed, graphics memory is dynamically allocated according to the system and graphics needs.

➔ **DVMT/FIXED Memory**

Use the **DVMT/FIXED Memory** option to specify the maximum amount of memory that can be allocated as graphics memory. This option can only be configured for if **DVMT Mode** or **Fixed Mode** is selected in the **DVMT Mode Selec**t option. If **Combo Mode** is selected, the maximum amount of graphics memory is 128MB. Configuration options are listed below.

- 64MB
- 128MB **DEFAULT**
- Maximum DVMT

➔ **Boot Display Device**

Use the **Boot Display Device** option to select the display device used by the system when it boots. Configuration options are listed below.

- Auto
- CRT **DEFAULT**
- TV
- LFP
- CRT + LFP

➔ **Flat Panel Type [640x480 18bit LVDS]**

The **Flat Panel Type** BIOS option specifies the flat panel PC type being used.

NOTE:

Please refer to the technical documents that came with the flat panel PC to ensure the correct settings are selected.

The following options are available:

- 640x480 18bits
- 800x600 18bits
- 1024x768 18bits
- 1280x1024 36bits
- 1400x1050 36bits
- 1600x1200 36bits
- 1024x768 48bits
- 1440*900 36bits
- 1440*900 48bits

6.7.2 SouthBridge Chipset Configuration

The SouthBridge Chipset Configuration menu (BIOS Menu 22) the southbridge chipset to be configured.

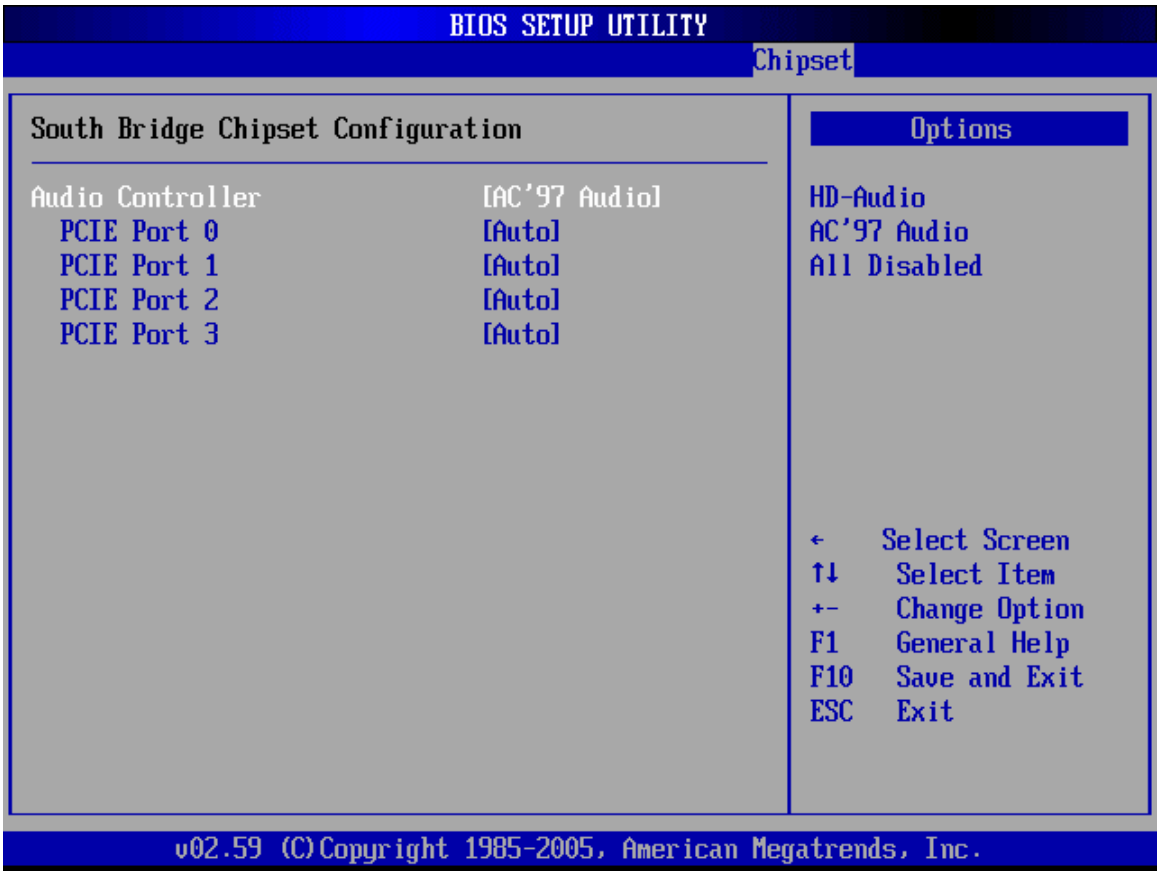

BIOS Menu 22:SouthBridge Chipset Configuration

➔ **Audio Controller [AC`97 Audio]**

The **Audio Controller** option allows selection of the audio controller to use.

➔	**HD Audio**		The Intel® High Definition Audio controller is enabled
➔	**AC`97 Audio**	DEFAULT	The on-board AC'97 controller is enabled
➔	**All Disabled**		All audio controllers are disabled

➔ **PCIE Port n [Enabled]**

Use the **PCIE Port n** option to determine enable or disable the nth PCIe port.

➔	**Auto**	**DEFAULT**	nth PCI Express port is detected automatically

➔ **Disabled** nth PCI Express port disabled.

➔ **Enabled** nth PCI Express port enabled.

6.8 Exit

Use the **Exit** menu (**BIOS Menu 23**) to load default BIOS values, optimal failsafe values and to save configuration changes.

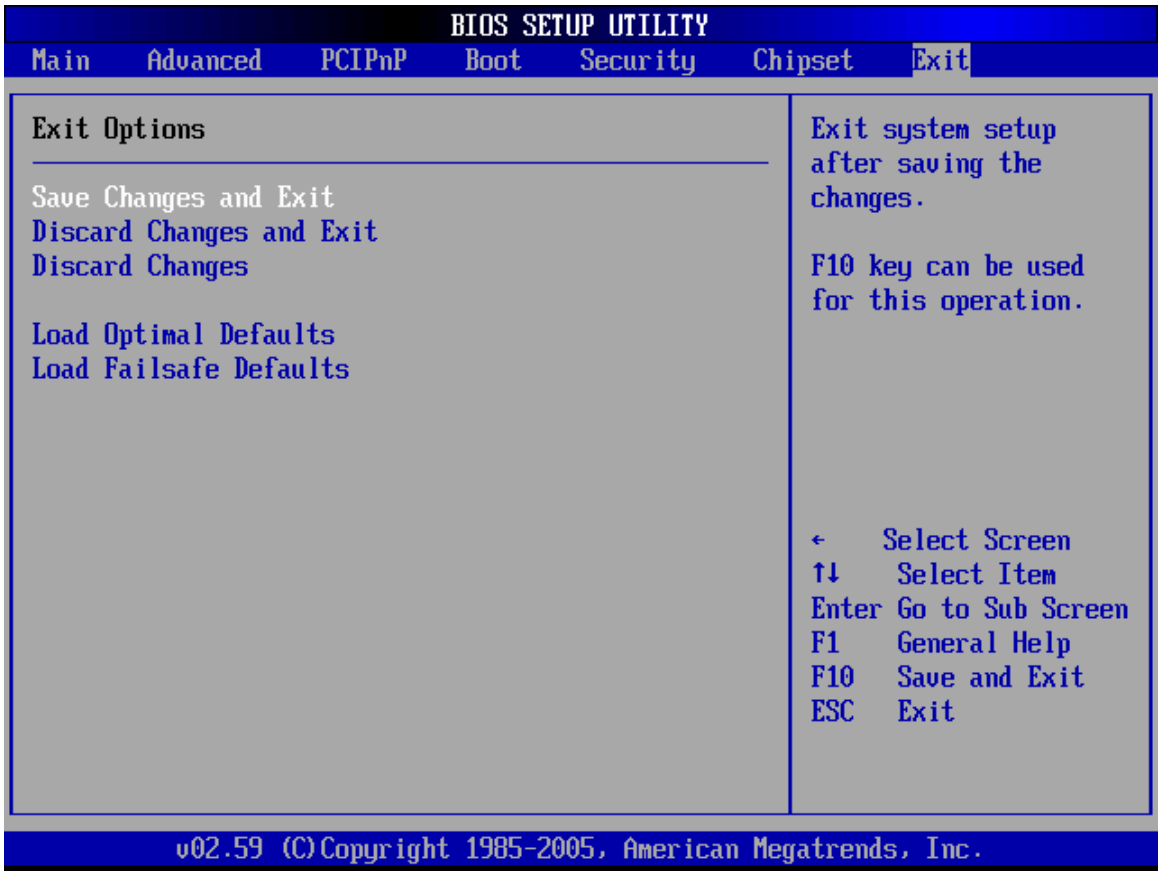
BIOS SETUP UTILITY
Main Advanced PCIPnP Boot Security Chipset Exit
Exit Options
Save Changes and Exit
Discard Changes and Exit
Discard Changes
Load Optimal Defaults
Load Failsafe Defaults
Exit system setup after saving the changes.
F10 key can be used for this operation.
← Select Screen
↑↓ Select Item
Enter Go to Sub Screen
F1 General Help
F10 Save and Exit
ESC Exit
v02.59 (C)Copyright 1985-2005, American Megatrends, Inc.

BIOS Menu 23:Exit

➔ **Save Changes and Exit**

Use the **Save Changes and Exit** option to save the changes made to the BIOS options and to exit the BIOS configuration setup program.

➔ **Discard Changes and Exit**

Use the **Discard Changes and Exit** option to exit the BIOS configuration setup program without saving the changes made to the system.

➔ **Discard Changes**

Use the **Discard Changes** option to discard the changes and remain in the BIOS configuration setup program.

➔ **Load Optimal Defaults**

Use the **Load Optimal Defaults** option to load the optimal default values for each of the parameters on the Setup menus. **F9 key can be used for this operation.**

➔ **Load Failsafe Defaults**

Use the Load Failsafe Defaults option to load failsafe default values for each of the parameters on the Setup menus. F8 key can be used for this operation.

Chapter

7

Driver Installation

7.1 Available Software Drivers

Note:

The content of the CD may vary throughout the life cycle of the product and is subject to change without prior notice. You may visit the IEI website or contact technical support for the latest updates.

The following drivers can be installed on the system.

- Chipset driver
- VGA driver
- LAN driver

Installation instructions are given below.

7.2 Driver CD Auto-run

All the drivers for the PICOe-9452 are on the CD that came with the system. To install the drivers, please follow the steps below.

Step 1: Insert the CD into a CD drive connected to the system.

Step 2: The starts up automatically

Step 3: Select PICOe-9452 from the initial menu shown in **Figure 7-1**.

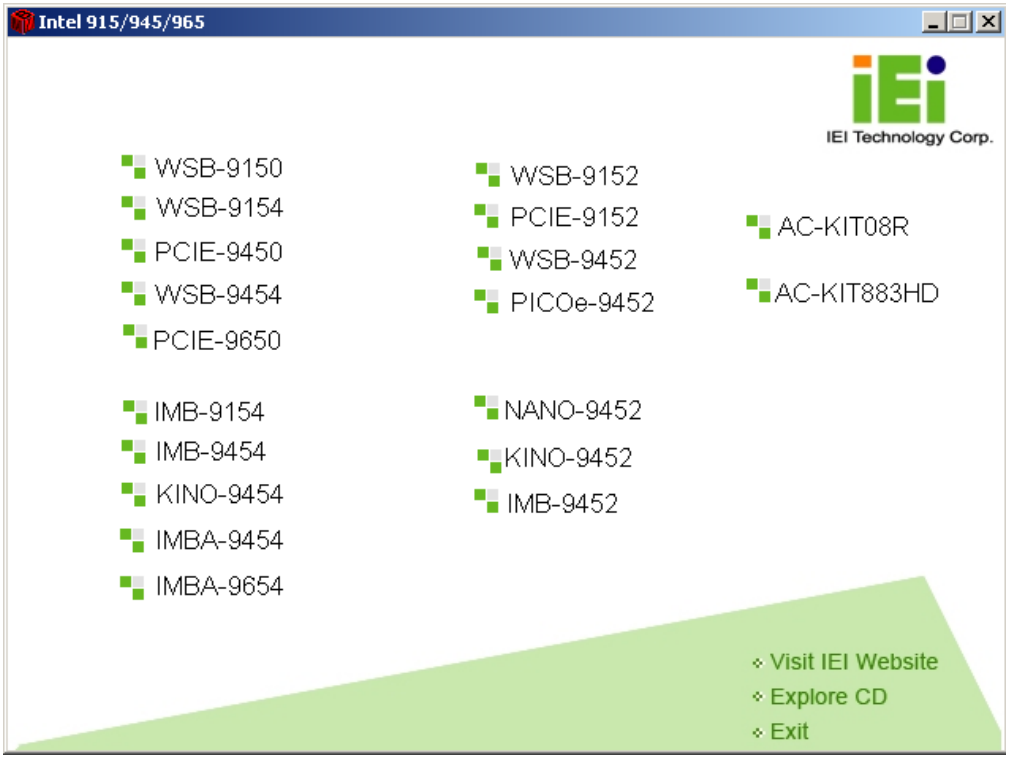

Figure 7-1: Introduction Screen

Step 4: A new screen with a list of available drivers appears (**Figure 7-2**).

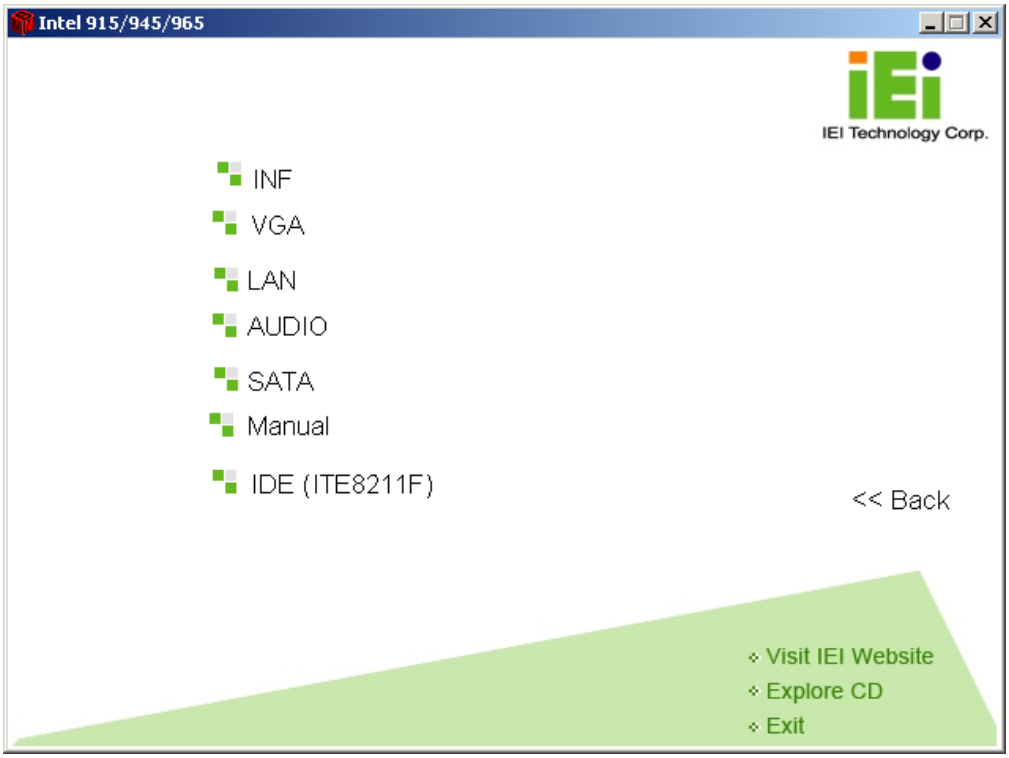

Figure 7-2: Available Drivers

Step 5: Select the driver to install from the list in **Figure 7-2**.

7.3 Chipset Driver Installation

To install the chipset driver, please follow the steps below:

Step 1: Select the INF driver from the list in **Figure 7-2**.

Step 2: A new window opens (**Figure 7-3**).

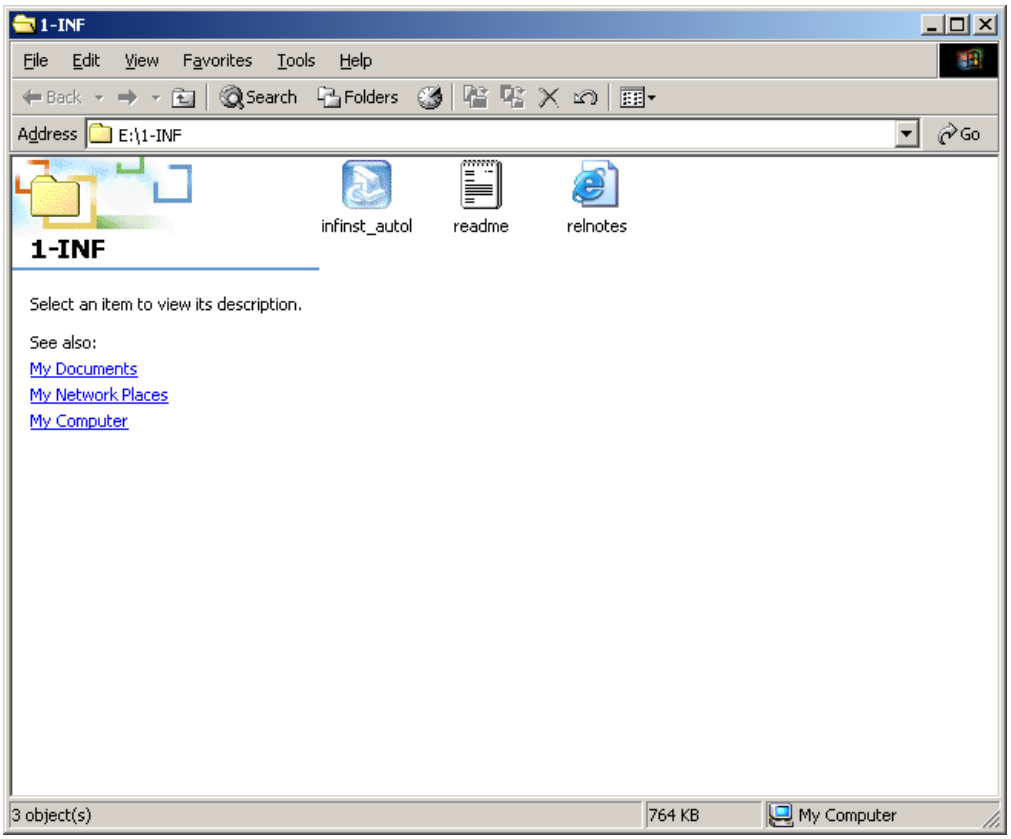

Figure 7-3: Chipset Driver Installation Program

Step 3: Double click the infinst_Autol icon in **Figure 7-3**.

Step 4: The welcome screen in **Figure 7-4** appears.

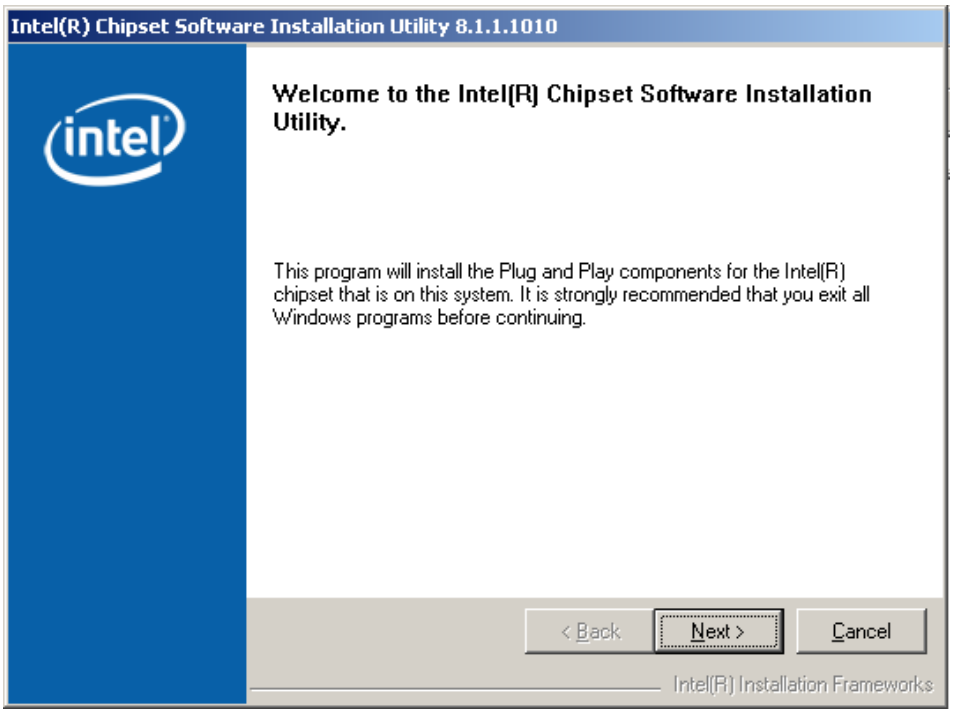
Intel(R) Chipset Software Installation Utility 8.1.1.1010
Welcome to the Intel(R) Chipset Software Installation Utility.
This program will install the Plug and Play components for the Intel(R) chipset that is on this system. It is strongly recommended that you exit all Windows programs before continuing.
< Back
Next >
Cancel
Intel(R) Installation Frameworks

Figure 7-4: Chipset Driver Installation Welcome Screen

Step 5: Click **NEXT** in **Figure 7-4** to continue the installation process.

Step 6: The license agreement in **Figure 7-5** appears.

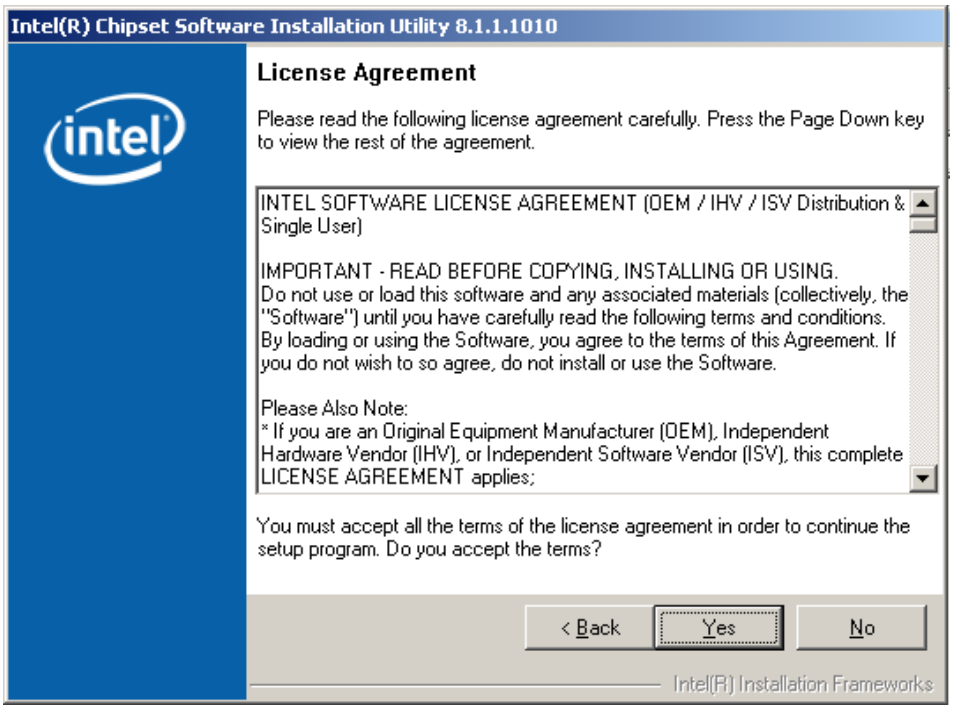
Intel(R) Chipset Software Installation Utility 8.1.1.1010
License Agreement
Please read the following license agreement carefully. Press the Page Down key to view the rest of the agreement.
INTEL SOFTWARE LICENSE AGREEMENT (OEM / IHV / ISV Distribution & Single User)
IMPORTANT - READ BEFORE COPYING, INSTALLING OR USING.
Do not use or load this software and any associated materials (collectively, the "Software") until you have carefully read the following terms and conditions. By loading or using the Software, you agree to the terms of this Agreement. If you do not wish to so agree, do not install or use the Software.
Please Also Note:
* If you are an Original Equipment Manufacturer (OEM), Independent Hardware Vendor (IHV), or Independent Software Vendor (ISV), this complete LICENSE AGREEMENT applies;
You must accept all the terms of the license agreement in order to continue the setup program. Do you accept the terms?
< Back
Yes
No
Intel(R) Installation Frameworks

Figure 7-5: Chipset Driver Installation License Agreement

Step 7: Click **YES** to continue the setup.

Step 8: The Readme file in **Figure 7-6** appears.

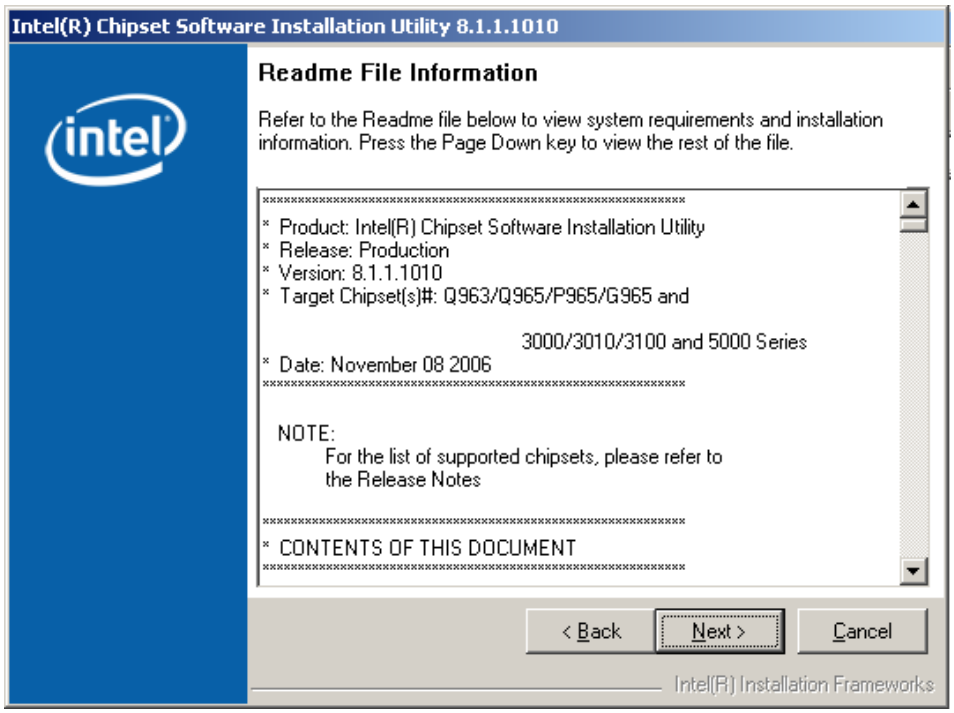
Intel(R) Chipset Software Installation Utility 8.1.1.1010
Readme File Information
Refer to the Readme file below to view system requirements and installation information. Press the Page Down key to view the rest of the file.
* Product: Intel(R) Chipset Software Installation Utility
* Release: Production
* Version: 8.1.1.1010
* Target Chipset(s)#: Q963/Q965/P965/G965 and
3000/3010/3100 and 5000 Series
* Date: November 08 2006
NOTE:
For the list of supported chipsets, please refer to the Release Notes
* CONTENTS OF THIS DOCUMENT
< Back
Next >
Cancel
Intel(R) Installation Frameworks

Figure 7-6: Chipset Driver Readme File Information

Step 9: Click **NEXT** in **Figure 7-6** to start the driver installation.

Step 10: After the driver installation process is complete, a confirmation screen (**Figure 7-7)** appears.

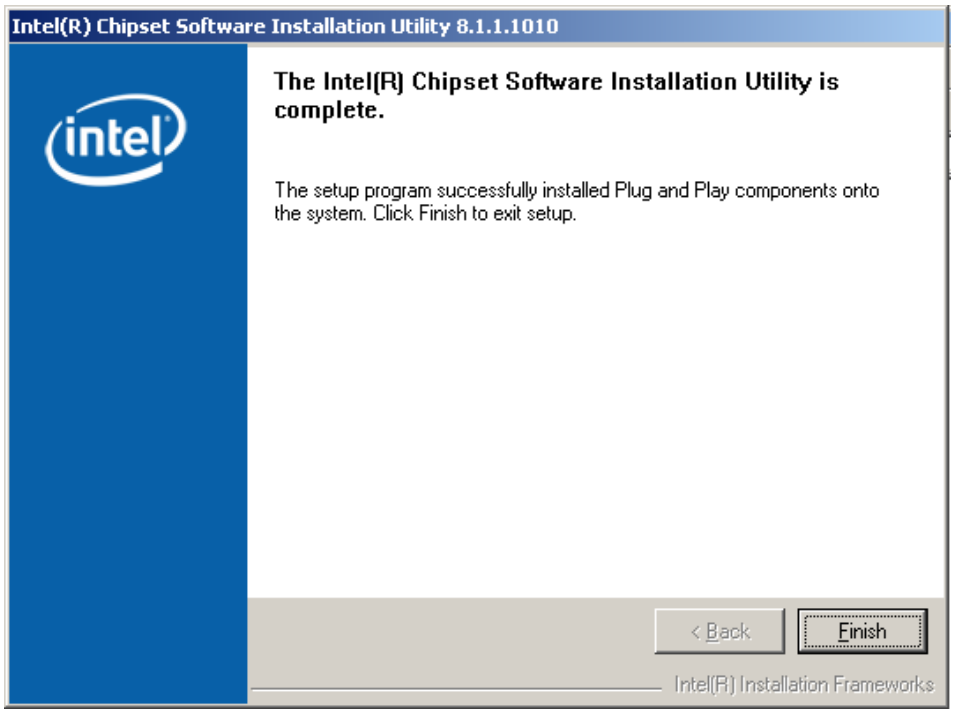
Intel(R) Chipset Software Installation Utility 8.1.1.1010
The Intel(R) Chipset Software Installation Utility is complete.
The setup program successfully installed Plug and Play components onto the system. Click Finish to exit setup.
< Back
Finish
Intel(R) Installation Frameworks

Figure 7-7: Chipset Driver Installation Complete

7.4 Intel Graphics Media Accelerator Driver

To install the chipset driver, please follow the steps below:

Step 1: Select the VGA driver from the list in **Figure 7-2**.

Step 2: A new window opens (**Figure 7-8**).

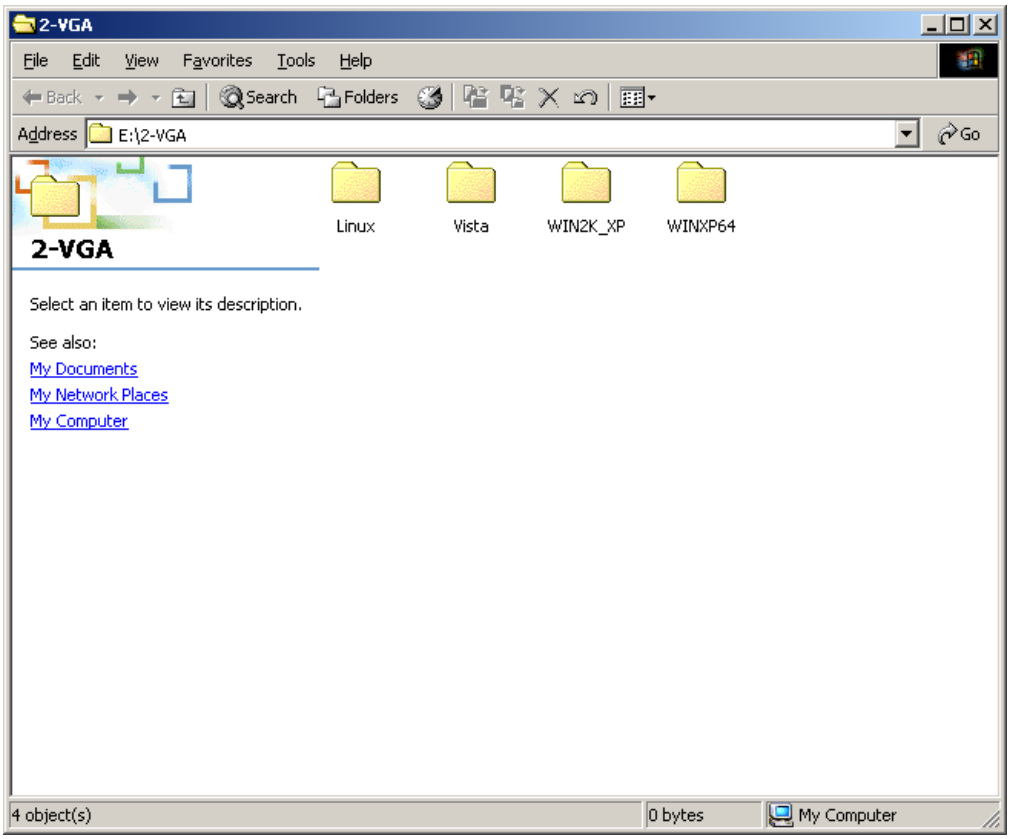

Figure 7-8: Select the Operating System

Step 3: Select the operating system from those shown in **Figure 7-8**.

Step 4: A new window appears (**Figure 7-9**).

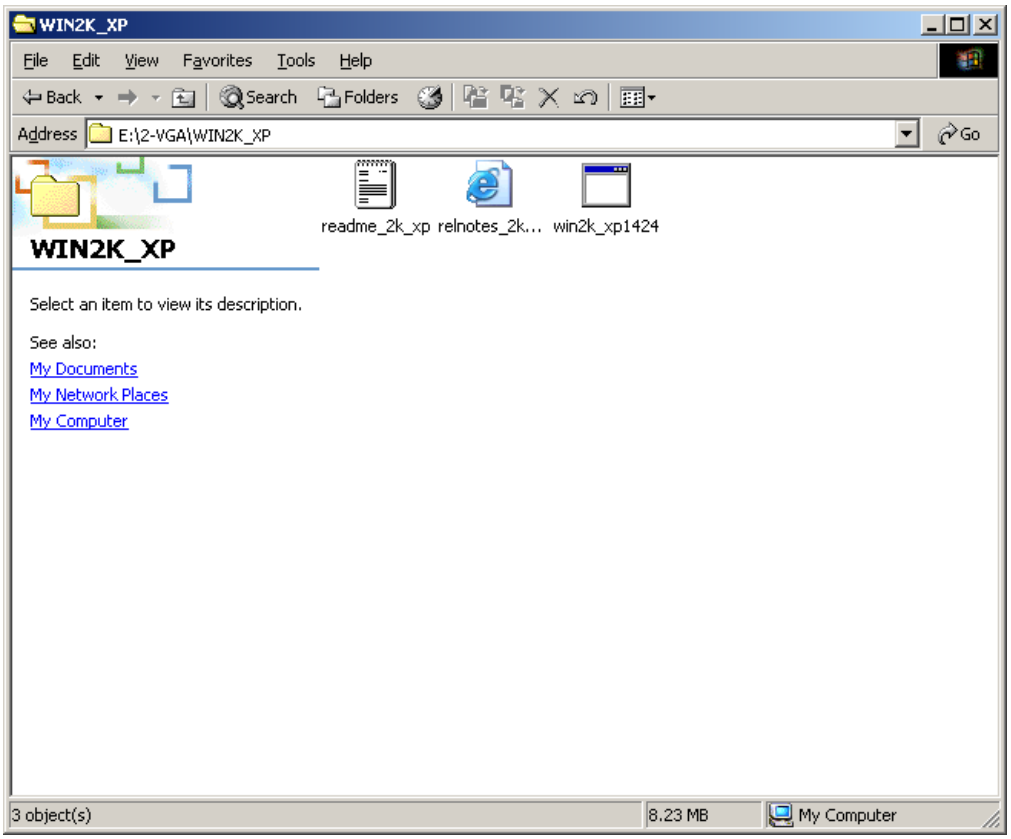

Figure 7-9: VGA Driver

Step 5: Click the installation program icon in **Figure 7-9**.

Step 6: The Readme information file shown in **Figure 7-10** appears.

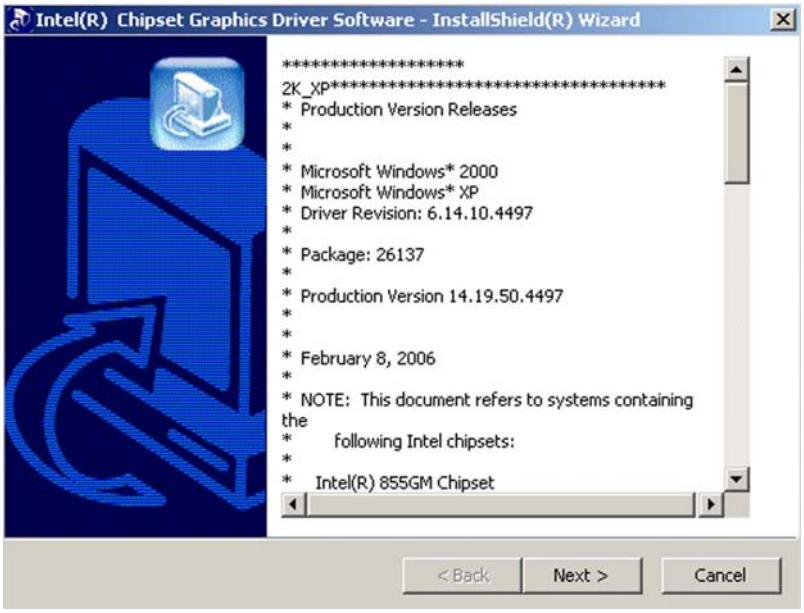

Figure 7-10: GMA Driver Readme File

Step 7: Click **NEXT** to extract the GMA driver files. See **Figure 7-11**.

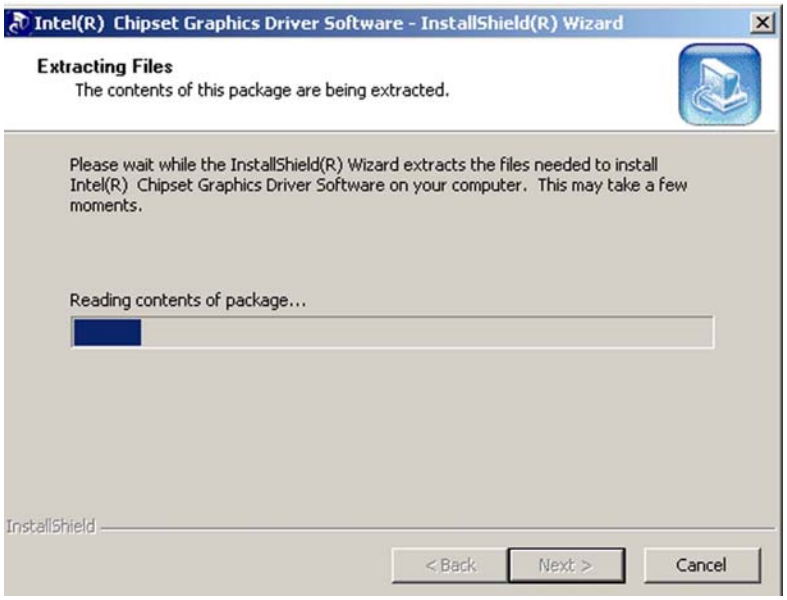
Intel(R) Chipset Graphics Driver Software - InstallShield(R) Wizard
Extracting Files
The contents of this package are being extracted.
Please wait while the InstallShield(R) Wizard extracts the files needed to install Intel(R) Chipset Graphics Driver Software on your computer. This may take a few moments.
Reading contents of package...
InstallShield
< Back
Next >
Cancel

Figure 7-11: GMA Driver File Extraction

Step 8: The welcome screen shown in **Figure 7-12** appears.

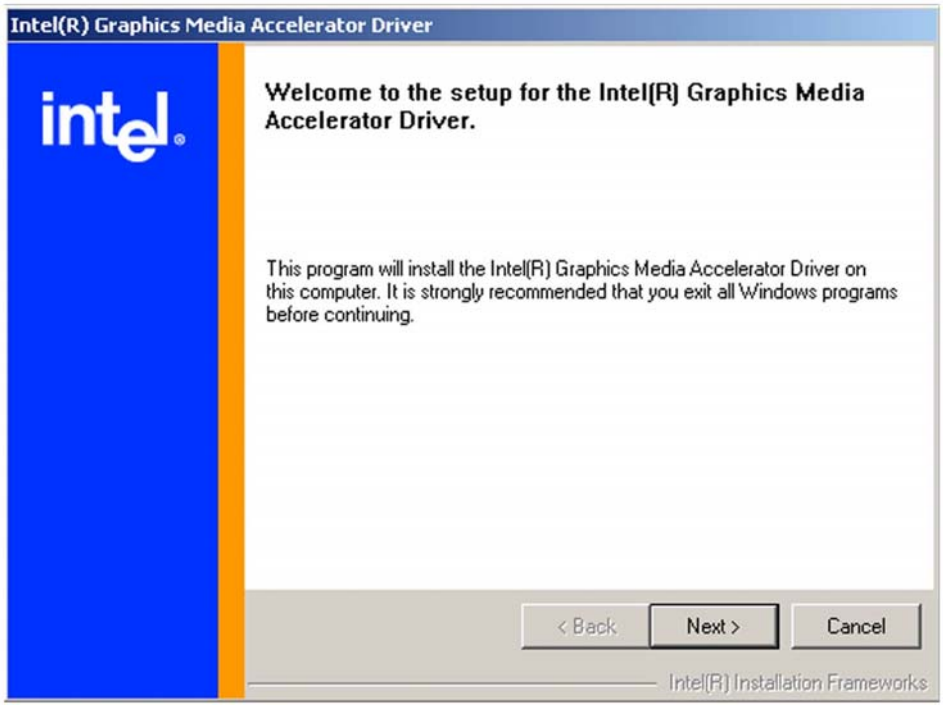
Intel(R) Graphics Media Accelerator Driver
intel
Welcome to the setup for the Intel(R) Graphics Media Accelerator Driver.
This program will install the Intel(R) Graphics Media Accelerator Driver on this computer. It is strongly recommended that you exit all Windows programs before continuing.
< Back
Next >
Cancel
Intel(R) Installation Frameworks

Figure 7-12: GMA Driver Installation Welcome Screen

Step 9: To continue the installation process, click **NEXT**.

Step 10: The license agreement in **Figure 7-13** appears.

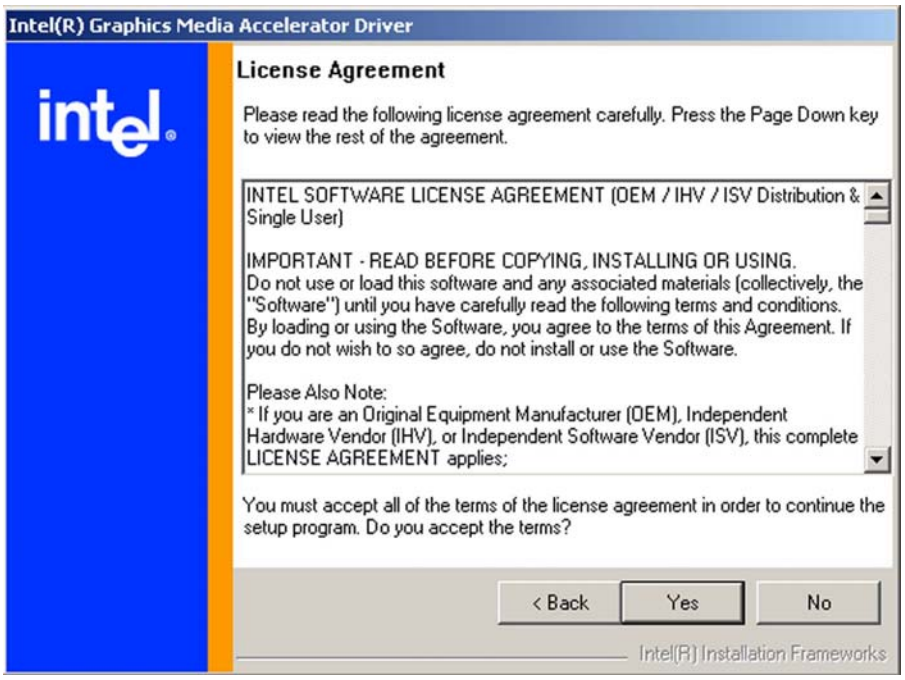
Intel(R) Graphics Media Accelerator Driver
intel
License Agreement
Please read the following license agreement carefully. Press the Page Down key to view the rest of the agreement.
INTEL SOFTWARE LICENSE AGREEMENT (OEM / IHV / ISV Distribution & Single User)
IMPORTANT - READ BEFORE COPYING, INSTALLING OR USING.
Do not use or load this software and any associated materials (collectively, the "Software") until you have carefully read the following terms and conditions. By loading or using the Software, you agree to the terms of this Agreement. If you do not wish to so agree, do not install or use the Software.
Please Also Note:
* If you are an Original Equipment Manufacturer (OEM), Independent Hardware Vendor (IHV), or Independent Software Vendor (ISV), this complete LICENSE AGREEMENT applies;
You must accept all of the terms of the license agreement in order to continue the setup program. Do you accept the terms?
< Back
Yes
No
Intel(R) Installation Frameworks

Figure 7-13: GMA Driver License Agreement

Step 11: Click the **YES** in **Figure 7-13** to continue.

Step 12: The installation notice shown in **Figure 7-14** appears.

Figure 7-14: GMA Driver Installing Notice

Step 13: A confirmation screen shown in **Figure 7-15** appears.

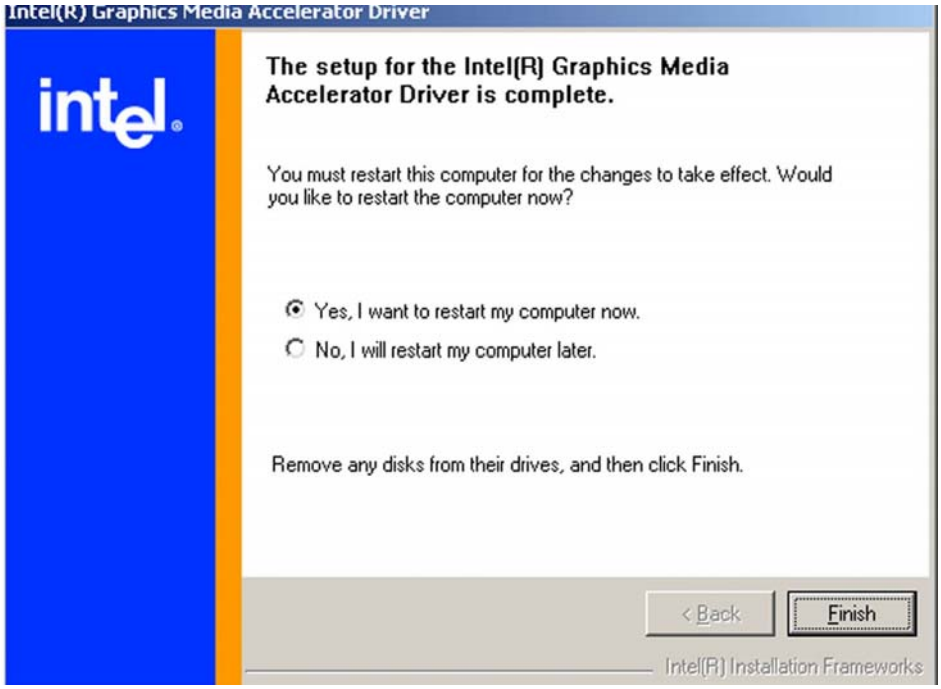
Intel(R) Graphics Media Accelerator Driver
intel
The setup for the Intel(R) Graphics Media Accelerator Driver is complete.
You must restart this computer for the changes to take effect. Would you like to restart the computer now?
Yes, I want to restart my computer now.
No, I will restart my computer later.
Remove any disks from their drives, and then click Finish.
< Back
Finish
Intel(R) Installation Frameworks

Figure 7-15: GMA Driver Installation Complete

Step 14: After selecting when to restart the computer in **Figure 7-15**, click **FINISH**.

7.5 Broadcom LAN Driver (for GbE LAN) Installation

To install the Broadcom LAN driver, please follow the steps below.

Step 1: Open **Windows Control Panel (Figure 7-16)**.

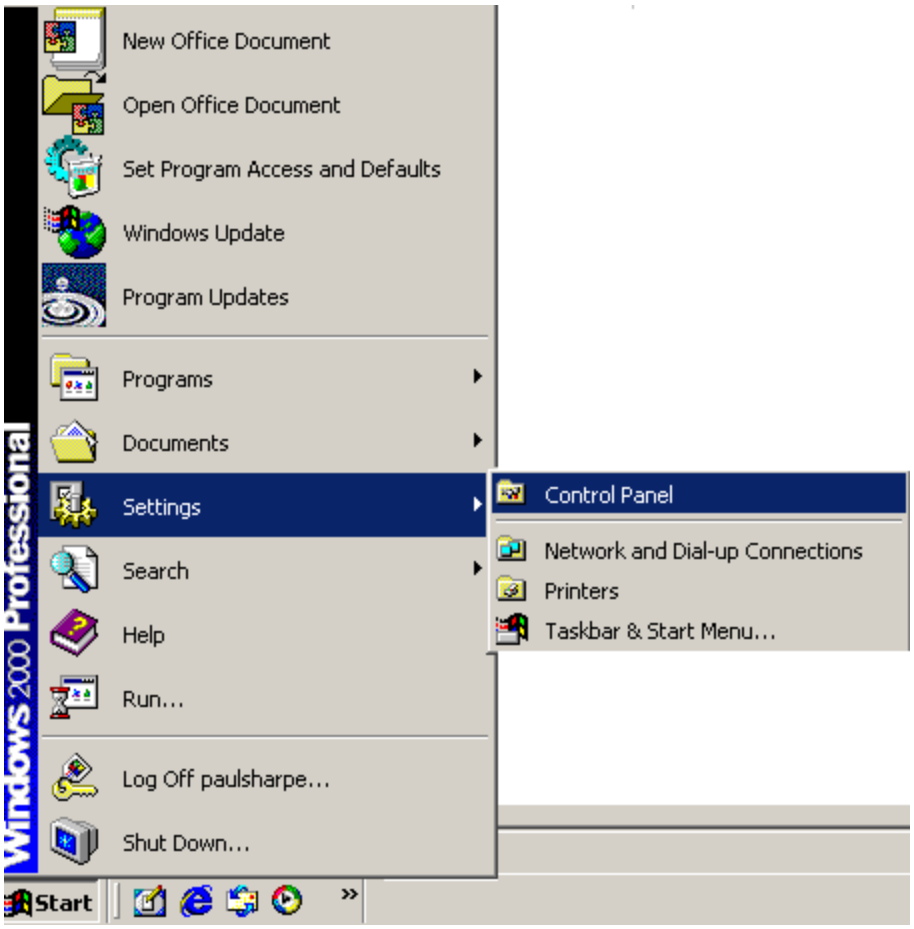

Figure 7-16: Access Windows Control Panel

Step 2: Double click the **System** icon (**Figure 7-17**).

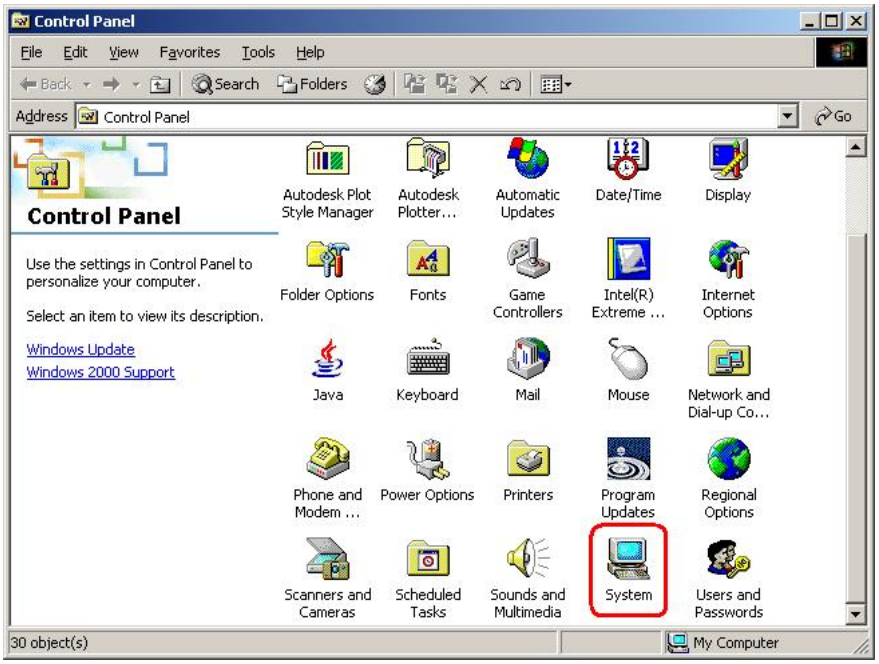

Figure 7-17: Double Click the System Icon

Step 3: Double click the **Device Manager** tab (**Figure 7-18**).

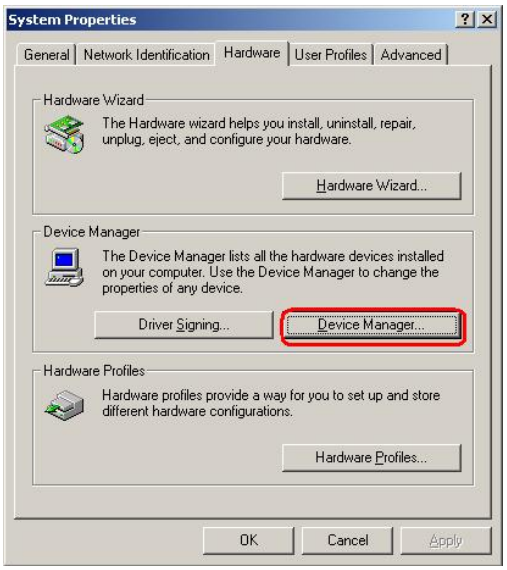
System Properties
General Network Identification Hardware User Profiles Advanced
Hardware Wizard
The Hardware wizard helps you install, uninstall, repair, unplug, eject, and configure your hardware.
Hardware Wizard...
Device Manager
The Device Manager lists all the hardware devices installed on your computer. Use the Device Manager to change the properties of any device.
Driver Signing...
Device Manager...
Hardware Profiles
Hardware profiles provide a way for you to set up and store different hardware configurations.
Hardware Profiles...
OK
Cancel
Apply

Figure 7-18: Double Click the Device Manager Tab

Step 4: A list of system hardware devices appears (**Figure 7-19**).

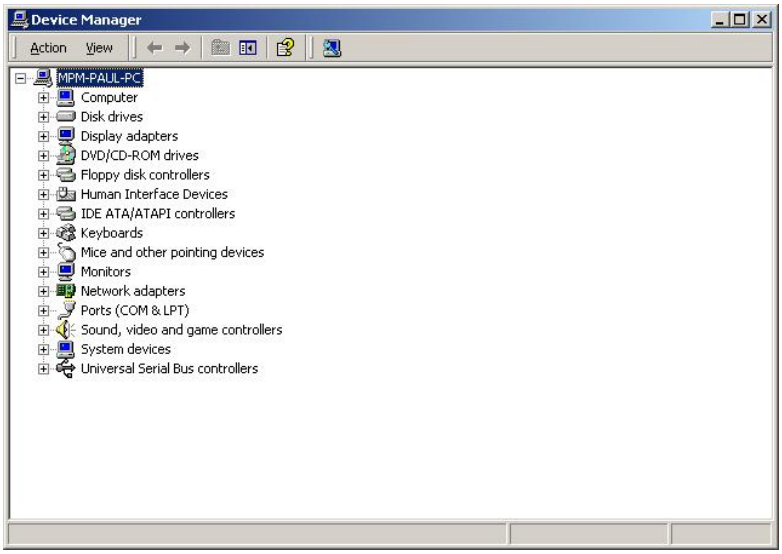

Figure 7-19: Device Manager List

Step 5: Double click the listed device that has question marks next to it. (This means Windows does not recognize the device).

Step 6: The **Device Driver Wizard** appears (**Figure 7-20**). Click **NEXT** to continue.

Upgrade Device Driver Wizard
Install Hardware Device Drivers
A device driver is a software program that enables a hardware device to work with an operating system.
This wizard upgrades drivers for the following hardware device:
532DD36TA0379HannStar U171
Upgrading to a newer version of a device driver may add functionality to or improve the performance of this device.
What do you want the wizard to do?
Search for a suitable driver for my device (recommended)
Display a list of the known drivers for this device so that I can choose a specific driver
< Back
Next >
Cancel

Figure 7-20: Search for Suitable Driver

Step 7: Select "**Specify a Location**" in the **Locate Driver Files** window (**Figure 7-21**).

Click **NEXT** to continue.

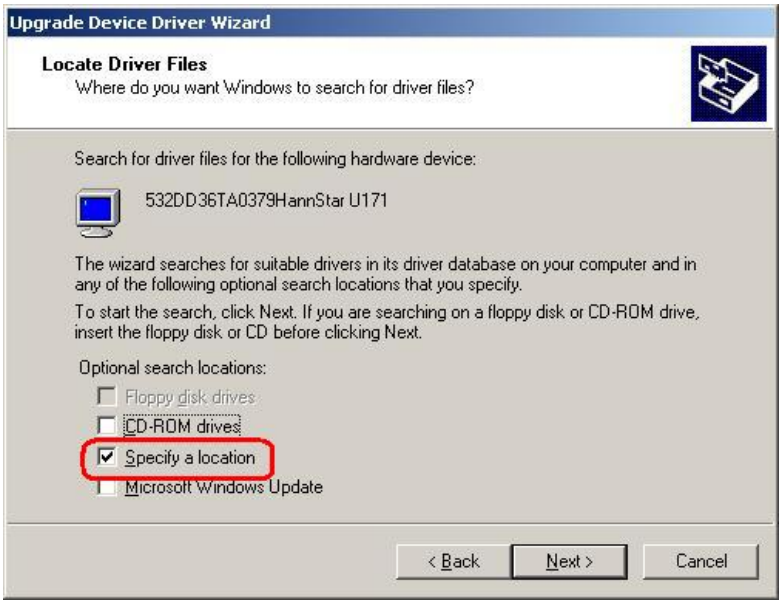
Upgrade Device Driver Wizard
Locate Driver Files
Where do you want Windows to search for driver files?
Search for driver files for the following hardware device:
532DD36TA0379HannStar U171
The wizard searches for suitable drivers in its driver database on your computer and in any of the following optional search locations that you specify.
To start the search, click Next. If you are searching on a floppy disk or CD-ROM drive, insert the floppy disk or CD before clicking Next.
Optional search locations:
Floppy disk drives
CD-ROM drives
Specify a location
Microsoft Windows Update
< Back
Next >
Cancel

Figure 7-21: Locate Driver Files

Step 8: Select the proper OS folder under the "**X:\3-LAN\BROADCOM BCM57xx Drivers**" directory (**Figure 7-22**) in the location browsing window, where "**X:\"** is the system CD drive.

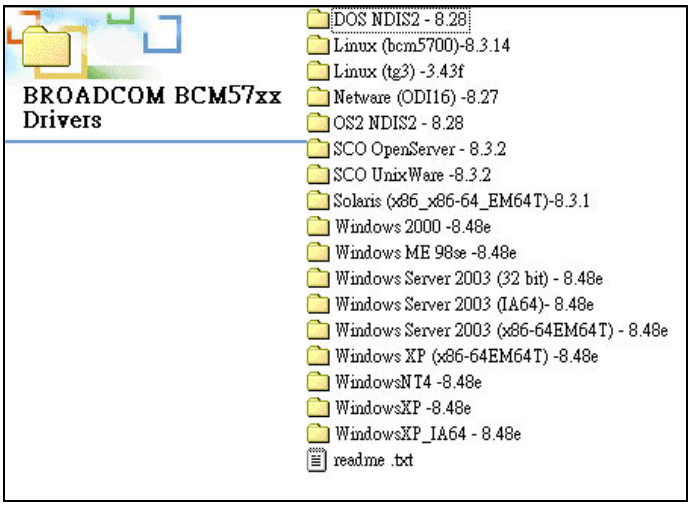

Figure 7-22: Location Browsing Window

Step 9: Click **OK** to continue. A driver files location menu window appears. Click **NEXT** to continue. The driver is installed.

7.6 Realtek HD Audio Driver (ALC883) Installation

To install the Realtek High Definition (HD) Audio driver, please follow the steps below.

7.6.1 BIOS Setup

Step 1: Enter the BIOS setup. To do this, reboot the system and press **DEL** during POST.

Step 2: Go to the Southbridge Configuration menu. Set the **Audio Controller** option to [Azalia]. See **Chapter 6** for details.

Step 3: Press **F10** to save the changes and exit the BIOS setup. The system reboots.

7.6.2 Driver Installation

Step 1: Insert the CD that came with the package.

Step 2: From the main driver menu, navigate to **X:\4-AUDIO\AC-KIT883HD\Windows** (or other appropriate OS). **X:** represents the system CD drive. A new window appears showing the folder contents (**Figure 6-26**).

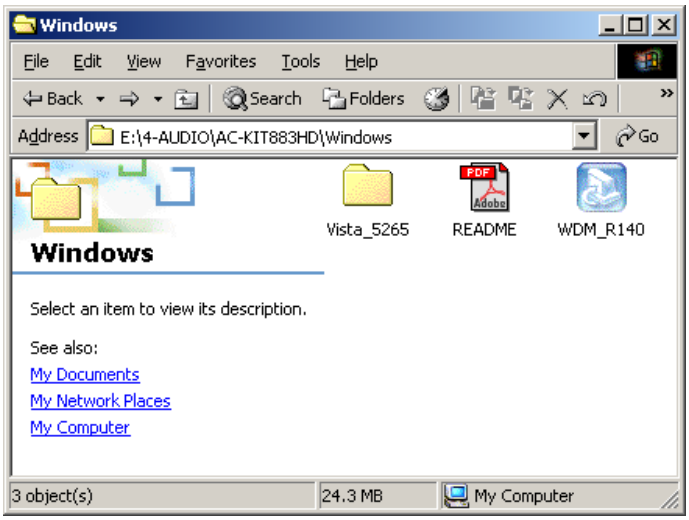

Figure 7-23: 4-AUDIO\AC-KIT883HD\Windows Folder

Step 3: Double-click the **WDM_R140** icon to begin the driver installation process.

Step 4: Once the **WDM_R140** icon is double clicked, the contents of the installation package are extracted. See **Figure 7-24.**

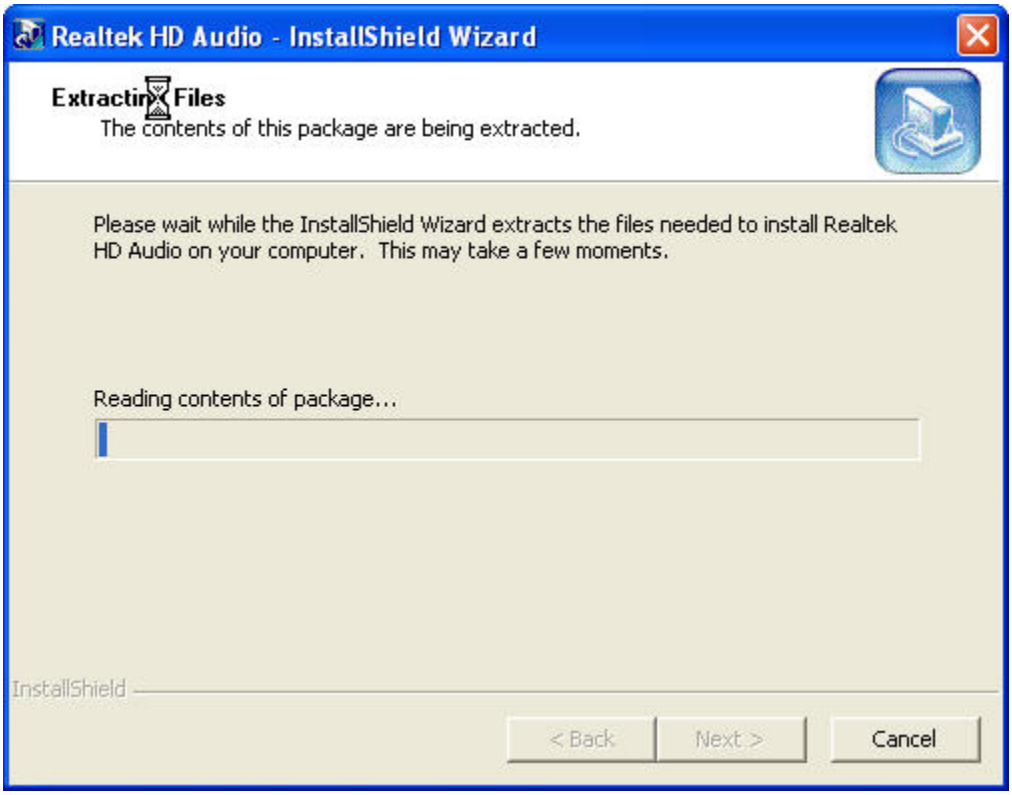
Realtek HD Audio - InstallShield Wizard
Extracting Files
The contents of this package are being extracted.
Please wait while the InstallShield Wizard extracts the files needed to install Realtek HD Audio on your computer. This may take a few moments.
Reading contents of package...
InstallShield
< Back
Next >
Cancel

Figure 7-24: HD Audio Driver Setup Extracting Files

Step 5: The **Welcome** screen appears. Click **NEXT**. See **Figure 7-25**.

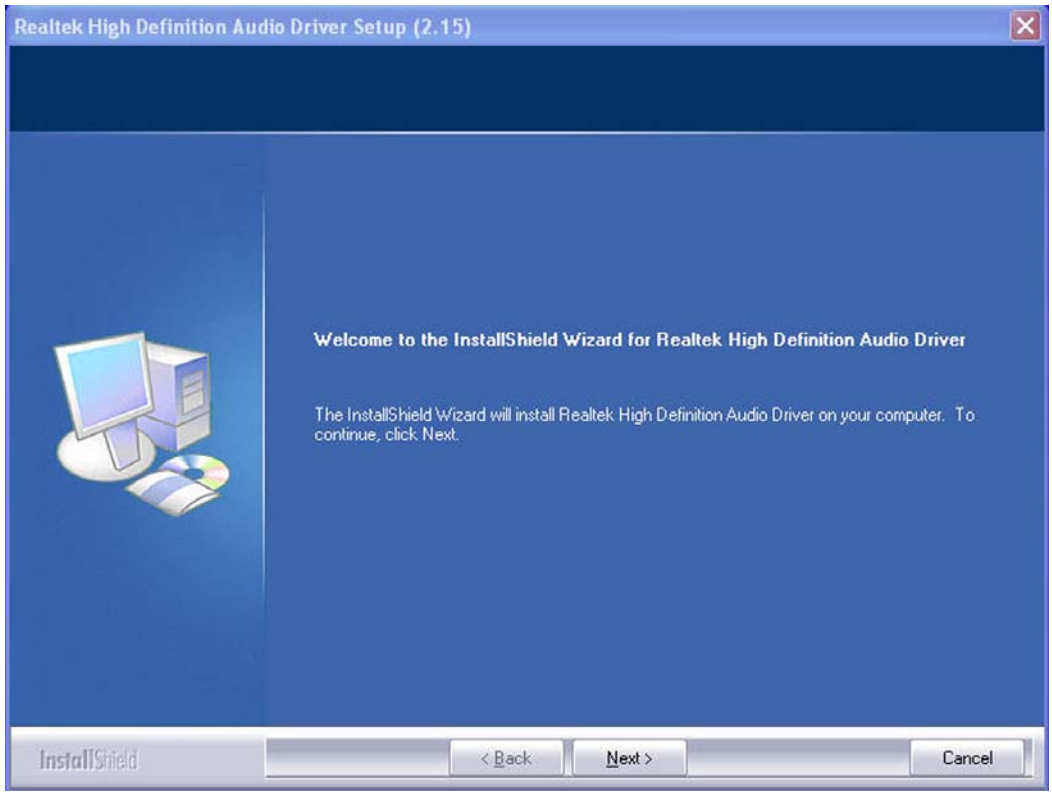
Realtek High Definition Audio Driver Setup (2.15)
Welcome to the InstallShield Wizard for Realtek High Definition Audio Driver
The InstallShield Wizard will install Realtek High Definition Audio Driver on your computer. To continue, click Next.
InstallShield
< Back
Next >
Cancel

Figure 7-25: HD Audio Driver Setup Welcome Screen

Step 6: The driver is automatically installed.

Step 7: After the driver installation process is complete, a confirmation screen shown in **Figure 7-26** appears.

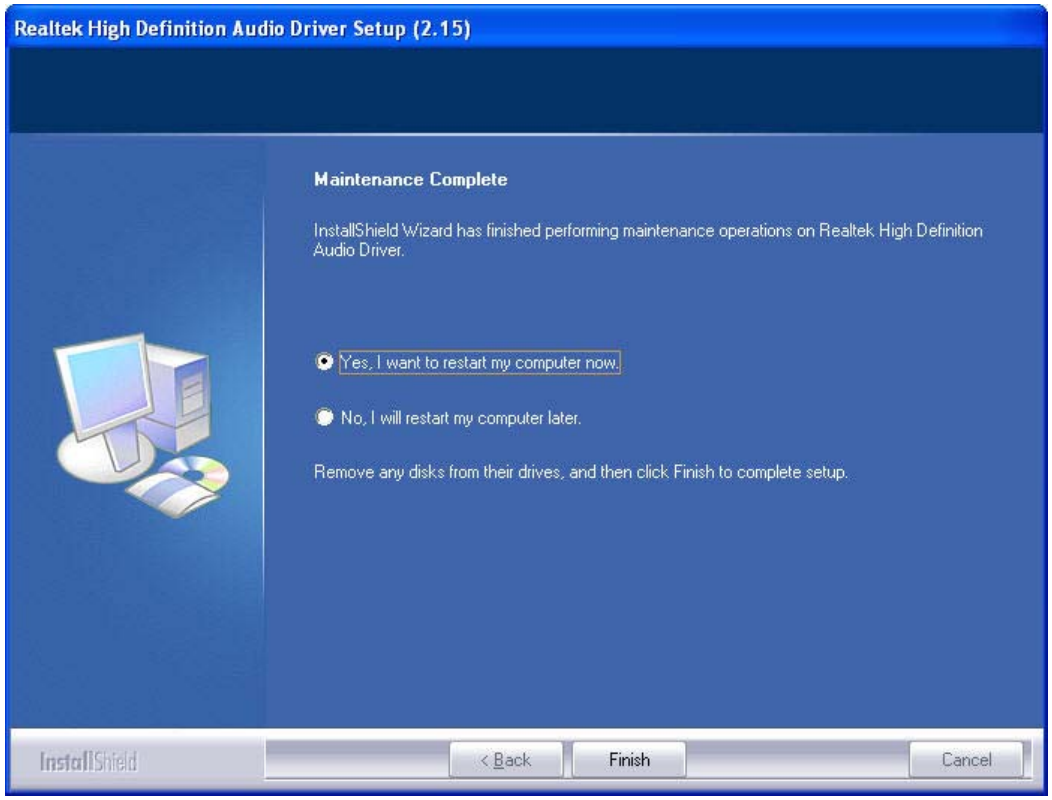
Realtek High Definition Audio Driver Setup (2.15)
Maintenance Complete
InstallShield Wizard has finished performing maintenance operations on Realtek High Definition Audio Driver.
Yes, I want to restart my computer now.
No, I will restart my computer later.
Remove any disks from their drives, and then click Finish to complete setup.
InstallShield
< Back
Finish
Cancel

Figure 7-26: HD Audio Driver Installation Complete

Step 8: The confirmation screen shown in **Figure 7-26** allows you to restart the computer immediately after the installation is complete or to restart the computer later. For the settings to take effect the computer must be restarted. Once you have decided when to restart the computer, click the "**FINISH**" button.

7.7 Realtek AC`97 Audio Driver (ALC665) Installation

To install the Realtek AC `97 audio driver, please follow the steps below.

7.7.1 BIOS Setup

Step 1: Enter the BIOS setup. To do this, reboot the system and press **DEL** during POST.

Step 2: Go to the Southbridge Configuration menu. Set the **Audio Controller** option to [AC`97]. See **Section** Error! Reference source not found. for details.

Step 3: Press **F10** to save the changes and exit the BIOS setup. The system reboots.

7.7.2 Driver Installation

Step 1: Insert the CD that came with the package.

Step 2: From the main driver menu, navigate to **X:\4-AUDIO\AC-KIT08R\Windows** (or other appropriate OS). **X:** represents the system CD drive. A new window appears showing the folder contents (**Figure 7-27**).

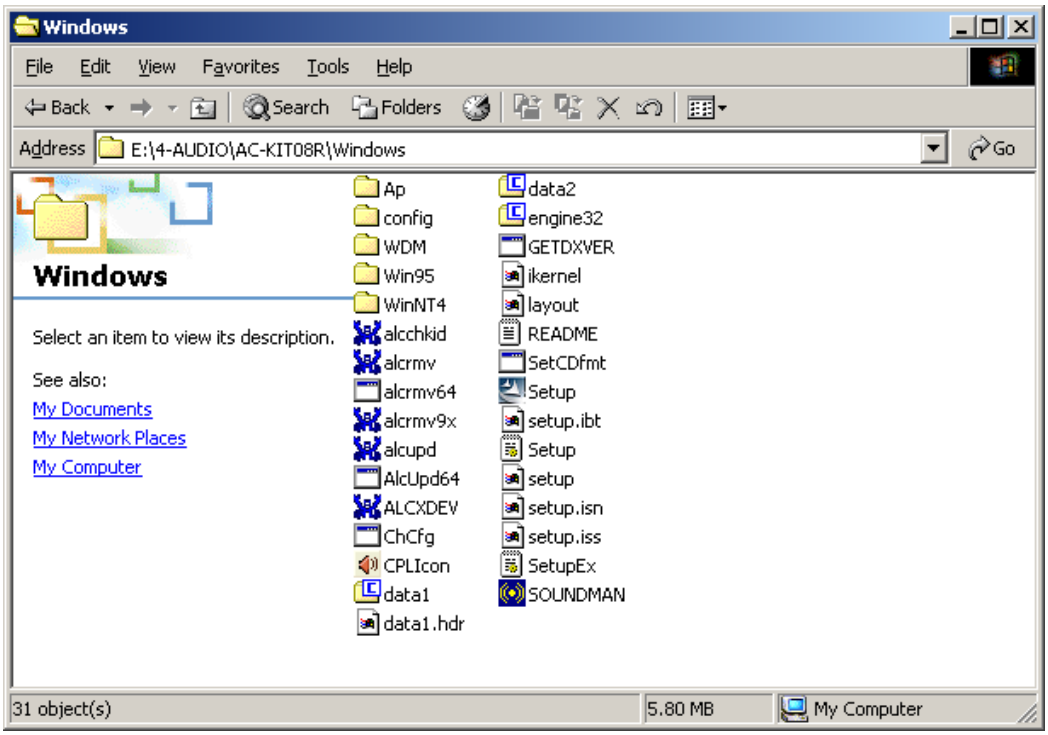

Figure 7-27: CD 4-AUDIO\AC-KIT08R\Windows Folder

Step 3: Double-click the **Setup.exe** file to begin the driver installation process.

Step 4: Once you double click the **Setup** icon, the install shield wizard for the audio driver starts. See **Figure 7-28.**

Figure 7-28: AC`97 Audio Driver Install Shield Wizard Starting

Step 5: The Realtek Audio Setup prepares the install shield to guide you through the rest of the setup process. See **Figure 7-25**.

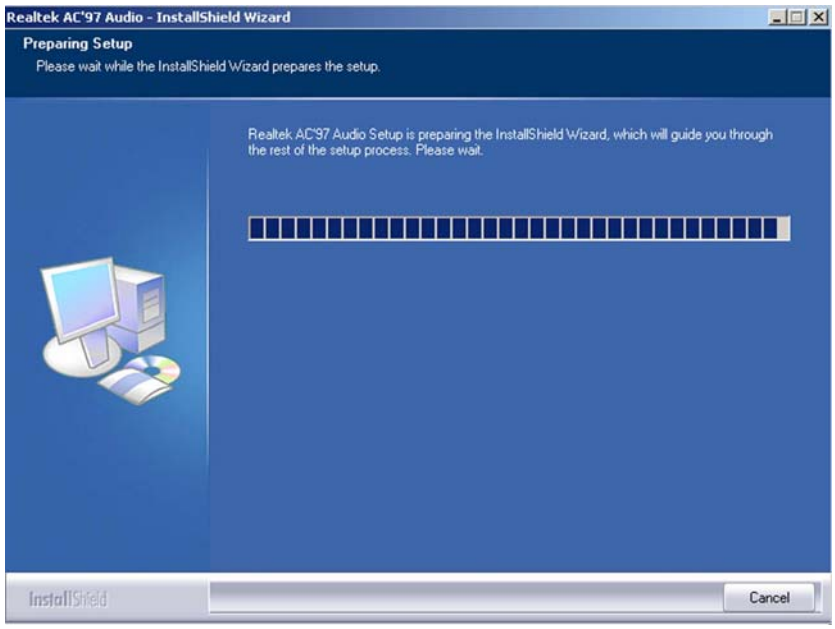
Realtek AC'97 Audio - InstallShield Wizard
Preparing Setup
Please wait while the InstallShield Wizard prepares the setup.
Realtek AC'97 Audio Setup is preparing the InstallShield Wizard, which will guide you through the rest of the setup process. Please wait.
InstallShield
Cancel

Figure 7-29: AC`97 Audio Driver Setup Preparation

Step 6: After the install shield is prepared, the welcome screen shown in **Figure 7-30** appears. To continue the installation process, click the "**NEXT**" button. The install shield starts to configure the new software as shown in **Figure 7-31**.

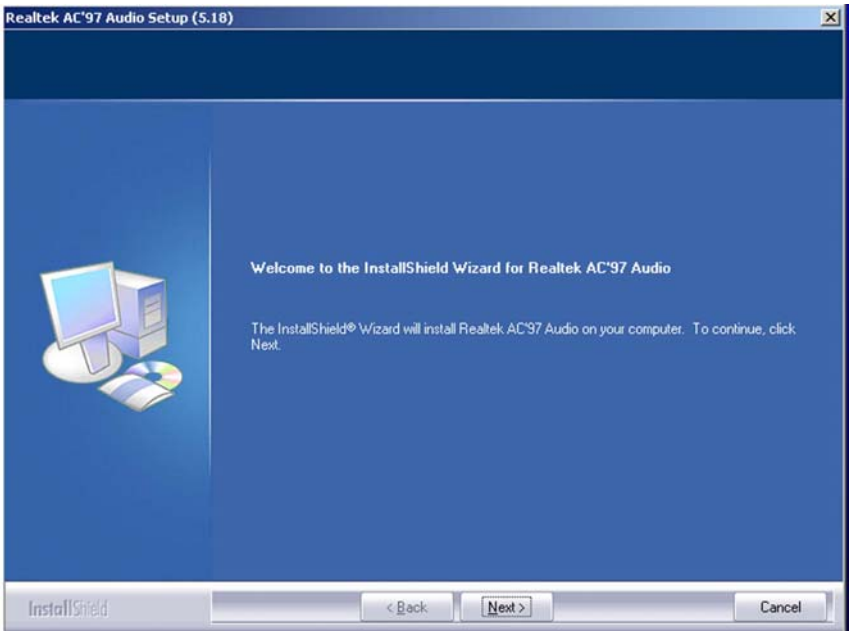
Realtek AC'97 Audio Setup (5.18)
Welcome to the InstallShield Wizard for Realtek AC'97 Audio
The InstallShield® Wizard will install Realtek AC'97 Audio on your computer. To continue, click Next.
InstallShield
< Back
Next >
Cancel

Figure 7-30: AC`97 Audio Driver Welcome Screen

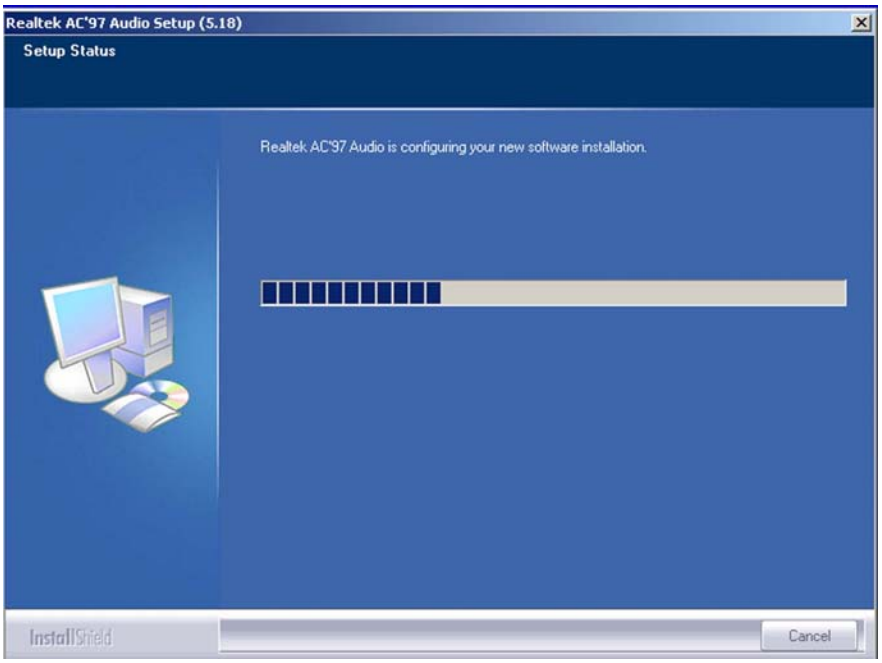

Figure 7-31: AC`97 Audio Driver Software Configuration

Step 7: At this stage the "**Digital Signal Not Found**" screen appears (**Figure 7-32**). To continue the installation process, click the "**YES**" button.

Digital Signature Not Found
The Microsoft digital signature affirms that software has been tested with Windows and that the software has not been altered since it was tested.
The software you are about to install does not contain a Microsoft digital signature. Therefore, there is no guarantee that this software works correctly with Windows.
Realtek AC'97 Audio
If you want to search for Microsoft digitally signed software, visit the Windows Update Web site at http://windowsupdate.microsoft.com to see if one is available.
Do you want to continue the installation?
Yes
No
More Info

Figure 7-32: AC`97 Audio Driver Digital Signal

Step 8: After clicking the "**YES**" button in **Figure 7-32**, the installation of the driver begins (**Figure 7-33**).

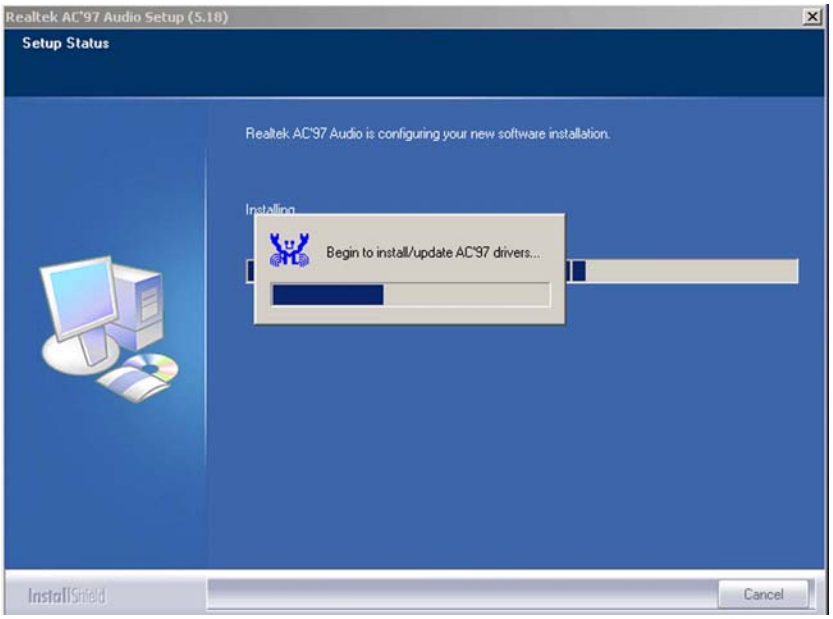

Figure 7-33: AC`97 Audio Driver Installation Begins

Step 9: After the driver installation process is complete, a confirmation screen shown in **Figure 7-34** appears.

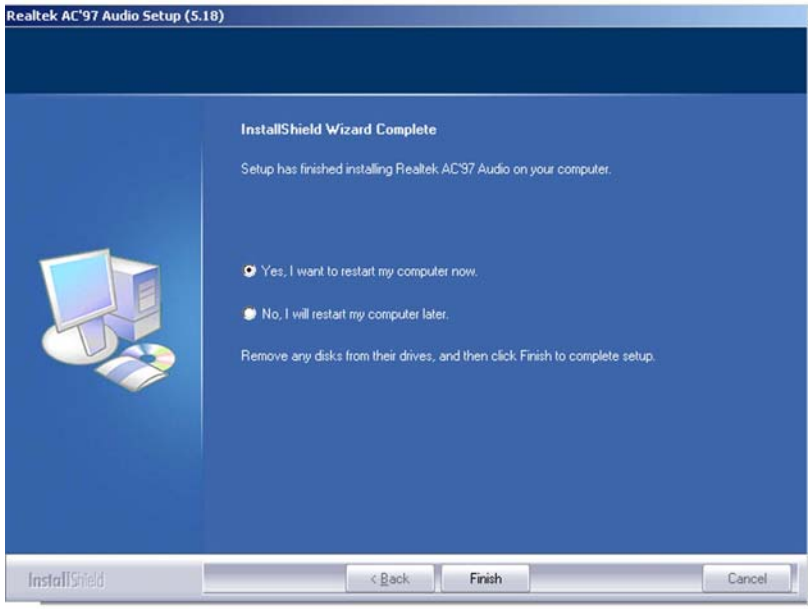
Realtek AC'97 Audio Setup (5.18)
InstallShield Wizard Complete
Setup has finished installing Realtek AC'97 Audio on your computer.
Yes, I want to restart my computer now.
No, I will restart my computer later.
Remove any disks from their drives, and then click Finish to complete setup.
InstallShield
< Back
Finish
Cancel

Figure 7-34: AC`97 Audio Driver Installation Complete

Step 10: The confirmation screen shown in **Figure 7-34** allows you to restart the computer immediately after the installation is complete or to restart the computer later. For the settings to take effect the computer must be restarted. Once you have decided when to restart the computer, click the "**FINISH**" button.

Appendix

A

Terminology

AC ’97	Audio Codec 97 (AC’97) refers to a codec standard developed by Intel® in 1997.
ACPI	Advanced Configuration and Power Interface (ACPI) is an OS-directed configuration, power management, and thermal management interface.
AHCI	Advanced Host Controller Interface (AHCI) is a SATA Host controller register-level interface.
AMD64	AMD64 is the name for the 64-bit instruction set on AMD architecture. AMD64 supports Intel’s x86 instruction architecture and is almost identical to Intel’s x86-64 architecture.
ATA	The Advanced Technology Attachment (ATA) interface connects storage devices including hard disks and CD-ROM drives to a computer.
APM	The Advanced Power Management (APM) application program interface (API) enables the inclusion of power management in the BIOS.
ARMD	An ATAPI Removable Media Device (ARMD) is any ATAPI device that supports removable media, besides CD and DVD drives.
ASKIR	Amplitude Shift Keyed Infrared (ASKIR) is a form of modulation that represents a digital signal by varying the amplitude (“volume”) of the signal. A low amplitude signal represents a binary 0, while a high amplitude signal represents a binary 1.
BIOS	The Basic Input/Output System (BIOS) is firmware that is first run when the computer is turned on and can be configured by the end user
CODEC	The Compressor-Decompressor (CODEC) encodes and decodes digital audio data on the system.
CompactFlash®	CompactFlash® is a solid-state storage device. CompactFlash® devices use flash memory in a standard size enclosure. Type II is thicker than Type I, but a Type II slot can support both types.

CMOS	Complimentary metal-oxide-conductor is an integrated circuit used in chips like static RAM and microprocessors.
COM	COM refers to serial ports. Serial ports offer serial communication to expansion devices. The serial port on a personal computer is usually a male DB-9 connector.
DAC	The Digital-to-Analog Converter (DAC) converts digital signals to analog signals.
DDR	Double Data Rate refers to a data bus transferring data on both the rising and falling edges of the clock signal.
DMA	Direct Memory Access (DMA) enables some peripheral devices to bypass the system processor and communicate directly with the system memory.
DIMM	Dual Inline Memory Modules are a type of RAM that offer a 64-bit data bus and have separate electrical contacts on each side of the module.
DIO	The digital inputs and digital outputs are general control signals that control the on/off circuit of external devices or TTL devices. Data can be read or written to the selected address to enable the DIO functions.
EHCI	The Enhanced Host Controller Interface (EHCI) specification is a register-level interface description for USB 2.0 Host Controllers.
EIDE	Enhanced IDE (EIDE) is a newer IDE interface standard that has data transfer rates between 4.0 MBps and 16.6 MBps.
EIST	Enhanced Intel® SpeedStep Technology (EIST) allows users to modify the power consumption levels and processor performance through application software. The application software changes the bus-to-core frequency ratio and the processor core voltage.
FSB	The Front Side Bus (FSB) is the bi-directional communication channel between the processor and the Northbridge chipset.

GbE	Gigabit Ethernet (GbE) is an Ethernet version that transfers data at 1.0 Gbps and complies with the IEEE 802.3-2005 standard.
GPIO	General purpose input
HDD	Hard disk drive (HDD) is a type of magnetic, non-volatile computer storage device that stores digitally encoded data.
ICH	The Input/Ouput Controll Hub (ICH) is an Intel® Southbridge chipset.
IrDA	Infrared Data Association (IrDA) specify infrared data transmission protocols used to enable electronic devices to wirelessly communicate with each other.
L1 Cache	The Level 1 Cache (L1 Cache) is a small memory cache built into the system processor.
L2 Cache	The Level 2 Cache (L2 Cache) is an external processor memory cache.
LCD	Liquid crystal display (LCD) is a flat, low-power display device that consists of two polarizing plates with a liquid crystal panel in between.
LVDS	Low-voltage differential signaling (LVDS) is a dual-wire, high-speed differential electrical signaling system commonly used to connect LCD displays to a computer.
MAC	The Media Access Control (MAC) protocol enables several terminals or network nodes to communicate in a LAN, or other multipoint networks.
PCIe	PCI Express (PCIe) is a communications bus that uses dual data lines for full-duplex (two-way) serial (point-to-point) communications between the SBC components and/or expansion cards and the SBC chipsets. Each line has a 2.5 Gbps data transmission rate and a 250 MBps sustained data transfer rate.
POST	The Power-on Self Test (POST) is the pre-boot actions the system performs when the system is turned-on.

QVGA	Quarter Video Graphics Array (QVGA) refers to a display with a resolution of 320 x 240 pixels.
RAM	Random Access Memory (RAM) is volatile memory that loses data when power is lost. RAM has very fast data transfer rates compared to other storage like hard drives.
SATA	Serial ATA (SATA) is a serial communications bus designed for data transfers between storage devices and the computer chipsets. The SATA bus has transfer speeds up to 1.5 Gbps and the SATA II bus has data transfer speeds of up to 3.0 Gbps.
S.M.A.R.T	Self Monitoring Analysis and Reporting Technology (S.M.A.R.T) refers to automatic status checking technology implemented on hard disk drives.
UART	Universal Asynchronous Receiver-transmitter (UART) is responsible for asynchronous communications on the system and manages the system's serial communication (COM) ports.
UHCI	The Universal Host Controller Interface (UHCI) specification is a register-level interface description for USB 1.1 Host Controllers.
USB	The Universal Serial Bus (USB) is an external bus standard for interfacing devices. USB 1.1 supports 12Mbps data transfer rates, while USB 2.0 supports 480Mbps data transfer rates.
VGA	The Video Graphics Array (VGA) is a graphics display system developed by IBM.

THIS PAGE IS INTENTIONALLY LEFT BLANK

Appendix

B

BIOS Options

- System Overview 110
- System Time [xx:xx:xx] 111
- System Date [xx/xx/xx] 111
- ATA/IDE Configurations [Compatible] 114
- Legacy IDE Channels [PATA Pri, SATA Sec] 115
- IDE Master and IDE Slave 115
- Auto-Detected Drive Parameters 116
- Type [Auto] 117
- ZIP 117
- LS-120 117
- LBA/Large Mode [Auto] 118
- Block (Multi Sector Transfer) [Auto] 118
- PIO Mode [Auto] 118
- DMA Mode [Auto] 119
- S.M.A.R.T [Auto] 120
- 32Bit Data Transfer [Enabled] 120
- Serial Port1 Address [3F8/IRQ4] 122
- Serial Port1 Mode [Normal] 122
- Serial Port2 Address [2F8/IRQ3] 122
- Serial Port2 Mode [Normal] 123
- Parallel Port Address [Disabled] 123
- Parallel Port Mode [Normal] 123
- Parallel Port IRQ [IRQ7] 124
- CPU FAN Mode Setting [Full On Mode] 125
- CPU Temp. Limit of OFF [000] 126
- CPU Temp. Limit of Start [020] 127
- CPU Temp. Limit of Full [080] 127
- CPU Fan Start PWM [070] 128
- Slope PWM 1 [1 PWM] 128
- CPU Fan PWM Control [070] 129
- Hardware Health Monitoring 129
- ACPI Aware O/S [Yes] 130
- Suspend Mode [S1(POS)] 131
- Repost Video on S3 Resume [No] 132

- Power Management/APM [Enabled] 133
- Restore on AC Power Loss [Power Off] 134
- Power Button Mode [On/Off] 134
- Resume on Ring [Disabled] 134
- Resume on PME# [Disabled] 134
- Resume On RTC Alarm [Disabled] 135
- RTC Alarm Date (Days) 135
- System Time 135
- Power Supply Mode [ATX] 135
- MPS Revision [1.4] 136
- Remote Access [Disabled] 137
- Serial Port Number 137
- Serial Port Mode 138
- Flow Control 138
- Redirection after BIOS POST 138
- Terminal Type 138
- VT-UTF8 Combo Key Support 138
- Serial Port Number [COM1] 138
- Base Address, IRQ [3F8h,4] 138
- Serial Port Mode [115200 8,n,1] 138
- Flow Control [None] 139
- Redirection After BIOS POST [Always] 139
- Terminal Type [ANSI] 139
- VT-UTF8 Combo Key Support [Disabled] 140
- Sredir Memory Display Delay [Disabled] 140
- USB Function [8 USB ports] 141
- USB 2.0 Controller [Enabled] 142
- Legacy USB Support [Enabled] 142
- USB 2.0 Controller Mode [HiSpeed] 142
- BIOS EHCI Handoff 142
- Clear NVRAM [No] 145
- Plug & Play O/S [No] 145
- PCI Latency Timer [64] 146
- Allocate IRQ to PCI VGA [Yes] 146
- Palette Snooping [Disabled] 146

- PCI IDE BusMaster [Disabled] 147
- OffBoard PCI/ISA IDE Card [Auto] 147
- IRQ# [Available] 148
- DMA Channel# [Available] 149
- Reserved Memory Size [Disabled] 149
- Quick Boot [Enabled] 151
- Quiet Boot [Disabled] 151
- AddOn ROM Display Mode [Force BIOS] 152
- Bootup Num-Lock [On] 152
- PS/2 Mouse Support [Enabled] 152
- LAN Boot ROM Support [Disabled] 153
- Change Supervisor Password 157
- Change User Password 158
- DRAM Frequency [Auto] 160
- Configure DRAM Timing by SPD [Enabled] 161
- DRAM CAS# Latency [6 161
- DRAM RAS# to CAS# Delay [6 DRAM Clocks] 162
- DRAM RAS# Precharge [3 DRAM Clocks] 162
- DRAM RAS# Activate to Precha [15 DRAM Clocks] 162
- Memory Hole [Disabled] 163
- Boots Graphics Adapter [PEG/PCI] 164
- Internal Graphics Mode Select [Enable, 8MB] 164
- PEG Port [Enabled] 164
- PEG Force X1 [Disabled] 164
- DVMT Mode Select [DVMT Mode] 165
- DVMT/FIXED Memory 166
- Boot Display Device 166
- Flat Panel Type [640x480 18bit LVDS] 166
- Audio Controller [AC`97 Audio] 168
- PCIE Port n [Enabled] 168
- Save Changes and Exit 169
- Discard Changes and Exit 170
- Discard Changes 170
- Load Optimal Defaults 170
- Load Failsafe Defaults 170

Appendix

C

DIO Interface

C.1 DIO Interface Introduction

The DIO connector on the PICOe-9452 is interfaced to GIO ports on the iTE Super I/O chipset. The DIO has both 4-bit digital inputs and 4-bit digital outputs. The digital inputs and digital outputs are generally control signals that control the on/off circuit of external devices or TTL devices. Data can be read or written to the selected address to enable the DIO functions.

NOTE:

For further information, please refer to the datasheet for the iTE Super I/O chipset.

C.2 DIO Connector Pinouts

The following table describes how the DIO connector pins are connected to the Super I/O GPIO port 1.

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	2	VCC
3	Output 3	4	Output 2
5	Output 1	6	Output 0
7	Input 3	8	Input 2
9	Input 1	10	Input 0

C.3 Assembly Language Samples

C.3.1 Enable the DIO Input Function

The BIOS interrupt call INT 15H controls the digital I/O. An assembly program to enable digital I/O input functions is listed below.

MOV	**AX, 6F08H**	Sets the digital port as input
INT	**15H**	Initiates the INT 15H BIOS call

C.3.2 Enable the DIO Output Function

The BIOS interrupt call INT 15H controls the digital I/O. An assembly program to enable digital I/O output functions is listed below.

MOV	**AX, 6F09H**	Sets the digital port as output
MOV	**BL, 09H**	
INT	**15H**	Initiates the INT 15H BIOS call

THIS PAGE IS INTENTIONALLY LEFT BLANK

Appendix

D

Watchdog Timer

NOTE:

The following discussion applies to DOS environment. IEI support is contacted or the IEI website visited for specific drivers for more sophisticated operating systems, e.g., Windows and Linux.

The Watchdog Timer is provided to ensure that standalone systems can always recover from catastrophic conditions that cause the CPU to crash. This condition may have occurred by external EMI or a software bug. When the CPU stops working correctly, Watchdog Timer either performs a hardware reset (cold boot) or a Non-Maskable Interrupt (NMI) to bring the system back to a known state.

A BIOS function call (INT 15H) is used to control the Watchdog Timer:

INT 15H:

AH – 6FH Sub-function:	
AL – 2:	Sets the Watchdog Timer's period.
BL:	Time-out value (Its unit-second is dependent on the item "Watchdog Timer unit select" in CMOS setup).

Table D-1: AH-6FH Sub-function

Call sub-function 2 to set the time-out period of Watchdog Timer first. If the time-out value is not zero, the Watchdog Timer starts counting down. While the timer value reaches zero, the system resets. To ensure that this reset condition does not occur, calling sub-function 2 must periodically refresh the Watchdog Timer. However, the Watchdog timer is disabled if the time-out value is set to zero.

A tolerance of at least 10% must be maintained to avoid unknown routines within the operating system (DOS), such as disk I/O that can be very time-consuming.

NOTE:

When exiting a program it is necessary to disable the Watchdog Timer, otherwise the system resets.

Example program:

```
; INITIAL TIMER PERIOD COUNTER
;
W_LOOP:

        MOV     AX, 6F02H       ;setting the time-out value
        MOV     BL, 30          ;time-out value is 48 seconds
        INT      15H
 ;
; ADD THE APPLICATION PROGRAM HERE
;
        CMP      EXIT_AP, 1     ;is the application over?
        JNE      W_LOOP         ;No, restart the application

        MOV     AX, 6F02H       ;disable Watchdog Timer
        MOV     BL, 0           ;
        INT      15H
;
; EXIT ;
```

THIS PAGE IS INTENTIONALLY LEFT BLANK

Appendix

E

Address Mapping

E.1 Address Map

I/O address Range	Description
000-01F	DMA Controller
020-021	Interrupt Controller
040-043	System time
060-06F	Keyboard Controller
070-07F	System CMOS/Real time Clock
080-09F	DMA Controller
0A0-0A1	Interrupt Controller
0C0-0DF	DMA Controller
0F0-0FF	Numeric data processor
1F0-1F7	Primary IDE Channel
2F8-2FF	Serial Port 2 (COM2)
378-37F	Parallel Printer Port 1 (LPT1)
3B0-3BB	Intel Graphics Controller
3C0-3DF	Intel Graphics Controller
3F6-3F6	Primary IDE Channel
3F7-3F7	Standard floppy disk controller
3F8-3FF	Serial Port 1 (COM1)

Table E-1: IO Address Map

E.2 1st MB Memory Address Map

Memory address	Description
00000-9FFFF	System memory
A0000-BFFFF	VGA buffer
F0000-FFFFF	System BIOS
1000000-	Extend BIOS

Table E-2: 1st MB Memory Address Map

E.3 IRQ Mapping Table

IRQ0	System Timer	IRQ8	RTC clock
IRQ1	Keyboard	IRQ9	ACPI
IRQ2	Available	IRQ10	LAN
IRQ3	COM2	IRQ11	LAN/USB2.0/SATA
IRQ4	COM1	IRQ12	PS/2 mouse
IRQ5	SMBus Controller	IRQ13	FPU
IRQ6	FDC	IRQ14	Primary IDE
IRQ7	Available	IRQ15	Secondary IDE

Table E-3: IRQ Mapping Table

E.4 DMA Channel Assignments

Channel	Function
0	Available
1	Available
2	Floppy disk (8-bit transfer)
3	Available
4	Cascade for DMA controller 1
5	Available
6	Available
7	Available

Table E-4: IRQ Mapping Table

THIS PAGE IS INTENTIONALLY LEFT BLANK

Appendix

F

Hazardous Materials Disclosure

F.1 Hazardous Material Disclosure Table for IPB Products Certified as RoHS Compliant Under 2002/95/EC Without Mercury

The details provided in this appendix are to ensure that the product is compliant with the Peoples Republic of China (China) RoHS standards. The table below acknowledges the presences of small quantities of certain materials in the product, and is applicable to China RoHS only.

A label will be placed on each product to indicate the estimated “Environmentally Friendly Use Period” (EFUP). This is an estimate of the number of years that these substances would “not leak out or undergo abrupt change.” This product may contain replaceable sub-assemblies/components which have a shorter EFUP such as batteries and lamps. These components will be separately marked.

Please refer to the table on the next page.

Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CR(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Housing	x	O	O	O	O	x
Display	X	O	O	O	O	X
Printed Circuit Board	X	O	O	O	O	X
Metal Fasteners	X	O	O	O	O	O
Cable Assembly	X	O	O	O	O	X
Fan Assembly	X	O	O	O	O	X
Power Supply Assemblies	X	O	O	O	O	X
Battery	O	O	O	O	O	O

O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in SJ/T11363-2006

X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in SJ/T11363-2006

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有"环境友好使用期限"的标签，此期限是估算这些物质"不会有泄漏或突变"的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
壳体	X	O	O	O	O	X
显示	X	O	O	O	O	X
印刷电路板	X	O	O	O	O	X
金属螺帽	X	O	O	O	O	O
电缆组装	X	O	O	O	O	X
风扇组装	X	O	O	O	O	X
电力供应组装	X	O	O	O	O	X
电池	O	O	O	O	O	O

O: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。

Index

+

+12V ATX power supply connector.... 43
location and pinouts 43

A

ACPI..... 130, 131
Advanced Power Management 133
airflow 88
anti-static precautions 34, 72
anti-static pad 34, 72
anti-static wristband 34, 72
handling..... 34, 72
self-grounding 34, 72
ASKIR interface..... 56
ATA flat cable..... 91, 92
ATX power supply 46
Audio Codec ’97 18
audio connector..... 4, 44
location and pinouts 44

B

backlight inverter connector 45
location and pinouts 45
backplane power connector..... 4
backplane to mainboard connector
location and pinouts 46
BIOS ... 24, 108, 109, 110, 111, 112, 113, 114, 115, 116, 121, 124, 125, 129, 130, 131, 132, 133, 135, 136, 137, 139, 140, 141, 143, 145, 150, 151, 152, 153, 154, 156, 157, 158, 159, 160, 167, 168, 169
BIOS chipset 23

C

cables 89
dual port USB 100
dual RS-232 cable..... 98
keyboard/mouse Y-cable 94
LPT 96
parallel port 96
CF card..... 47, 81
installation..... 81
location and pinouts 47
setup jumper..... 83
socket 47
CF card setup jumper 83
location..... 83
settings 83
CF Card setup jumper 5
chassis 88
installation..... 88
chipset 14
northbridge..... 14
chipset driver..... 174, 179
clear CMOS jumper 5, 84
location..... 85
settings 85
CMOS 84
clear CMOS jumper 84
codec 18
AC’97..... 18
compact flash connector 4
CompactFlash 47
socket location and pinouts..... 47

connectors, pinouts and location
+12V ATX power supply 43
audio..... 44
backlight inverter 45
backplane to mainboard inverter..... 46
COM 2 serial port 63
CompactFlash 47
digital input/output..... 50
fan 51
IDE..... 54
infrared interface..... 56
keyboard/mouse 57
LVDS LCD (30-pin) 58
parallel port 60
serial port (COM 2)..... 63
USB (internal)..... 64
cooling..... 88
airflow..... 88
cooling fan 51, 78, 79
cooling kit installation..... 78
CPU
cooling fan 78
heat sink 78
installation..... 75
CPU..... 13
compatible..... 13
CRT monitor 105

D

DB-15 connector..... 105
digital input/output connector..... 4, 50
location and pinouts 50
dimensions 10
board 10
external peripheral interface connector panel.....11
DIMM 80
installation..... 80
specifcations..... 80
DIO connector..... 4
dual port USB cable..... 100

E

electrostatic discharge..... 34, 72
Enhanced Hardware Monitor..... 25
Ethernet..... 102
RJ-45 cable connector..... 102
RJ-45 connector 5
Ethernet connectors..... 66
Ethernet controllers..... 66
external indicators..... 53
external peripheral interface 102
connection..... 102
connectors 102
external switches..... 53

F

fan connector..... 4, 51
location and pinouts 51
fan speed controller..... 26
FDD 121
front panel connector 4, 53
location and pinouts 53
front side bus..... 2
FSB 113

H

hard disk drives
SATA 61
HDD LED 53
heat sink 78

I

IDE connector, 40-pin 4
IDE connector, 44-pin 54
location and pinouts 54
IDE device 90, 91, 92, 93
ATA flat cable 91, 92
connector 90, 91, 93
IDE flat cable 90
IDE flat cable 90
IDE interface 19
infrared interface 56
Amplitude Shift Key Infrared 56
ASKIR 56
Serial Infrared 56
SIR 56
infrared interface connector 4, 56
location and pinouts 56
installation checklist 74
inverter connector 4
IrDA 123

J

jumper 82
CF card setup 83
clear CMOS 84
jumper configuration 82
LVDS voltage selection 86
PCIe interface setup 87

K

keyboard 57
keyboard connector 4
keyboard controller 26
keyboard/mouse 94, 95
cable connection 94
Y-cable 94
keyboard/mouse connector 57
location and pinouts 57

L

LAN connection 102
LCD display 45
backlight inverter connector 45
LED
HDD 53
power 53
LPC bus 23
LPC interface 20, 25
LPT
cable connection 96
LPT cable 96
LPT connection 96
LVDS 166, 167
LVDS connector 4
LVDS display 86
voltage select 86
LVDS LCD connector 58
location and pinouts 58
LVDS panel 58
18-bit 58
dual channel 58

single channel 58
LVDS voltage selection jumper 5, 86
location 86
settings 86

M

memory module installation 80
memory support 15
mouse 57

N

northbridge chipset 14

P

parallel port
cable connection 96
parallel port 26, 123, 124
parallel port cable 96
parallel port connection 96
parallel port connector 60
location and pinouts 60
parallel port connector 4
PCI interface 20
PCIe Interface Select jumper
location 87
settings 87
PCIe interface setup jumper 5, 87
peripheral connectors 43
peripheral device cables 89
power button 53
Power Button Mode 134
power LED 53
power supply 43
ATX power supply 43
processors 13
PS/2 cable 57

R

real time clock 22
reset button 53
RJ-45 connection 102
single connector 102
RJ-45 Ethernet connector 5, 67
RJ-45 LAN connectors 66
RS-232 ..... 63, 98
cable connection 98
COM 2 location and pinouts 63
connector location and pinouts 63
dual cable 98
serial port devices 63
RS-232 serial port devices 63

S

SATA 2
controller 22
SATA drive 99
cables 99
connection 99
power cable 99
SATA drive connector 4, 61
location and pinouts 61
SATA drives 61
serial port connector 4, 63
location and pinouts 63
serial ports 25
SIR interface 56
SiS964 167

socket 479 CPU
cooling kit 78
cooling kit installation..... 78
installation..... 75
Super I/O chipset..... 23, 24
S-video
S-video cable connection 103
S-video 103
S-video cable connection 103
system voltages 124

T

technical specifications 5
temperature 124

U

unpacking..... 34
unpacking checklist..... 35
unpacking precautions 34
USB..... 64, 65, 100, 140, 141, 142
cable
dual port 100
cable 100
cable connection..... 101
connectors 100
controller 22
devices..... 64
external USB device connection... 104
port 64
USB 1.1..... 64
USB 2.0..... 64
USB 1.1..... 64
USB 2.0..... 64, 142
USB 2.0 port 68
USB cable
dual port 100
USB connector, internal..... 4, 64
location and pinouts 64
USB device connection..... 104
single connector 104

V

VGA..... 105
VGA connector 5, 66, 69
VGA monitor 105
connection..... 105

W

warranty validation 74

Y

Y-cable 57